



TC-K808ES

SERVICE MANUAL

AEP Model

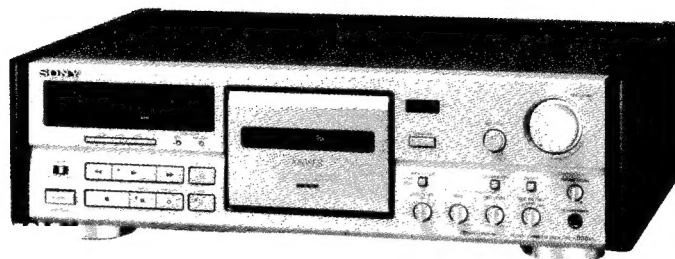

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.

Model Name Using Similar Mechanism	TC-K222ESA/ TC-K890ES
Base Unit Name	TCM-200D14

SPECIFICATIONS

Recording system 4-track 2-channel stereo
Fast winding time Approx. 90 sec. (with Sony C-60 cassette)
Bias AC bias
Heads Erasing head $\times 1$ (S&F head)
Recording head $\times 1$ (SD head)
Playback head $\times 1$ (SD head)
Motors Capstan motor $\times 1$ (direct drive linear torque BSL motor)
Reel motor $\times 1$ (DC motor)
Assist (mechanism drive) motor $\times 1$ (DC motor)

Signal-to-noise ratio (at peak level and weighted)

Cassette (Dolby NR off)	Type IV	Type II	Type I
	61 dB	59 dB	57 dB

S/N ratio improvement (approximate values)

With Dolby B NR on: 5 dB at 1 kHz; 10 dB at 5 kHz
With Dolby C NR on: 15 dB at 500 Hz; 20 dB at 1 kHz
With Dolby S NR on: 10 dB at 100 Hz; 24 dB at 1 kHz

Harmonic distortion 0.4% (with Type I, 160 nWb/m, 315 Hz, 3rd H.D.)
1.5% (with Type IV, 250 nWb/m, 315 Hz, 3rd H.D.)

Frequency response (Dolby NR off)

Type IV cassette	20 - 21,000 Hz (± 3 dB, IEC) 20 - 16,000 Hz [± 3 dB (-4 dB recording)]
Type II cassette	20 - 19,000 Hz (± 3 dB, IEC)
Type I cassette	20 - 17,000 Hz (± 3 dB, IEC)

Type IV : Sony METAL-S or ES-IV
Type II : Sony UX-S or UX
Type I : Sony HF-S

Wow and flutter $\pm 0.05\%$ W.Peak (IEC)
0.025% W.RMS (NAB)
 $\pm 0.07\%$ W.Peak (DIN)

Inputs

Line inputs (phono jacks)	Sensitivity	0.16V
	Input impedance	47 k ohms

Outputs

Line outputs (phono jacks)	Rated output level	0.5 V at a load impedance of 47 k ohms
	Load impedance	Over 10 k ohms
Headphones (stereo phone jack)	Output level	0 - 3 mW at a load impedance of 32 ohms

General

Power requirements 220 - 230 V AC, 50/60 Hz
Power consumption 26 W
Dimensions Approx. 470 \times 135 \times 350 mm (w/h/d) including projecting parts and controls
Mass Approx. 8.0 kg (17 lbs 11 oz)
Supplied accessories Audio connecting cords (2)
M3x8 screws (4)

Design and specifications are subject to change without notice.



STEREO CASSETTE DECK
SONY[®]



TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL		3
2. DISASSEMBLY		
	Cassette Holder	4
	Ornamental Plate	4
	Pinch Lever/Lever (FR2)	4
	Comparator Board/Capstan Board/Flywheel/FG Board	5
	MD Board	5
	Reel Motor Board	5
3. MECHANICAL ADJUSTMENTS		6
4. ELECTRICAL ADJUSTMENTS		9
5. DIAGRAMS		
	• IC Pin Assignment	13
5-1.	Semiconductor Lead Layouts	16
5-2.	Circuit Boards Location	16
5-3.	Block Diagram	17
5-4.	Printed Wiring Boards—Audio Section—	22
5-5.	Schematic Diagram —Audio Section—	25
5-6.	Schematic Diagram —System Control Section—	29
5-7.	Printed Wiring Boards—System Control Section—	33
5-8.	Schematic Diagram —DOLBY S Section—	37
6. EXPLODED VIEWS		
6-1.	Panel Section	39
6-2.	Chassis Section	40
6-3.	Mechanism Section-1	41
6-4.	Mechanism Section-2	42
7. ELECTRICAL PARTS LIST		43



SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1 GENERAL



Identifying the Parts

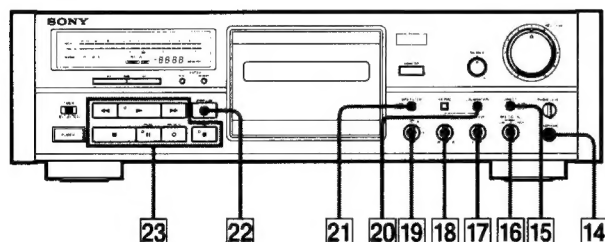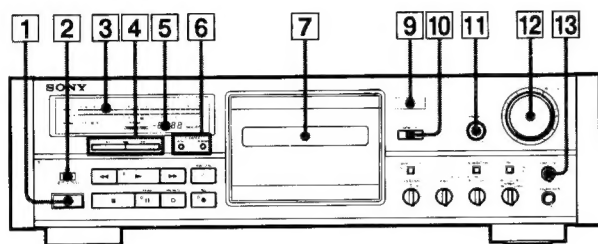







Front Panel



- 1 POWER switch
- 2 TIMER switch
- 3 Peak program meter
- 4 Automatic Music Sensor (AMS) buttons
- 5 Linear counter
- 6 COUNTER buttons
 - RESET button
 - MEMORY button
- 7 Cassette holder
- 9 Remote control sensor*
- 10 MONITOR button
- 11 BALANCE control
- 12 REC (recording) LEVEL control
- 13 PHONE (headphones) LEVEL control

* You can remotely control this cassette deck with:


- A remote commander that came with a Sony amplifier or receiver if it has the  mark and cassette deck control capability.
- An optional Sony remote commander with the  mark and cassette deck control capability.

- 14 HEADPHONES jack (stereo phone jack)
- 15 DIRECT button
- 16 REC EQ CAL (recording equalizing calibration) switch (LOW, NORMAL, HIGH)
- 17 REC (recording) LEVEL control for calibration
- 18 BIAS control
- 19 DOLBY NR (noise reduction) switch
- 20 CALIBRATION button
- 21 MPX FILTER button
- 22  OPEN/CLOSE button
- 23 Tape operation buttons and indicators
 -  (rewind) button
 -  (play) button and indicator
 -  (fast-forward) button
 -  (stop) button
 -  PAUSE button and indicator
 -  REC MUTE (record muting) button
 -  REC (recording) button and indicator

SECTION 2 DISASSEMBLY


NOTE: Follow the disassembly procedure in the numerical order given.

CASSETTE HOLDER

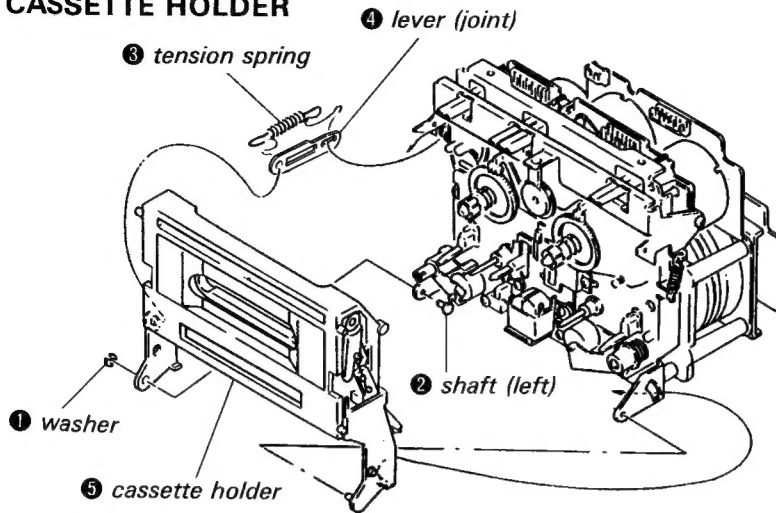


ORNAMENTAL PLATE


② Push lever (lifter) in the direction of arrow and remove ornamental plate.

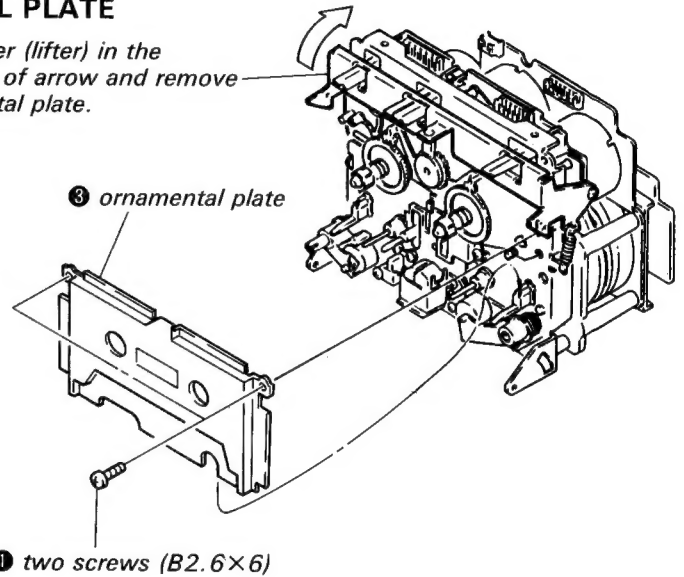


PINCH LEVER/LEVER (FR2)

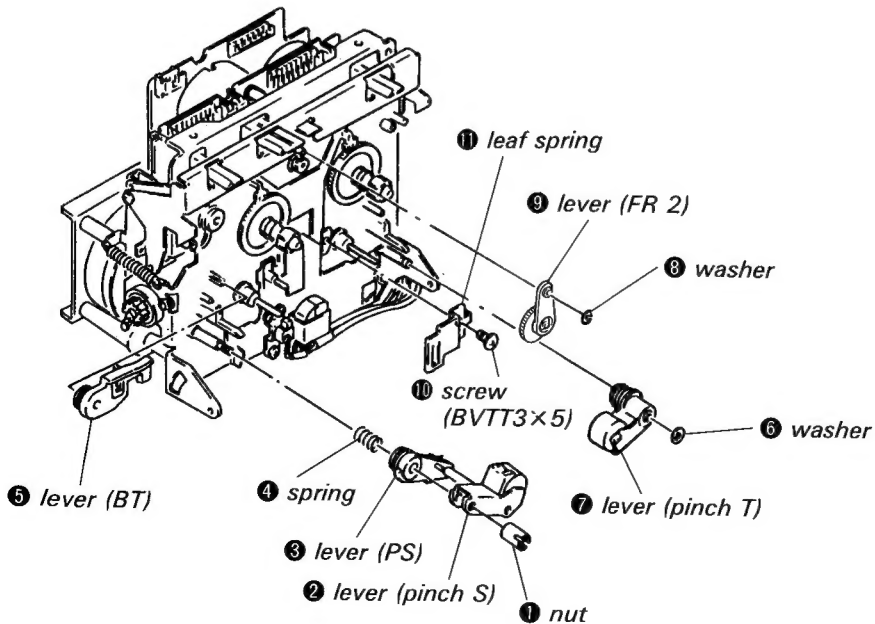


COMPARATOR BOARD/CAPSTAN BOARD/FLYWHEEL/FG BOARD

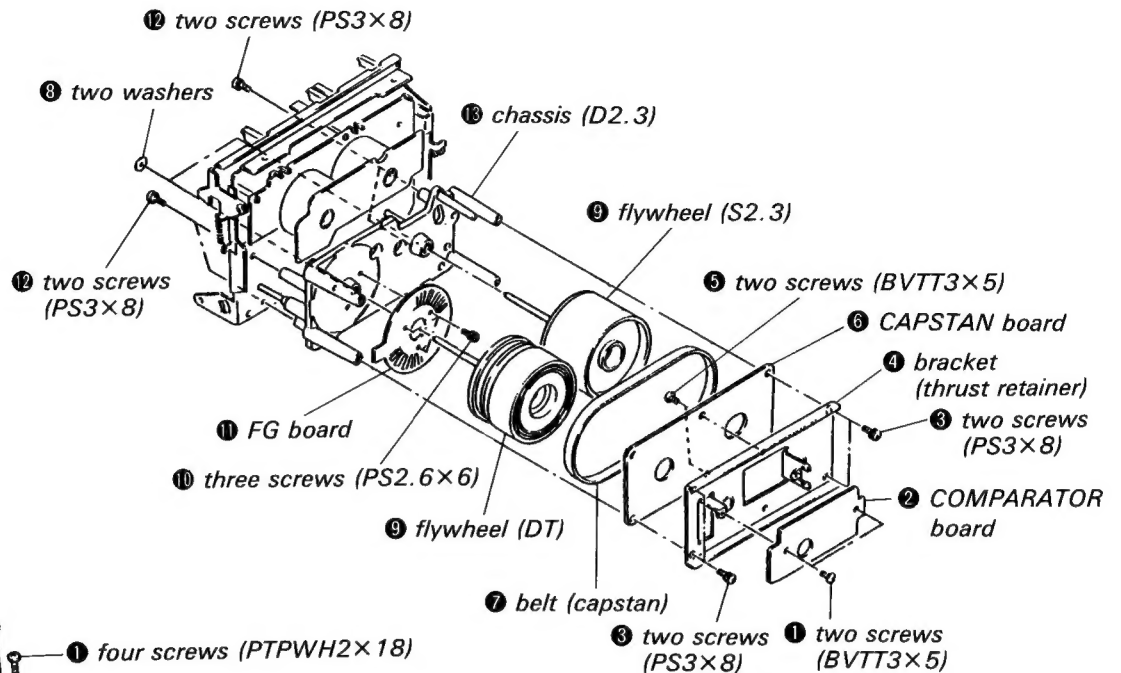

MD BOARD

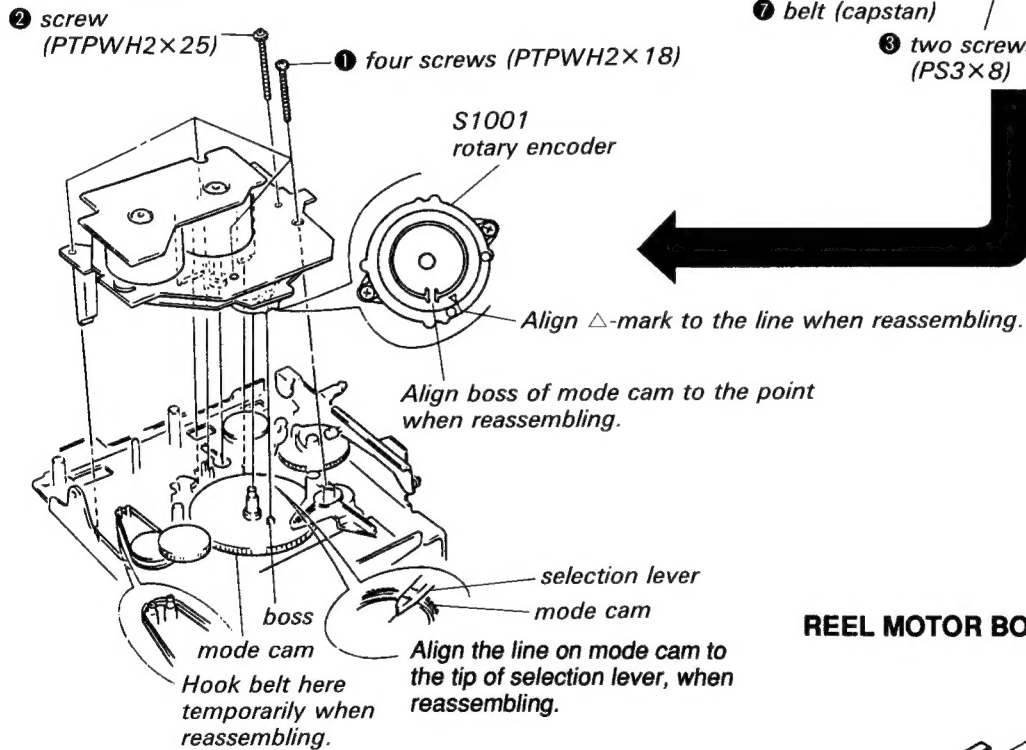

REEL MOTOR BOARD

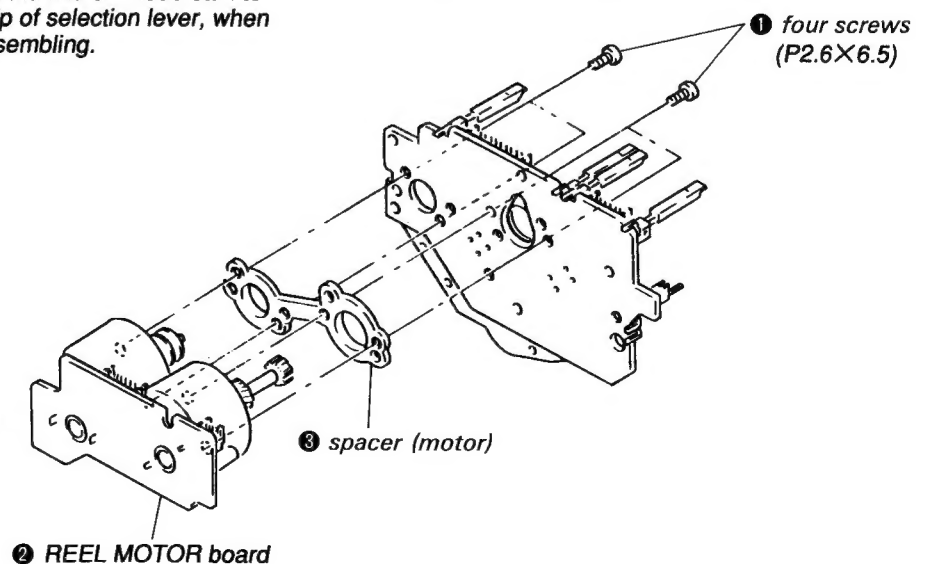


SECTION 3 MECHANICAL ADJUSTMENTS

• Refer to page 8 for Adjustment Location.

PRECAUTIONS

1. Clean the following parts with an alcohol-moistened swab.
(tape sliding surface)
2. Demagnetize the record/playback heads, erase heads and the capstan using the head demagnetizer.
3. Do not use a magnetized screw driver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustment should be performed with the rated power supply voltage unless otherwise noted.

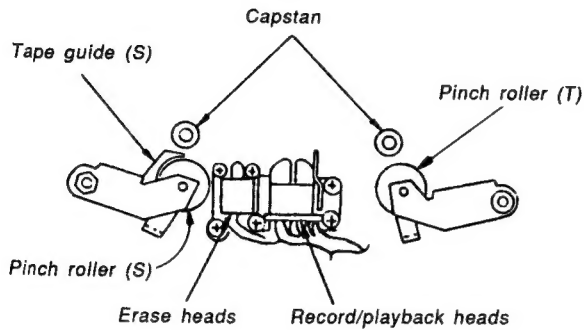

Tape Passing Adjustment

Note: For the following adjustments, use the jig as far as possible. Although the following methods are operable without using the jig, precise adjustment may not be completed, for example no compatibility to other decks is available even if self recording and playback is OK.


In these adjustments, either the pinch roller guide in the S side or the record/playback head guide is referred to for tape pass. Therefore, do not unnecessarily rotate the adjustment screws including those of the erase heads unless any one is replaced. When 2 or more heads or pinch rollers out of these 2 heads and pinch rollers are to be adjusted or replaced, use the jig for the adjustments or replace one at first and then take complete tape pass and then replace the second one.

Head height adjusting jig : apex

Preparation:

- Mirror cassette CQ009C 8-909-708-01
(Or CQ012C 8-909-708-02)

If it is not available, cut a part of the half of a 120 minute cassette tape and use.

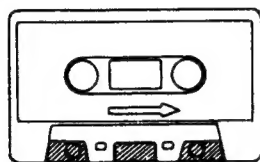


Cut and use.

- Plus screw driver
Medium sizeApply to the head adjusting screw.
- Minus screw driver
Large sizeApply to the pinch roller adjusting screw in the S side.
- Pen light
- WS-48B (3kHz, 0dB)
- P-4-A100 (10kHz, -10dB)

Definition:

The following view relates to record/playback heads.

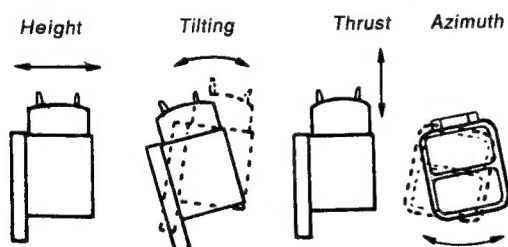

For the locations of the adjusting screws, see the view "adjustment location" in the lower right corner of Page 8.

Procedure:

Pinch roller in the S side

Note: It should be adjusted only when the pinch roller in the S side is replaced.


1. Mount the mirror cassette and set the equipment to playback state.
2. Check that the tape is curled in the pinch roller guide or the guide of the record/playback heads.

If curled, remedy it by rotating the tape curl adjusting screw ①. At the same time, check that the tape runs near the center part of the erase heads.

Record/playback heads

Note: The heads should be adjusted only when the record/playback head is replaced.

1. Mount the mirror cassette and set the equipment to playback state.
2. (Height adjustment) Check that the tape is curled in the tape guide of the heads. If curled, rotate screws ①, ② and ③ in the same angle and move the entire heads parallel. Check the mirror cassette where there is curling and, when curling exists in the lower side (actually in the deep side), tighten all screws slightly. If curled in the upper (your) side, loosen them.


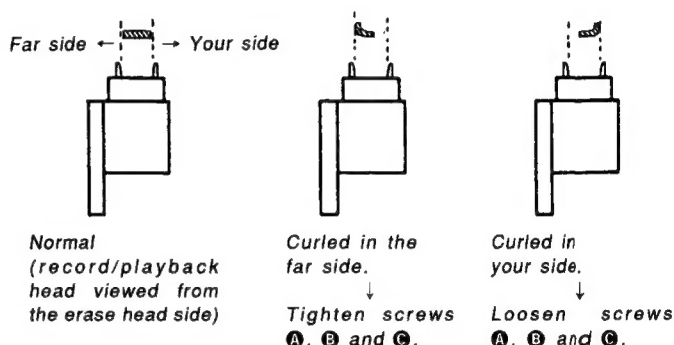


3. (Adjustment of tilting) Adjust back tension to 0 still in playback state (loosen the tape by rotating the reel in the S side using a small tip such as a pencil), and check that there is no curling or snaking (up or down) in the guide of the record/playback heads. Snaking of the tape may occur only within the range of a difference in the widths of the tape and the tape guide (it curls when tape slacks more than the range). Therefore, carefully check it because it may often be overlooked.

If the tape is snaking, rotate screws ② and ③ in the same angle and change the tilting of the heads. Tighten or loosen the screws to remedy up or down snaking, respectively.

4. Repeat the adjustment 2 and 3 again and converge the height and tilting to suitable positions.
5. (Tentative adjustments of azimuth) Demagnetize and clean the heads and playback WS-48B (3kHz, 0dB). Rotate the screw ④ so that the pointer of the level meter of the set or connected to LINE OUT becomes maximum. If the screw is rotated more than 1/2 turn, repeat the adjustments again from 1.
6. (Checking of tape pass) Connect an oscilloscope to LINE OUT, replay P-4-A100 (10kHz, -10dB) to describe Lissajou's figures. At about 20 seconds after beginning playback (the tension in the loop becomes stable), check that the variation of the Lissajou's figures occur within $\pm 90^\circ$ (more preferably within $\pm 45^\circ$). If beyond $\pm 90^\circ$, adjustments of tilting or height will not be complete, so finely adjust the equipment again from 1.


Standard adjustment tape
P-4-A100
(10kHz, -10dB)

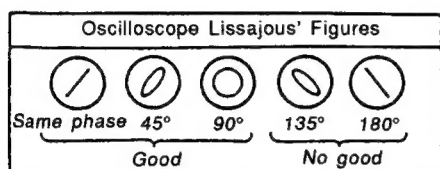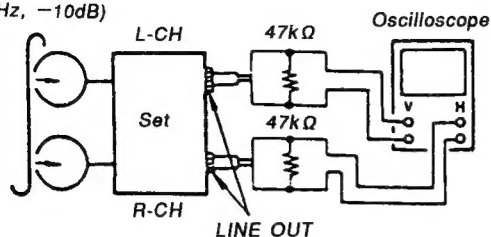

Erase heads


Note: The heads should be adjusted only when the erase head is replaced.

1. Mount the mirror cassette and set the equipment to playback state.
2. (Azimuth adjustments) Adjust screws **E** or **F** so that the tape runs as parallel to the erase heads as possible.

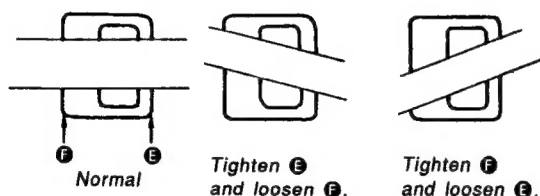


(Erase head viewed in the mirror cassette)

3. (Height adjustment) Rotate screws **D**, **E** and **F** in the same angle so that the widths of erase heads seen in the upper and lower sides of the tape become essentially the same. If the width in the upper or lower side is larger, tighten or loosen the screws, respectively.

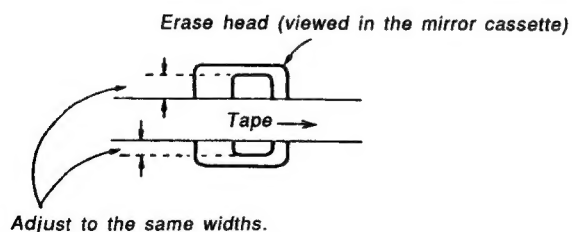

4. (Adjustments of tilting) Adjust back tension to 0 still in playback state and check that there is no snaking in the erase heads and pinch roller guide in the S side. If there is, change tilting by rotating the screw **D**. When the tape moves up or down in the mirror tape, tighten or loosen the screw, respectively.

5. Repeat the adjustments again from 2. and converge the height and tilting to more suitable values. And, check that there are no tape curls in the pinch roller guide and the guide of the record/playback heads.
6. (Adjustments of thrust) Slightly loosen the screw **G** and finely adjust it so that the tape smoothly runs over the entire surfaces of the heads by adjusting the thrust of the erase heads to an optimum value relative to the tape.

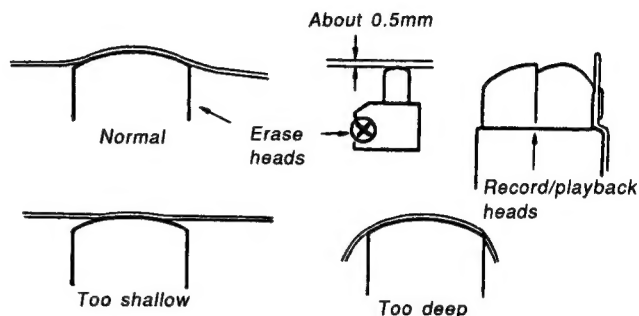


Checking

1. Check that the tape smoothly runs over the entire tape pass without curling or snaking.
2. After the adjustments, apply the locking compound to the screws adjusted (apply the compound to the screw **G** only after the final azimuth adjustments are completed).

Adjustment Location:

The following views relate to those in the mirror cassette (upper) and MD viewed from your side (lower).

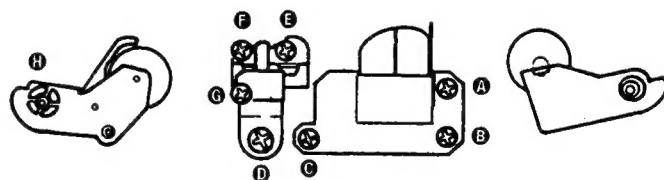

Pinch roller in the S side

Erase heads
Record/playback heads

Pinch roller in the T side

SECTION 4 ELECTRICAL ADJUSTMENTS

0dB=0.775V

1. Perform adjustment in the order listed below. (As a rule, adjust the record system after adjustment of playback system has been completed.)
2. Adjust and measure both channels unless otherwise specified.
3. To perform simultaneous record and playback, select recording mode, and set MONITOR switch to TAPE, then play back immediately the recorded signal to take out from LINE OUT.


• Switch position

DOLBY NROFF
 MPX FILTEROFF
 TIMEROFF
 MONITORTAPE
 CALIBRATIONOFF
 DIRECTOFF
 BIASCENTER CLICK
 REC LEVELCENTER CLICK
 BALANCECENTER CLICK

• Standard Record

Adjust the REC LEVEL (RV502) and BALANCE (RV501) controls so that the I/O signal levels specified below can be attained.

Record Mode

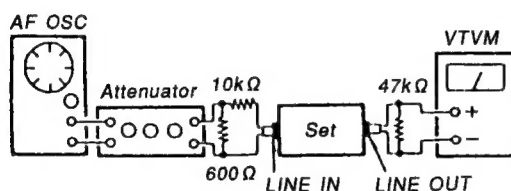

Standard Input Level

Input pin	LINE IN
Signal source impedance	10kΩ
Input signal level	0.25V (−10dB)

Standard Output Level

Output pin	LINE OUT
Load impedance	47kΩ
Output signal level	0.32V (−7.7dB)

Test tape

Type	Signal	Used for
WS-48B	3kHz, 0dB	Tape speed/WOW check
P-4-A100	10kHz, −10dB	Azimuth adjustment
P-4-L300	315Hz, 0dB	PB level adjustment


Torque Adjustment

1. Load the torque measuring tape CQ-102C, and play back. Adjust RV801 so that the torque meter reading is $40 \pm 5 \text{g} \cdot \text{cm}$. ($0.556 \pm 0.069 \text{ oz} \cdot \text{inch}$)
2. After adjustment, measure back tension and FF/REW torque, and make sure that measured data satisfies the specification.

Torque	Torque meter	Meter reading
FWD	CA-102C	$35 - 45 \text{g} \cdot \text{cm}$ ($0.49 - 0.62 \text{ oz} \cdot \text{inch}$)
FWD back tension	CA-102C	$7 - 11 \text{g} \cdot \text{cm}$ ($0.10 - 0.15 \text{ oz} \cdot \text{inch}$)
FF/REW	CQ-201B	$65 - 90 \text{g} \cdot \text{cm}$ ($0.91 - 1.25 \text{ oz} \cdot \text{inch}$)

Tape Speed/WOW Check

Procedure:

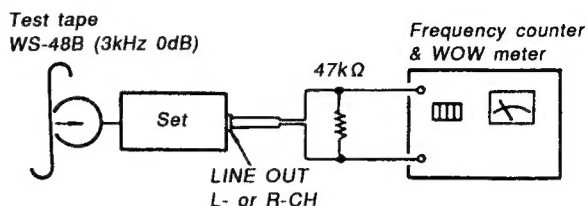

1. Play back the top of test tape to measure its output frequency and WOW value.
2. Invert test tape and perform same measurement, then check for difference between top and end of tape.

Specification:

Tape speed deviation : within 2,990~3,010Hz

Tape speed fluctuation : within 2,990~3,010Hz

WOW (WRMS) : 0.047% or less

MPX Filter Check


Condition:

DOLBY NR switch : OFF

MPX FILTER switch : OFF

Procedure:

1. Mode : stop

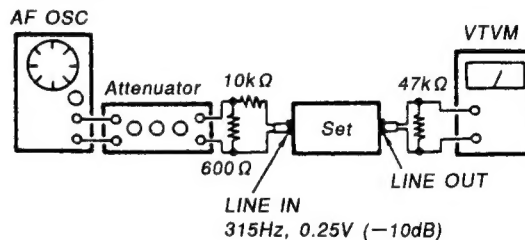

2. Applying 315Hz, 0.25V (−10dB) signal, adjust the REC LEVEL and BALANCE controls so that the LINE OUT level is 0.32V (−7.7dB).
3. Applying 19kHz, 0.25V (−10dB) signal, measure the LINE OUT level.

Specification:

DOLBY NR switch: Either B, C or S

MPX FILTER switch: ON, LINE OUT level must be,


315Hz: within 0.28~0.36V (within −8.7~−6.7dB)

19kHz: 9.8mV (−38dB) or less


Record/Playback Head Azimuth Adjustment

Procedure:


1. Mode : FWD playback

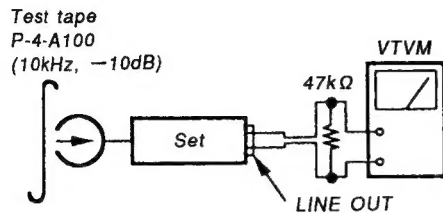


2. Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screw until both of output levels match together within 1dB.

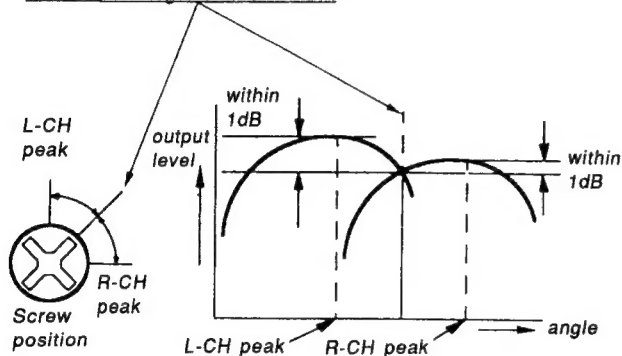


3. Phase Check
Mode: playback

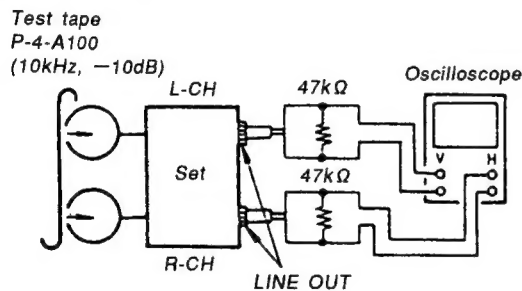

4. Confirm that the phase difference between L-CH and R-CH is in-phase to 90°.

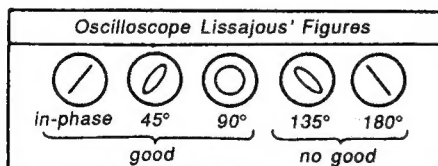


Adjustment Location:

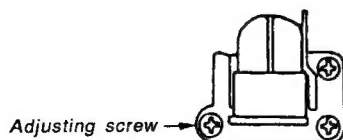

Playback Level Adjustment

Procedure:

1. Mode: playback

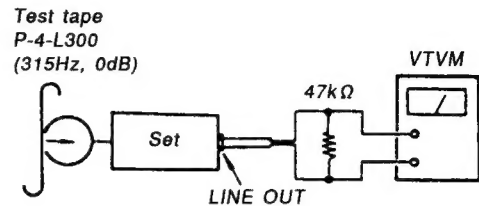

2. Adjust the RV101 (L-CH) and RV201 (R-CH) to satisfy the following specification.

Adjustment Value:

LINE OUT level : 302 — 338mV

(-8.2 — -7.2dB)


Level difference between channels: within 0.5dB

Confirm that the LINE OUT level does not change when playback and stop are repeated.

Erase Current Adjustment

Procedure:

1. Mode: record

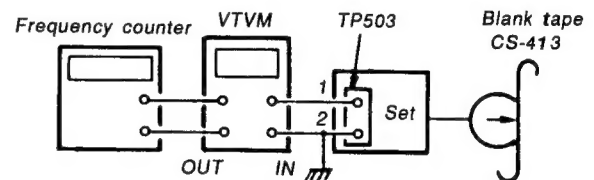

2. Adjust RV506 so that VTVM reading is 110mV (erase current 110mA).
3. At this time, confirm oscillation frequency.

Adjustment Value:

Erase current: 110 ± 5 mA


Oscillation frequency: 160 ± 6 kHz

Bias Consumption Current Adjustment

Note: The bias consumption current must be adjusted before adjusting the record bias. Retry record bias adjustment after the bias consumption current is adjusted.

Procedure:

1. Set semi-fixed resistors RV104 (L-CH), RV204 (R-CH) and RV505 for record bias adjustment to mechanical center, and select the recording mode without applying a signal.
2. Adjust T101 (L-CH) and T201 (R-CH) so that the digital voltmeter reading becomes minimum.

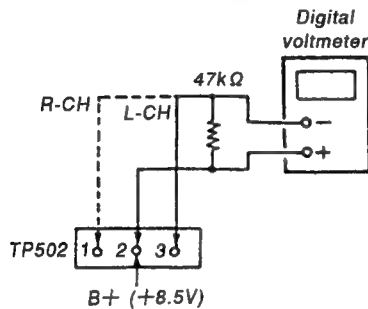

Specification: 120mV or less
(This value is measured using CS-413 after bias adjustment.)


Bias and Recording level adjustment

Condition:

REC LEVEL control: Specified recording position (Page 9)

Procedure:

1. Mode: simultaneous record and playback

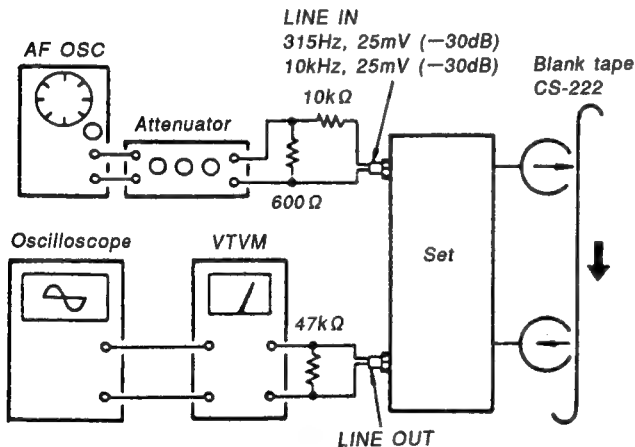

2. Adjust the following controls so that the minimum output becomes the specified output level.
 - (1) RV104 (L-CH) and RV204 (R-CH) Bias adjustment
 - (2) RV103 (L-CH) and RV203 (R-CH) Recording level adjustment

Adjustment Value:

- (1) Level of 10kHz against 315Hz: $0 \pm 0.3\text{dB}$
- (2) 315Hz level: $30.9 - 33.1\text{mV}$ ($-28.0 - -27.4\text{dB}$)


Metal Bias Adjustnemnt

Condition:

REC LEVEL control: Specified recording position (page 9)

Procedure:

1. Mode: simultaneous record and playback

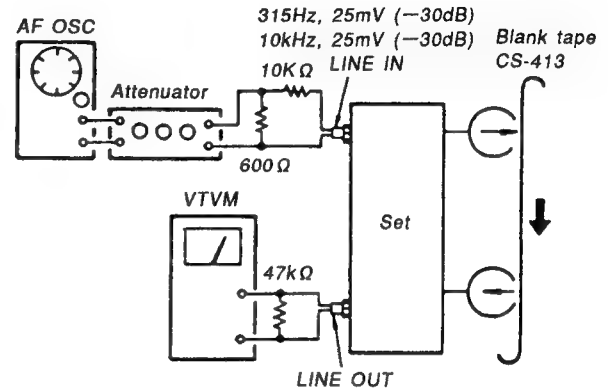

2. Adjust RV505 so that 10kHz R-CH output is $0 \pm 0.3\text{dB}$ relative to the 315Hz output.


Calibration Adjustment and Level Meter Adjustment

Condition:

CALIBRATION switch: ON

Procedure (oscillation output level adjustment):

1. Mode: record (No signal to LINE IN)

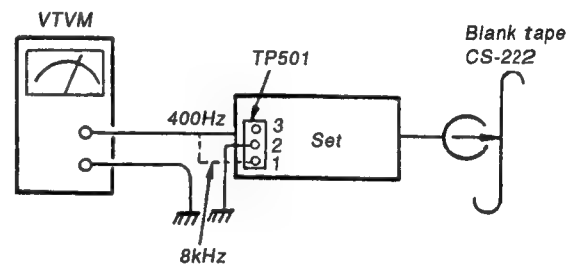


2. Adjust RV508 so that the 400Hz check point level is $2.32 - 2.59\text{V}$ ($9.5\text{dB} - 10.5\text{dB}$).
3. Adjust RV507 so that the 8kHz check point level is $2.32 - 2.59\text{V}$ ($9.5\text{dB} - 10.5\text{dB}$).

Procedure (level meter adjustment):


1. Record mode (No signal to LINE IN)
2. Adjust RV102 to higher side, then lower it gradually. Adjust so that the level "a" higher by one point than 0dB of LOW FREQ segment (lower) of CAL level meter turns off.
3. Adjust RV202 so that HIGH FREQ segment (upper) up to 0dB position of CAL level meter turns on.

HIGH: Blinking of level "a" higher by 1 point is acceptable.

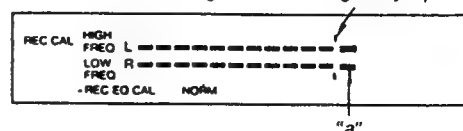


LOW: Blinking of level "a" higher by 1 point is not acceptable.

AUDIO (A) BOARD (component side)

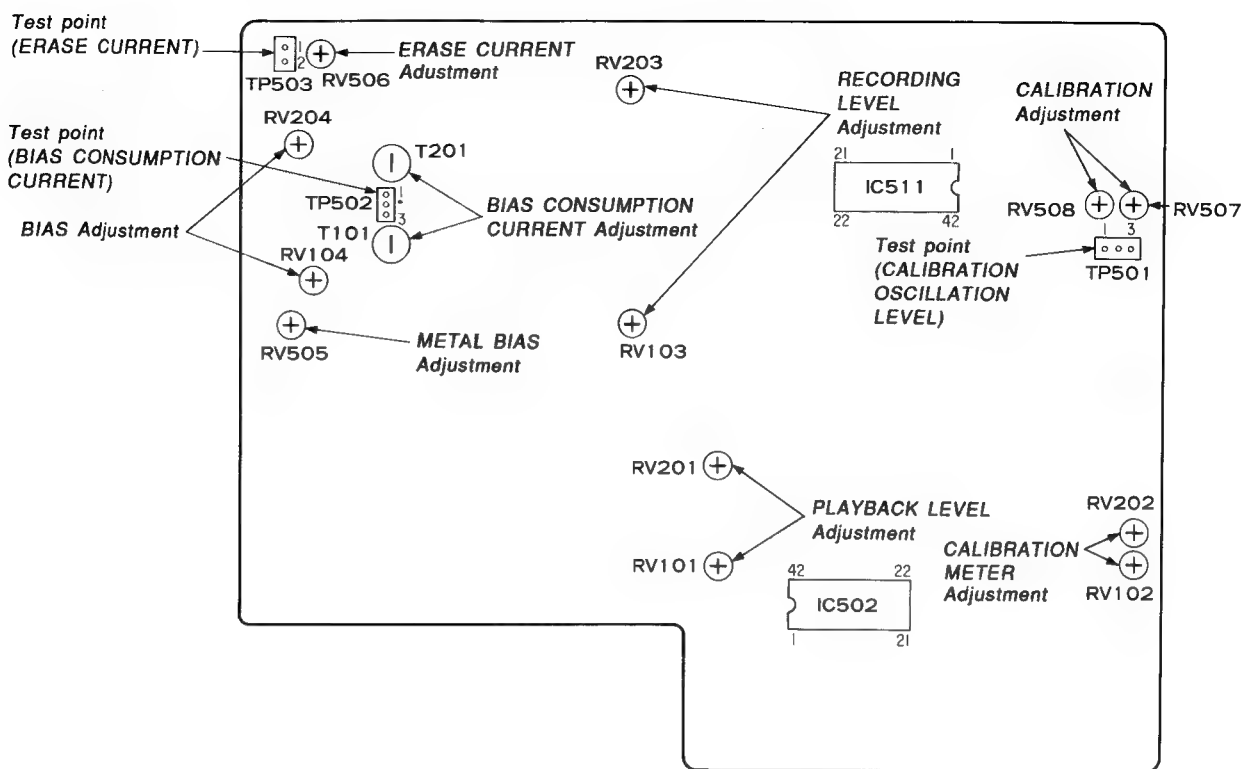

SYSTEM CONTROL (A) BOARD (component side)

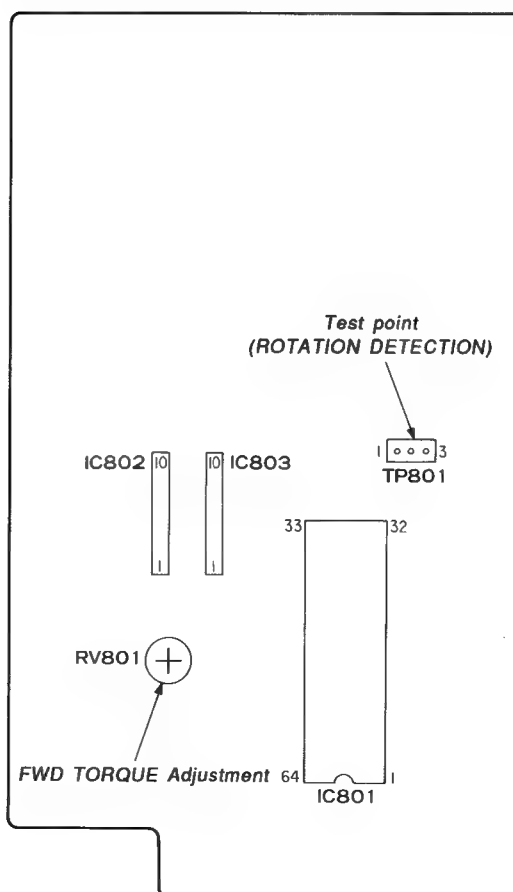

SECTION 5 DIAGRAMS

IC PIN ASSIGNMENT

IC801 Master Microcomputer (M50964-226SP)

This IC controls, based on input signals from various switches and remote devices, the mechanical deck, audio signal switching for equalizer, muting, etc. and data transfer to the display microcomputer.

Pin. No.	Pin Name	I/O	Function																																													
1	Vcc	—	Power supply (+5V)																																													
2	AVss	—	Power supply (GND)																																													
3	Vref	I	Reference voltage input (+5V) to A/D ports																																													
4	DATA	O	Data output (analog) to display microcomputer (IC601)																																													
5	PWM	—	Not used																																													
6	ADR0	O	Data output to display microcomputer (IC601)																																													
7	REC	O	Not used (Connected to GND)																																													
8	PAUSE	O	Not used (Connected to GND)																																													
9	PLAY	O	Not used (Connected to GND)																																													
10	AD7	I	Key switch input (analog) 0V : "▲", 1V : "■", 2V : "◀", 3V : "▶", 4V : "●"																																													
11	AD6	I	Key switch input (analog) 0V : "►", 1V : " ", 2V : "◀◀", 3V : "▶▶", 4V : "○"																																													
12	AD5	I	Key switch input (analog) 0V : "RESET", 1V : "MEMORY", 2V : "DISPLAY MODE"																																													
13	TIMER SW	I	Key switch input (analog) 3V : "REC", 4V : "PLAY", 5V : "OFF"																																													
14	T-PULSE	I	Mechanism deck take-up reel table sensor pulse input																																													
15	S-PULSE	I	Mechanism deck supply reel table sensor pulse input																																													
16	COUNT 0	I	Negative pulse input at counter 0																																													
17	—	—	Not used																																													
18	RSTOUT	O	Not used (Connected to GND)																																													
19	S-CLOCK	O	Not used (Connected to GND)																																													
20	S-OUT	O	Not used (Connected to GND)																																													
21	S-IN	I	Not used (Pull up)																																													
22	SIRCS-L	I	SIRCS signal (remote control) normal phase input																																													
23	SIRCS-E	I	SIRCS signal (remote control) inverted phase input Inverted SIRCS-L input																																													
24	POW-OUT	O	Not used (Open)																																													
25	POWER IN	I	Power down detection input																																													
26	INT1	I	Power down detection input																																													
27	CNVss	—	Power supply (GND)																																													
28	RESET	I	RESET input																																													
29	XIN	I	Clock input (4MHz)																																													
30	XOUT	O	Clock output (4MHz)																																													
31	φ	—	Not used																																													
32	Vss	—	Power supply (GND)																																													
33~36	PAT3~PAT0	I	Rotary encoder input for mechanism deck head base position detection <table border="1"><tr><td></td><td>PAUSE</td><td>AMS</td><td>FF/REW</td><td>STOP</td><td colspan="2">PLAY</td><td colspan="2">EJECT</td></tr><tr><td>PAT3</td><td>L</td><td>L</td><td>L</td><td>L</td><td>H</td><td>H</td><td>H</td><td>H</td></tr><tr><td>PAT2</td><td>L</td><td>L</td><td>H</td><td>H</td><td>L</td><td>L</td><td>H</td><td>H</td></tr><tr><td>PAT1</td><td>L</td><td>H</td><td>L</td><td>H</td><td>L</td><td>H</td><td>L</td><td>H</td></tr><tr><td>PAT0</td><td>L</td><td>H</td><td>H</td><td>L</td><td>L</td><td>L</td><td>L</td><td>L</td></tr></table>		PAUSE	AMS	FF/REW	STOP	PLAY		EJECT		PAT3	L	L	L	L	H	H	H	H	PAT2	L	L	H	H	L	L	H	H	PAT1	L	H	L	H	L	H	L	H	PAT0	L	H	H	L	L	L	L	L
	PAUSE	AMS	FF/REW	STOP	PLAY		EJECT																																									
PAT3	L	L	L	L	H	H	H	H																																								
PAT2	L	L	H	H	L	L	H	H																																								
PAT1	L	H	L	H	L	H	L	H																																								
PAT0	L	H	H	L	L	L	L	L																																								
37	OPEN SW	I	Mechanism deck OPEN SW (S1004) input "L" : Cassette holder is opened																																													
38	CLOSE SW	I	Mechanism deck CLOSE SW (S1003) input "L" : Cassette holder is closed																																													

Pin. No.	Pin Name	I/O	Function															
39	DOOR SW	I	Mechanism deck DOOR SW (S1002) input “L”: Cassette holder status changes from open to close															
40	REC SW	I	Mechanism deck REC SW (S1001) input “L”: REC protector is broken															
41	70 μ SW	I	Mechanism deck 70 μ SW (S1008) input “H”: 70 μ S, “L”: 120 μ S (constant when playback EQ)															
42	HALF SW	I	Mechanism deck HALF SW (S1006) input “L”: Tape is loaded															
43	METAL SW	I	Mechanism deck METAL SW (S1007) input “H”: Metal tape, “L”: Normal or CrO2 tape															
44	—	—	Not used															
45	CAM UP	O	Mechanism deck head base UP output															
46	CAM DOWN	O	Mechanism deck head base DOWN output <table><tr><td></td><td>STOP</td><td>DOWN</td><td>UP</td><td>STOP</td></tr><tr><td>CAM UP</td><td>L</td><td>H</td><td>L</td><td>H</td></tr><tr><td>CAM DOWN</td><td>L</td><td>L</td><td>H</td><td>H</td></tr></table>		STOP	DOWN	UP	STOP	CAM UP	L	H	L	H	CAM DOWN	L	L	H	H
	STOP	DOWN	UP	STOP														
CAM UP	L	H	L	H														
CAM DOWN	L	L	H	H														
47	M-FWD	O	Reel motor forward run															
48	M-REV	O	Reel motor reverse run <table><tr><td></td><td>STOP</td><td>FWD/ CLOSE</td><td>REV/ OPEN</td><td>BRAKE</td></tr><tr><td>M-FWD</td><td>L</td><td>L</td><td>H</td><td>H</td></tr><tr><td>M-REV</td><td>L</td><td>H</td><td>L</td><td>H</td></tr></table>		STOP	FWD/ CLOSE	REV/ OPEN	BRAKE	M-FWD	L	L	H	H	M-REV	L	H	L	H
	STOP	FWD/ CLOSE	REV/ OPEN	BRAKE														
M-FWD	L	L	H	H														
M-REV	L	H	L	H														
49	M-PLAY	O	“L” when reel motor runs at PLAY speed															
50	M-FAST	O	“L” when reel motor runs at FF/REW speed															
51	BIAS	O	Bias oscillation control output “L”: Oscillation, “H”: OFF															
52	REC MUTE	O	REC mute control output “H”: Mute															
53	MONITER	O	Monitor switch output “H”: TAPE, “L”: SOURCE															
54	LINE MUTE	O	Line mute control output “H”: Mute															
55	—	—	Not used (Connected to AMS MODE)															
56	AMS MODE	O	AMS switch output “L”: AMS															
57	TYPE I	O	REC equalizer switching output “L”: Normal tape															
58	TYPE II	O	REC equalizer switching output “L”: CrO2 tape															
59	TYPE IV	O	REC equalizer switching output “L”: Metal tape															
60	AMS SIG	I	AMS signal input “L”: No music “H”: Music															
61	SOURCE SW	I	Not used (Connected to +5V)															
62	TAPE SW	I	Not used (Connected to +5V)															
63	CAL SW	I	Calibration SW (S602) input “L”: CAL mode, “H”: Normal mode															
64	ADDR1	O	Data output to display microcomputer (IC601)															


IC601 Display Microcomputer (M50940-313SP)

This IC controls display of 24-segment level meter, counter, etc. based on the instruction from master microcomputer (IC801).


Pin. No.	Pin Name	I/O	Function
1	Vref	I	Reference voltage input (+5V) to A/D ports
2	ϕ L	I	Mechanism deck supply reel table sensor pulse input
3	ϕ R	I	Mechanism deck take-up reel table sensor pulse input
4	DATA	I	Data input (analog) from master microcomputer (IC801)
5~6	ADR1~ADR0	I	Data input (analog) from master microcomputer (IC801)
7	KEY	I	Key switch input (analog) 0V : MEMORY 1.6V : RESET 3.1V : DISPLAY
8	LEVEL L	I	Level meter Lch input (analog) from meter amplifier (IC507)
9	LEVEL R	I	Level meter Rch input (analog) from meter amplifier (IC507)
10~15	$\overline{\text{GRID6}} \sim \overline{\text{GRID1}}$	O	FL tube grid output
16	$\overline{\text{C00}}$	O	Negative pulse output when counter is 00
17	$\overline{\text{PLAY}}$	O	PLAY LED output "L" : ON
18	$\overline{\text{PLAY}}$	O	PLAY LED output "L" : ON
19	$\overline{\text{PAUSE}}$	O	PAUSE LED output "L" : ON
20	$\overline{\text{REC}}$	O	REC LED output "L" : ON
21	$\overline{\text{TAPE}}$	O	FL tube segment output (L : TAPE, H : SOURCE display)
22	$\overline{\text{OVER LEVEL}}$	O	FL tube segment output ("OVER LEVEL" display)
23	$\overline{\text{TYPE I}}$	O	FL tube segment output ("TYPE I" display)
24	$\overline{\text{TYPE II}}$	O	FL tube segment output ("TYPE II" display)
25	$\overline{\text{TYPE IV}}$	O	FL tube segment output ("TYPE IV" display)
26	CNVss	—	Power supply (GND)
27	$\overline{\text{RESET}}$	I	RESET input
28	XIN	I	Clock input (4MHz)
29	XOUT	O	Clock output (4MHz)
30	XCIN	—	Not used (Normally "L")
31	XCOUT	—	Not used
32	Vss	—	Power supply (GND)
33	ϕ	O	Not used
34	VER	I	Version switching input (Normally "L")
35	$\overline{\text{TEST}}$	I	TEST mode input "L" : Meter all ON
36	CAL	I	Calibration SW (S602) input "L" : CAL mode, "H" : Normal mode
37	IN	I	Not used
38	VP	I	Pull down power supply (—22V) for FL tube segment output
39~62	S23~S0	O	FL tube segment output (meter, counter display)
63	AVcc	—	Power supply (+5V)
64	Vcc	—	Power supply (+5V)

5-1. SEMICONDUCTOR LEAD LAYOUTS

**BA6219B
LB1641**

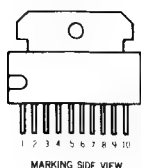

M5218AL

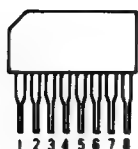


**2SB1094-LK
2SD1406-YGR
2SD1585-LK
2SD2012**




**2SK246-GR
2SK30A-GR2**



**SEL2210S-D
SEL2410E-D
SEL2910A-D**

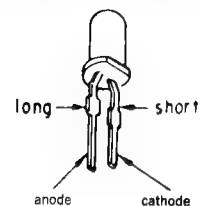

CXA1417Q

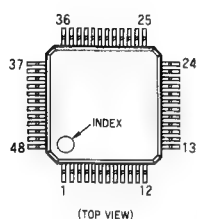


2SA1175-HFE




**2SC1815-Y
2SC2603-EF
2SD2144S-UVW
DTA114ES
DTA144ES
DTC114ES
DTC144ES**



**10E2N
1N4148M
30DF2**

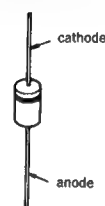


GP2S22B

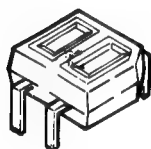


**2SA1409-LK
2SB1116A-L
2SC945-P**




**HZS6C3L
UZL-12H1
UZL-6L3**

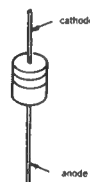


5-2. CIRCUIT BOARDS LOCATION

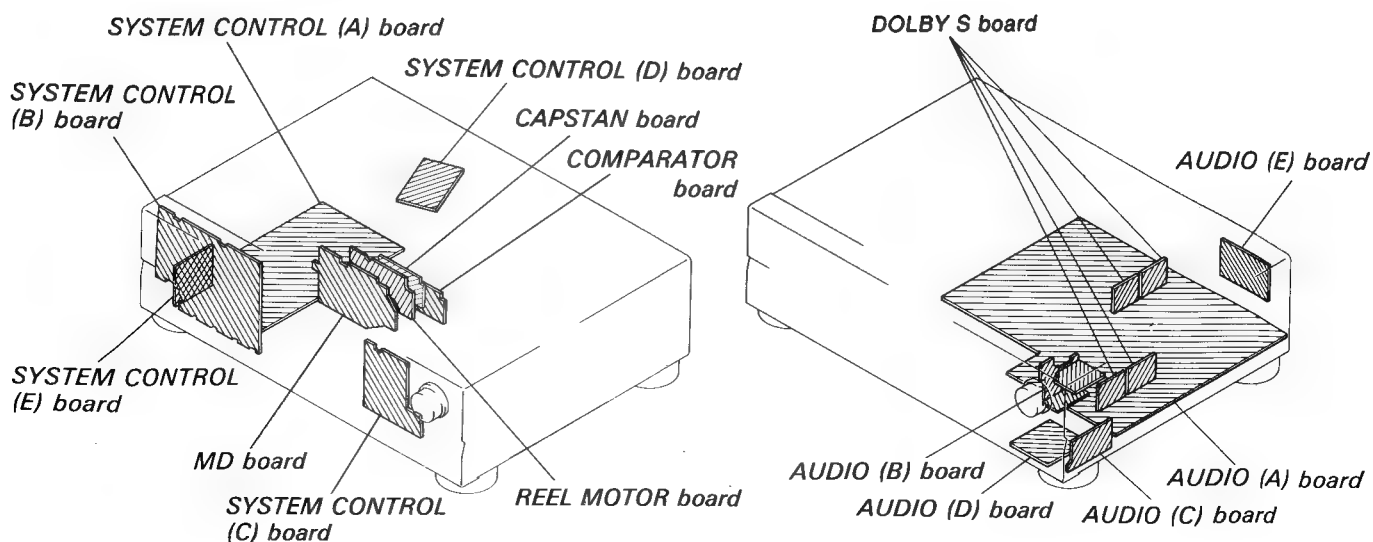

5-3. BLOCK DIAGRAM

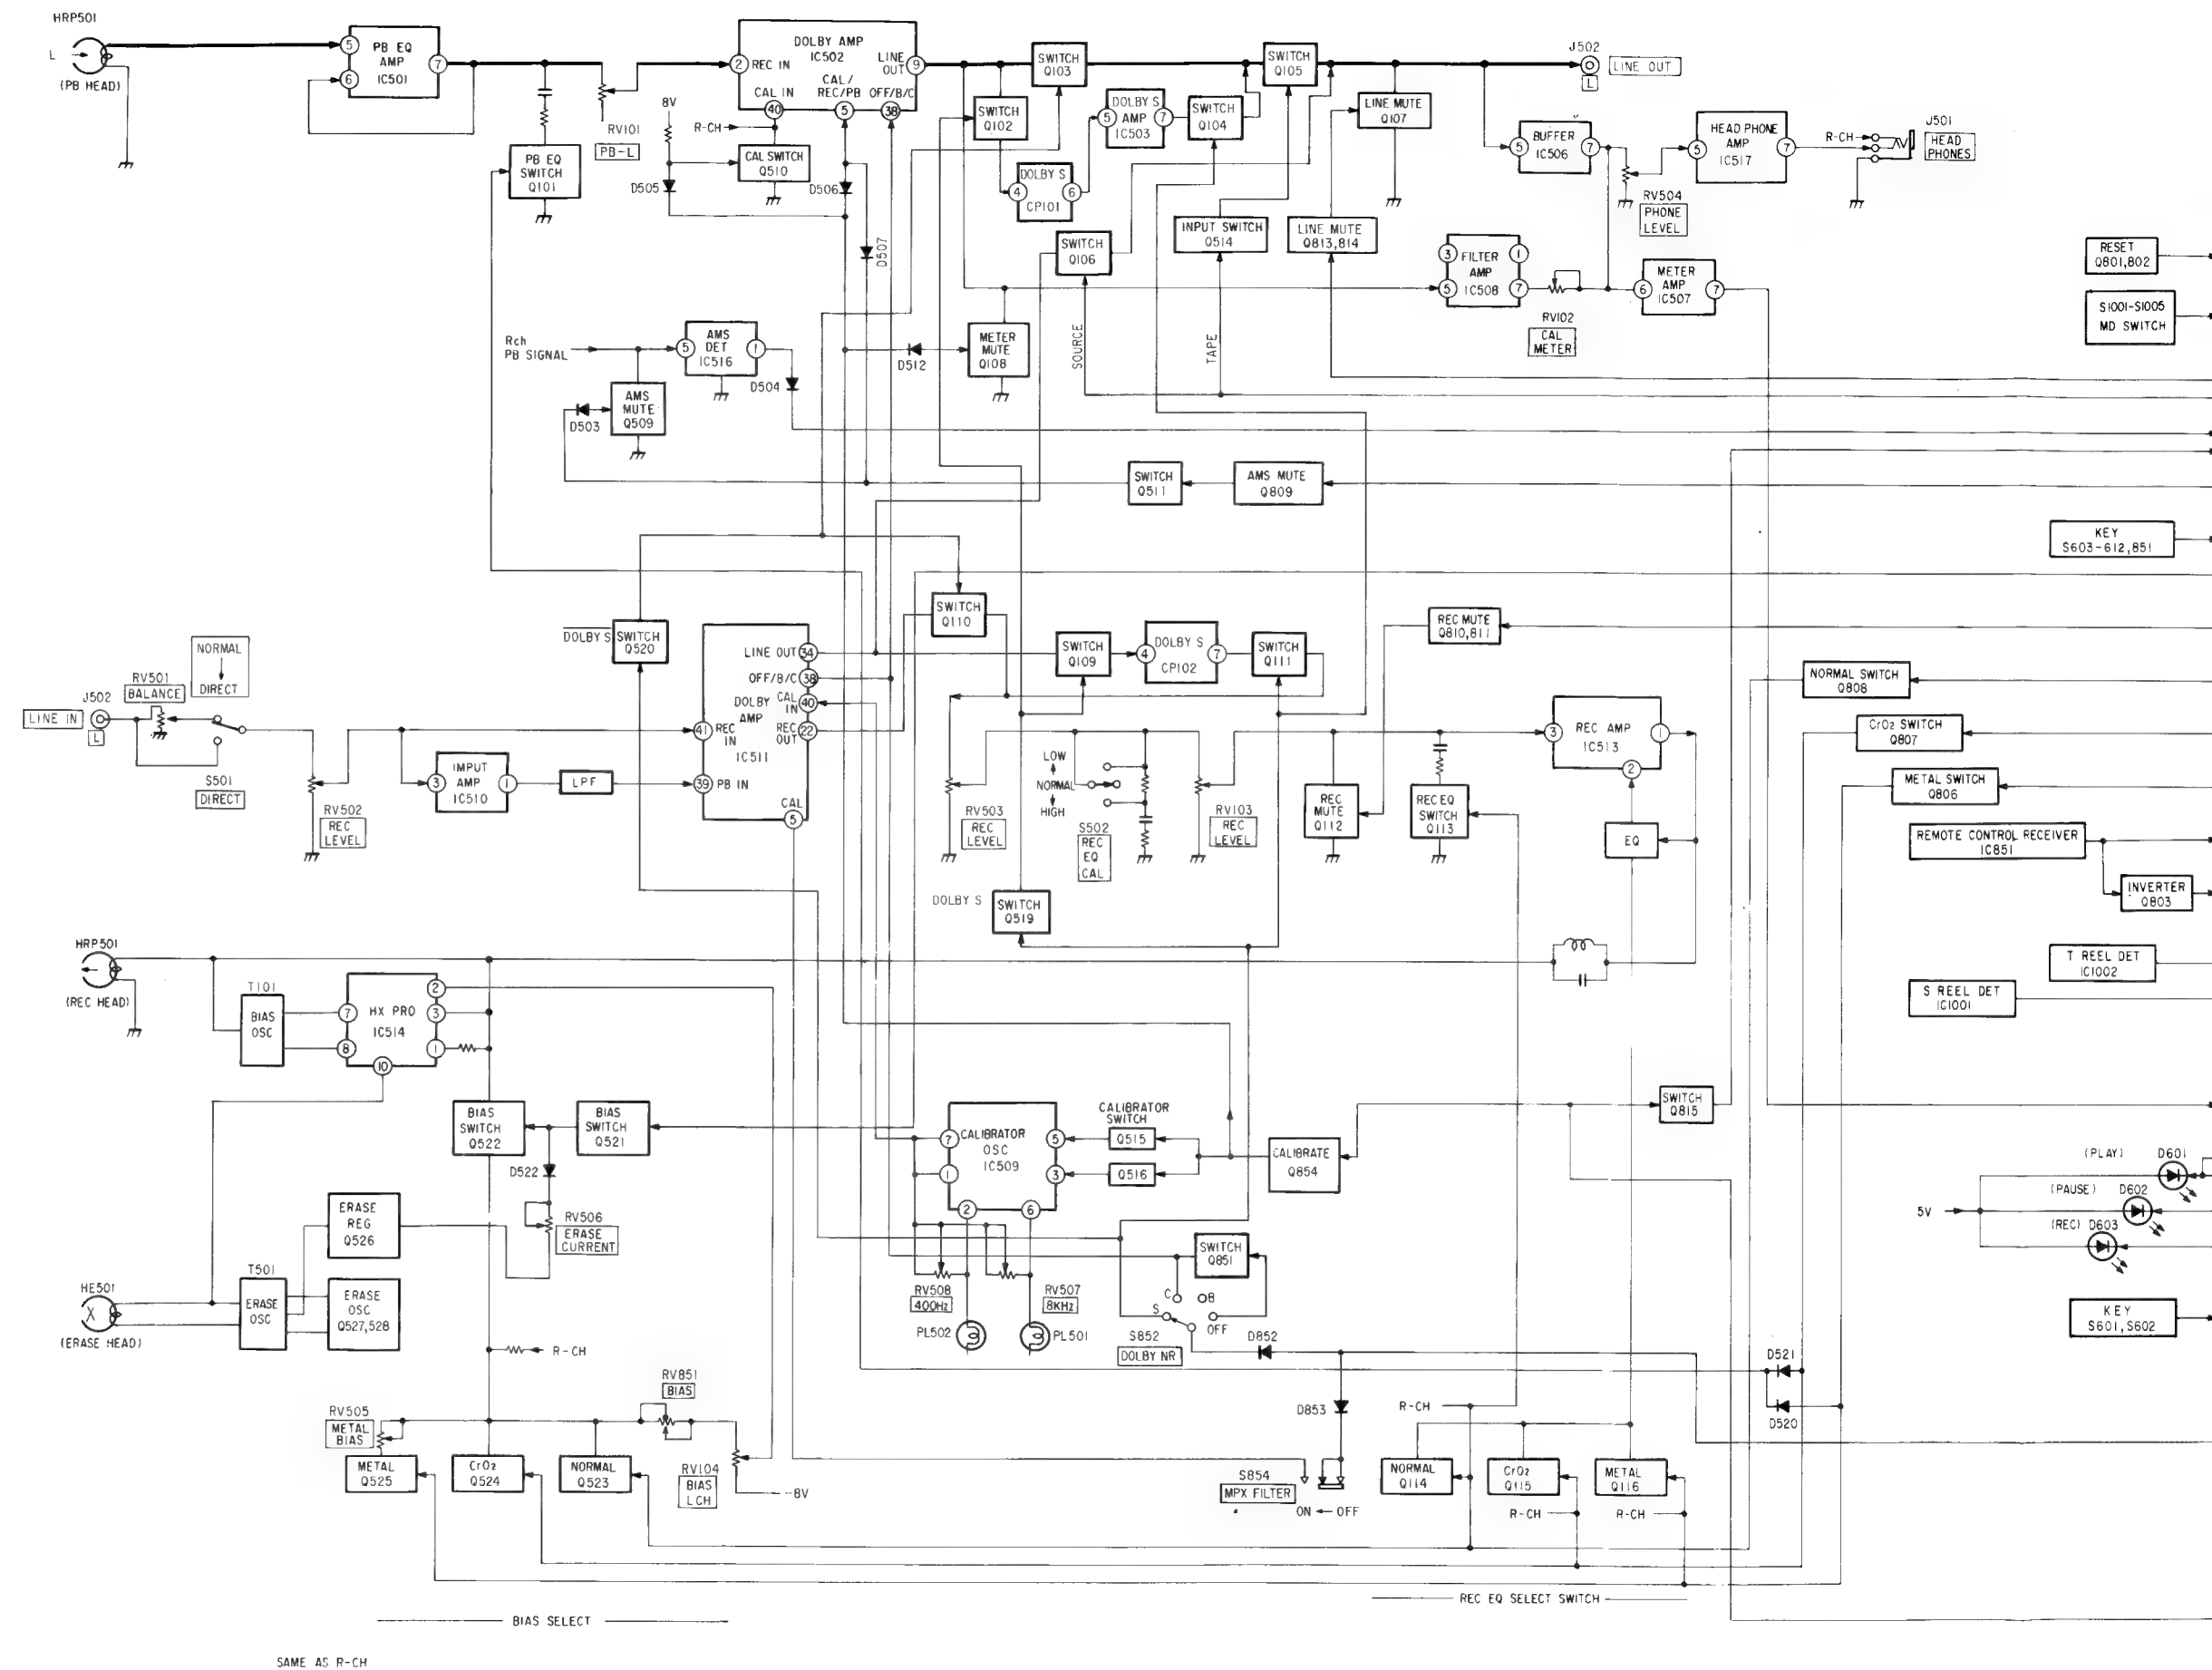

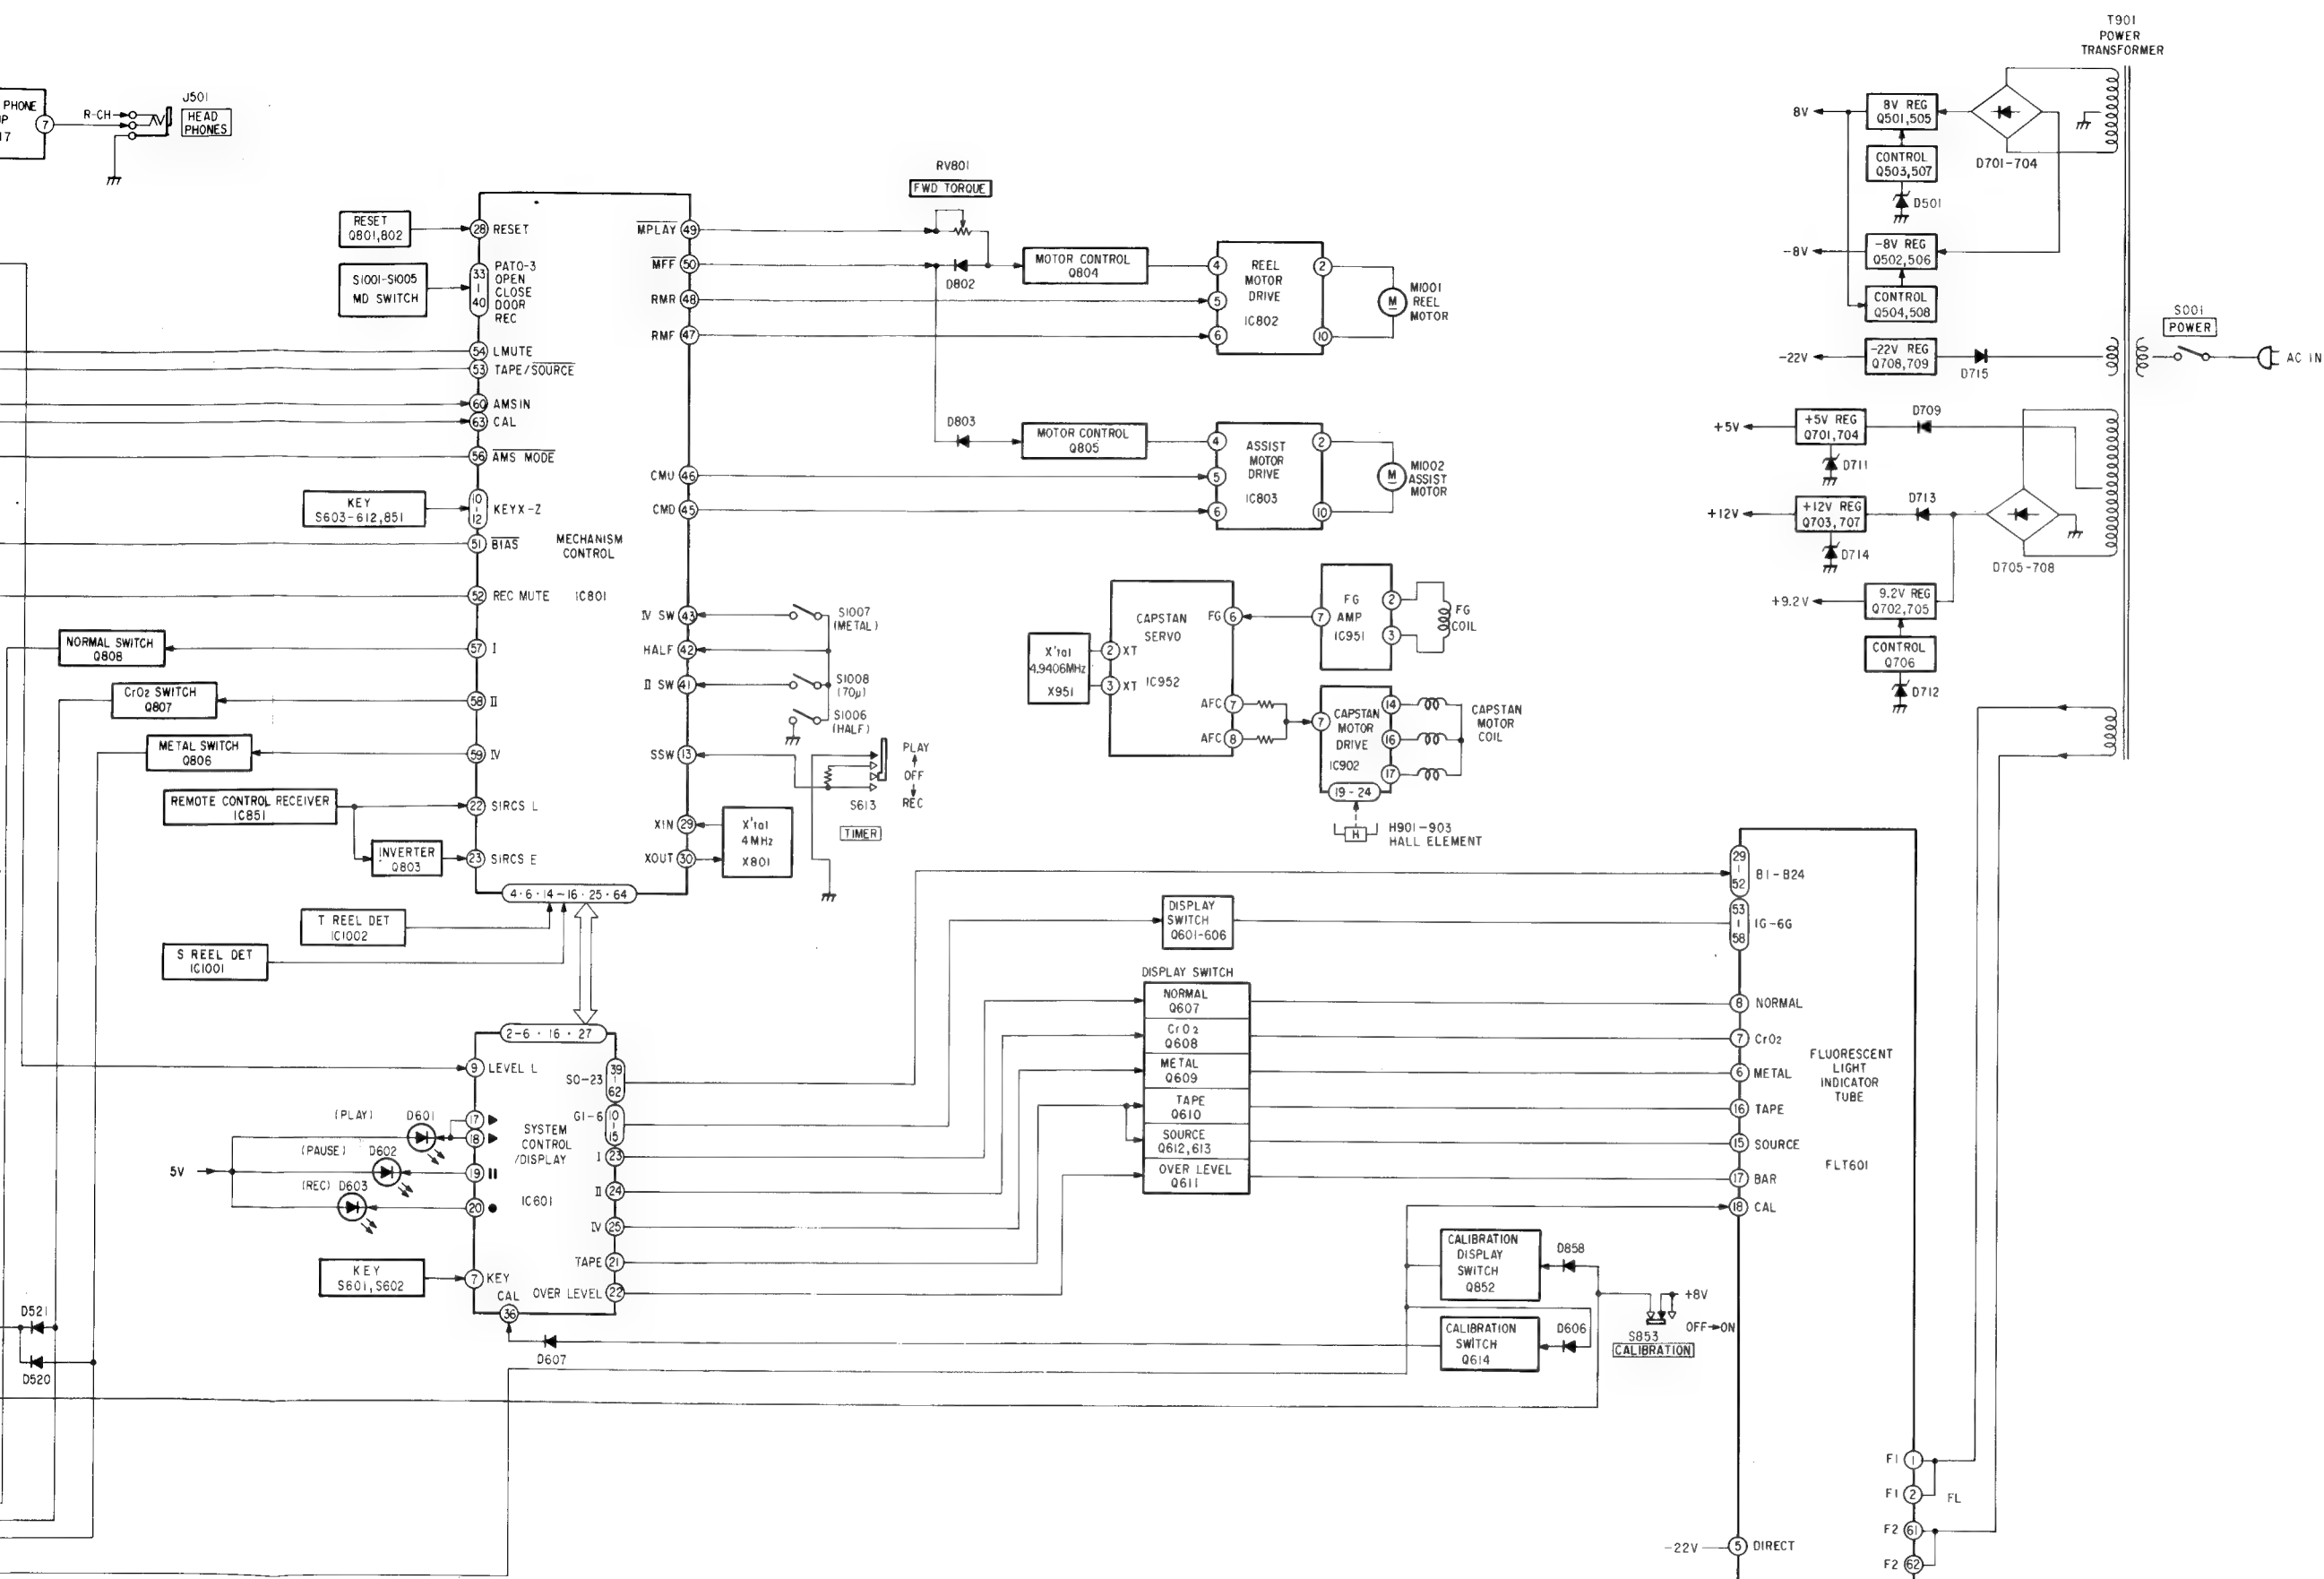

Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D101	J-7	IC1	C-21	Q212	C-12
D102	J-7	IC2	G-20	Q213	C-13
D103	G-6	IC501	H-13	Q214	C-13
D104	G-7	IC502	I-10	Q215	C-13
D105	D-6	IC503	I-7	Q216	C-13
D106	E-6	IC506	F-8	Q501	H-15
D107	E-6	IC507	E-6	Q502	G-15
D108	D-12	IC508	J-6	Q503	I-16
D109	E-12	IC509	B-7	Q504	G-16
D201	G-7	IC510	C-7	Q505	H-16
D202	G-7	IC511	C-9	Q506	G-16
D203	G-8	IC513	D-14	Q507	H-16
D204	G-7	IC514	D-16	Q508	G-16
D205	D-6	IC516	F-10	Q509	G-12
D206	E-7	IC517	J-3	Q510	G-12
D207	E-7			Q511	F-13
D208	C-12	Q101	H-12	Q514	F-8
D209	B-12	Q102	J-8	Q515	C-6
D501	H-16	Q103	I-7	Q516	C-7
D503	F-13	Q104	I-7	Q519	E-10
D504	F-9	Q105	G-6	Q520	E-10
D505	G-11	Q106	G-7	Q521	D-17
D506	G-11	Q107	F-7	Q522	D-17
D507	G-11	Q108	J-7	Q523	E-16
D508	J-8	Q109	E-11	Q524	E-16
D509	J-8	Q110	D-12	Q525	E-16
D510	H-8	Q111	E-12	Q526	B-16
D511	H-8	Q112	E-13	Q527	B-16
D512	F-8	Q113	D-13	Q528	B-15
D513	E-8	Q114	D-13		
D514	C-12	Q115	D-13		
D515	C-12	Q201	G-12		
D516	E-12	Q202	H-8		
D518	E-11	Q203	H-7		
D519	E-10	Q204	G-7		
D520	F-13	Q205	G-7		
D521	F-13	Q206	G-7		
D522	B-16	Q207	F-7		
D523	J-8	Q208	G-7		
D524	H-8	Q209	C-11		
D525	C-12	Q210	D-12		
D526	E-12	Q211	B-12		

Note:

- — : parts extracted from the component side.
- : parts mounted on the conductor side.
- : Through hole.
- ▨ : Pattern from the side which enables seeing.

(The other layers' patterns are not indicated.)


Caution:

Pattern face side: Parts on the pattern face side seen from (Conductor Side) the pattern face are indicated.

Parts face side: Parts on the parts face side seen from the (Component Side) parts face are indicated.


5-4. PRINTED WIRING BOARDS —AUDIO Section—

See page 16 for Circuit Board

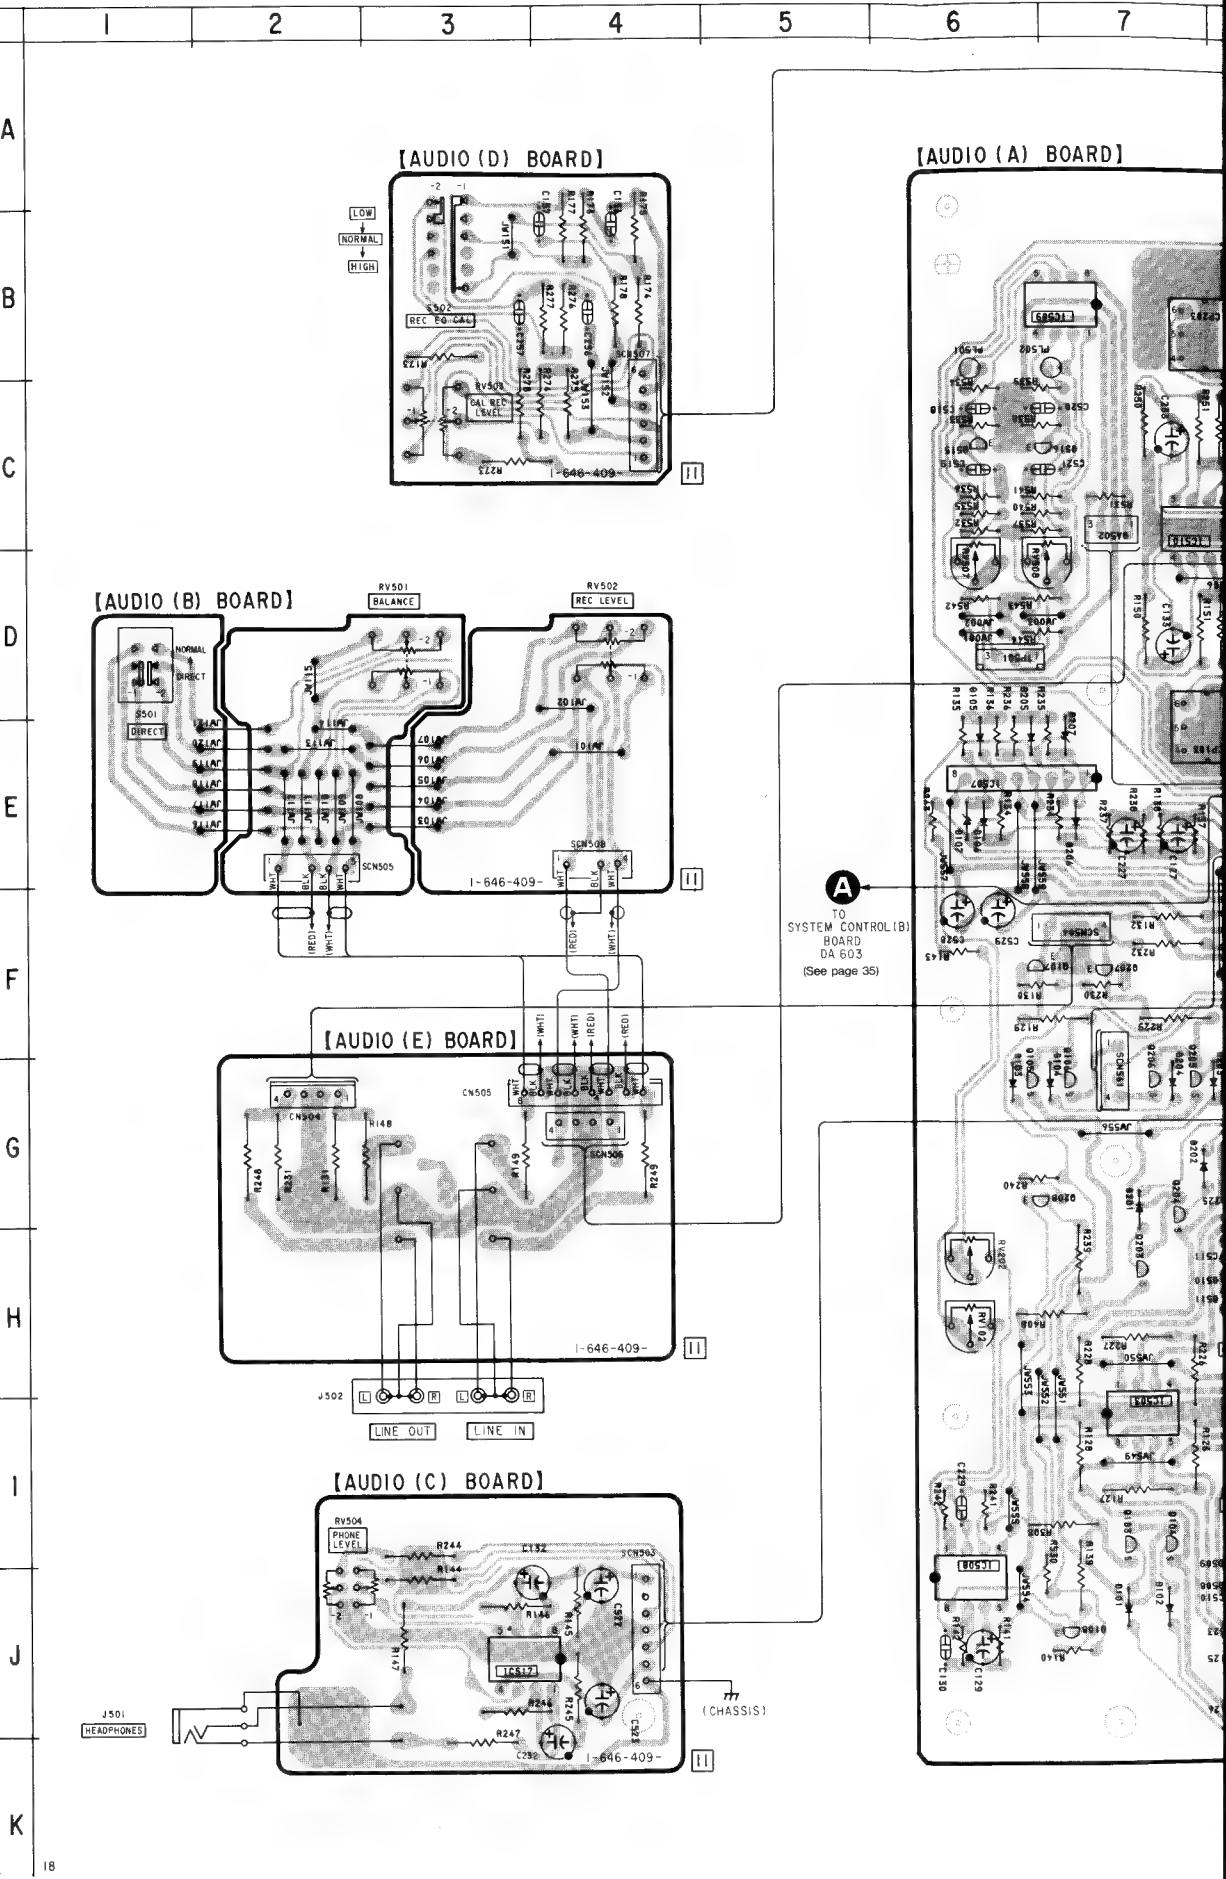

5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22

[AUDIO (A) BOARD]

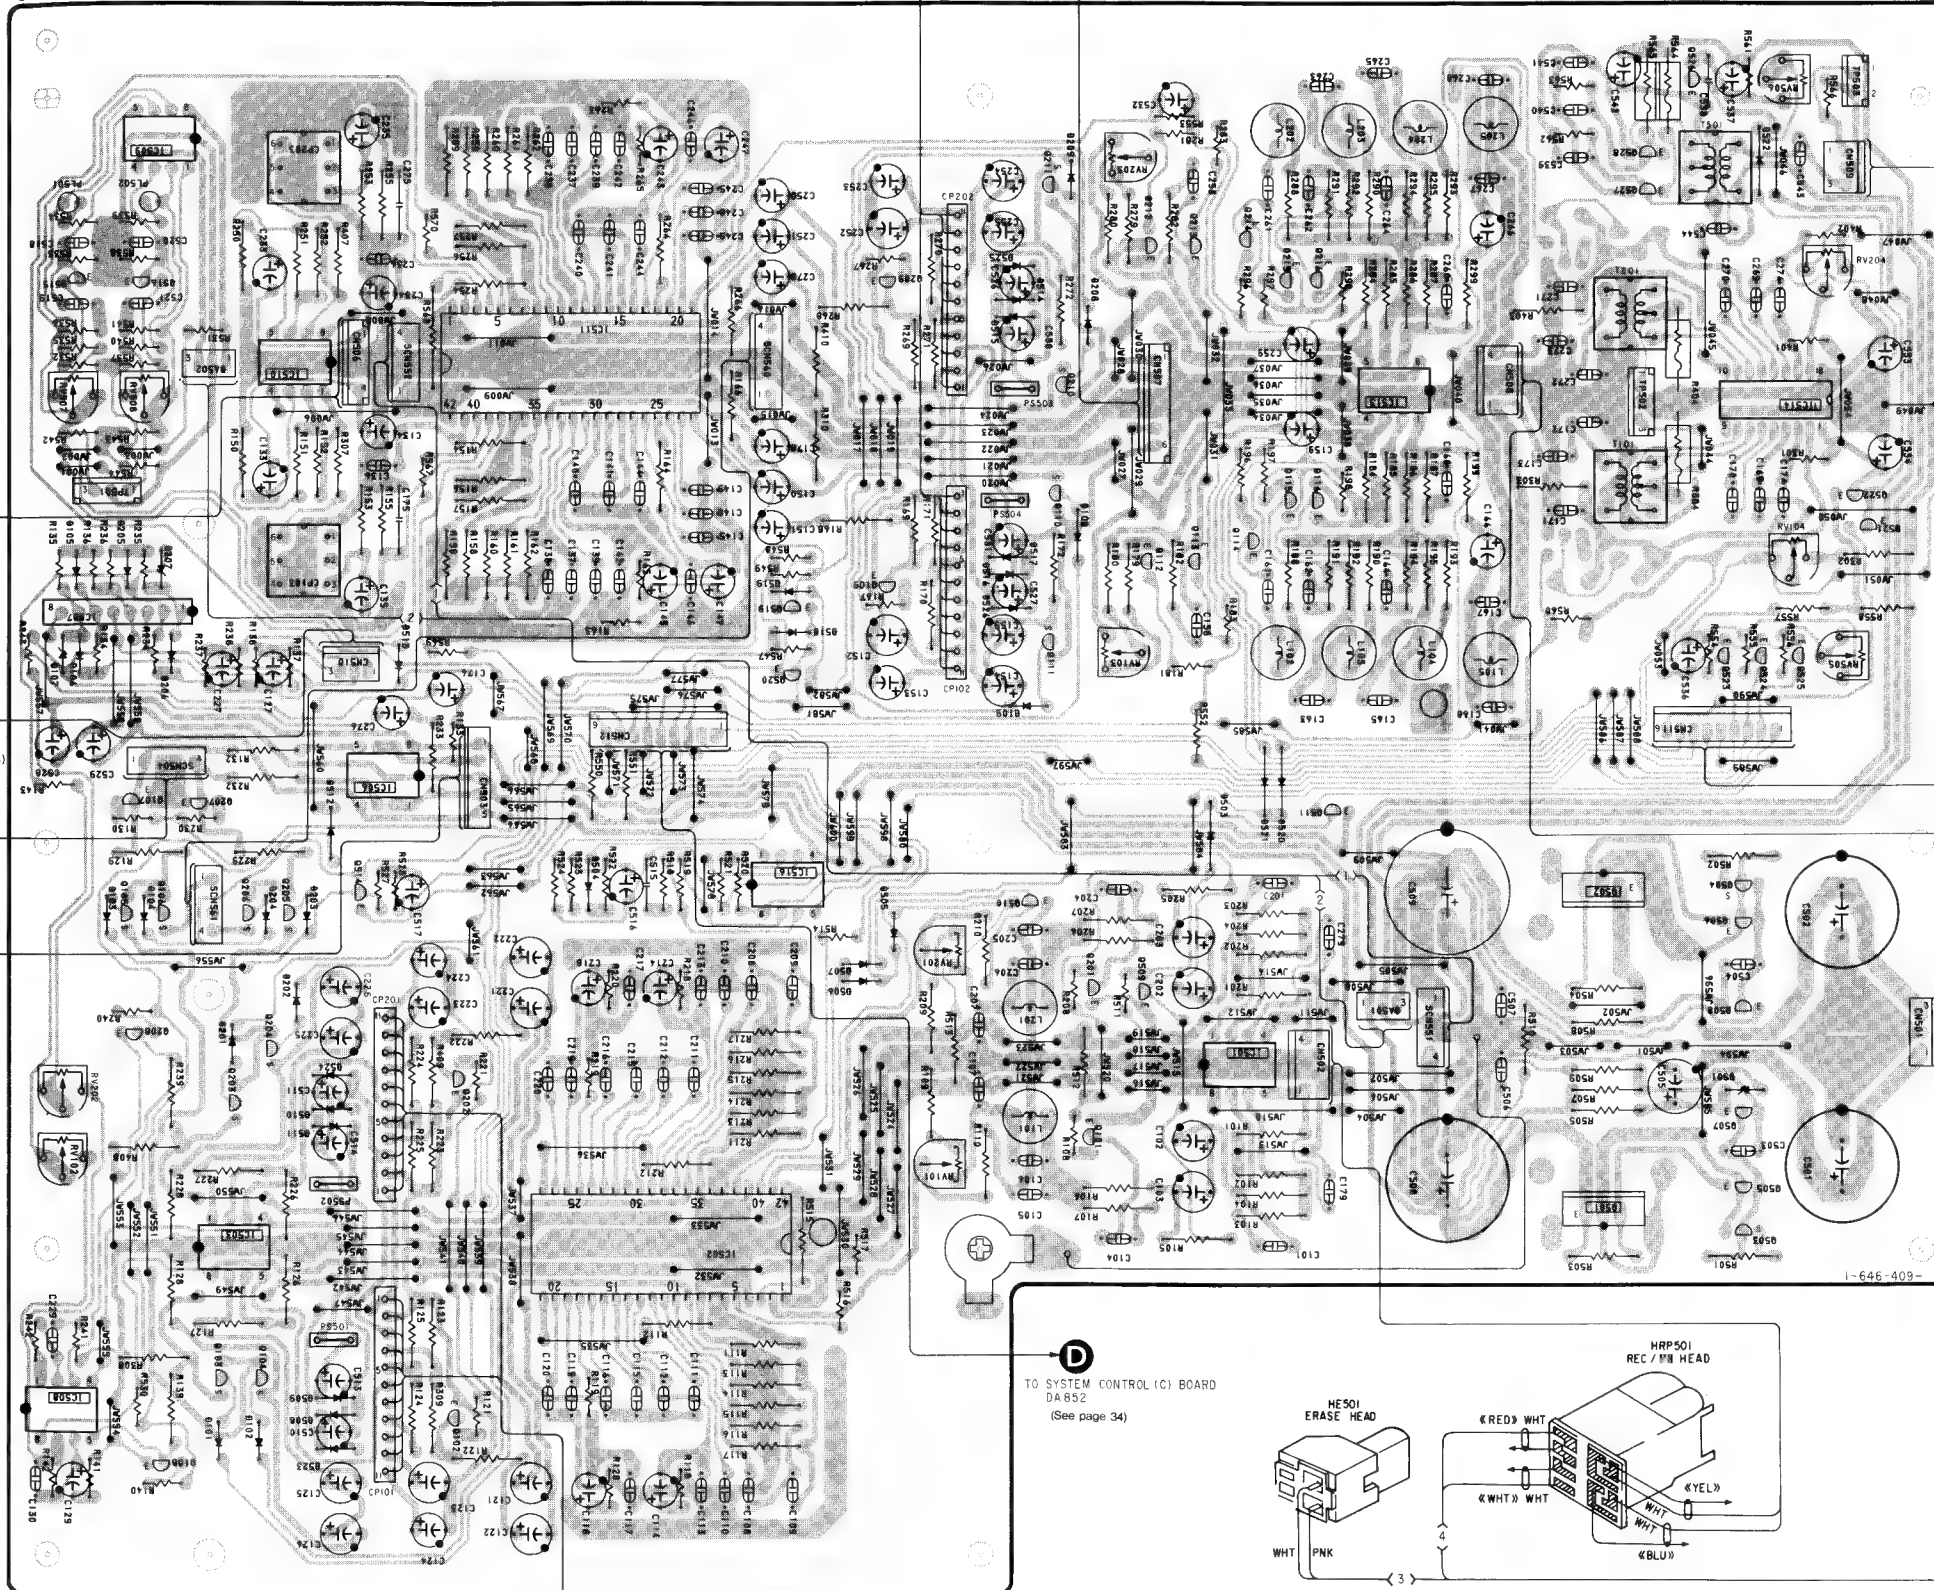


A
TO SYSTEM CONTROL (B) BOARD
DA 603
(See page 35)


B
TO SYSTEM CONTROL (A) BOARD
DA 604
(See page 33)

C
TO SYSTEM CONTROL (A) BOARD
SCN 703
(See page 34)


D
TO SYSTEM CONTROL (C) BOARD
DA 652
(See page 34)

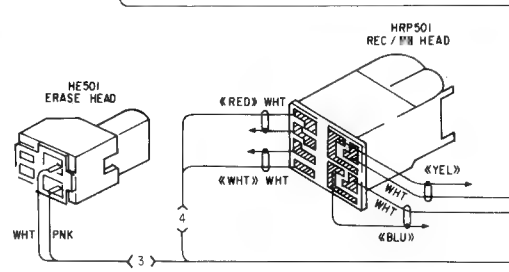

[DOLBY S BOARD] (A SIDE)

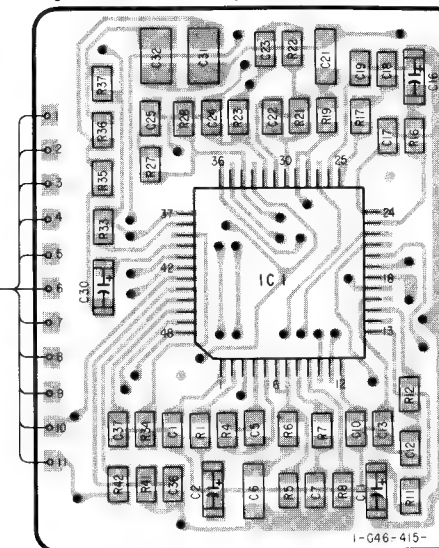

[DOLBY S BOARD] (B SIDE)

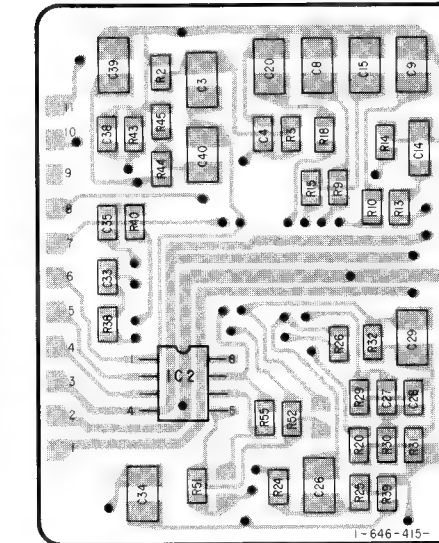


5-5. SCHEMATIC DIAGRAM —AUDIO Section—


- Note:**
- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
 - % : indicates tolerance.
 - \triangle : internal component.
 - \square : nonflammable resistor.
 - \square : fusible resistor.

Note:
The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

- — : B+ Line
- - - - : B- Line
- \square : adjustment for repair.
- Voltage is dc with respect to ground under no-signal conditions.
- Voltages are taken with a VOM (Input Impedance $10\text{M}\Omega$). Voltage variations may be noted due to normal production tolerances.
- Signal path.
 \Rightarrow : PB
 \Rightarrow : REC

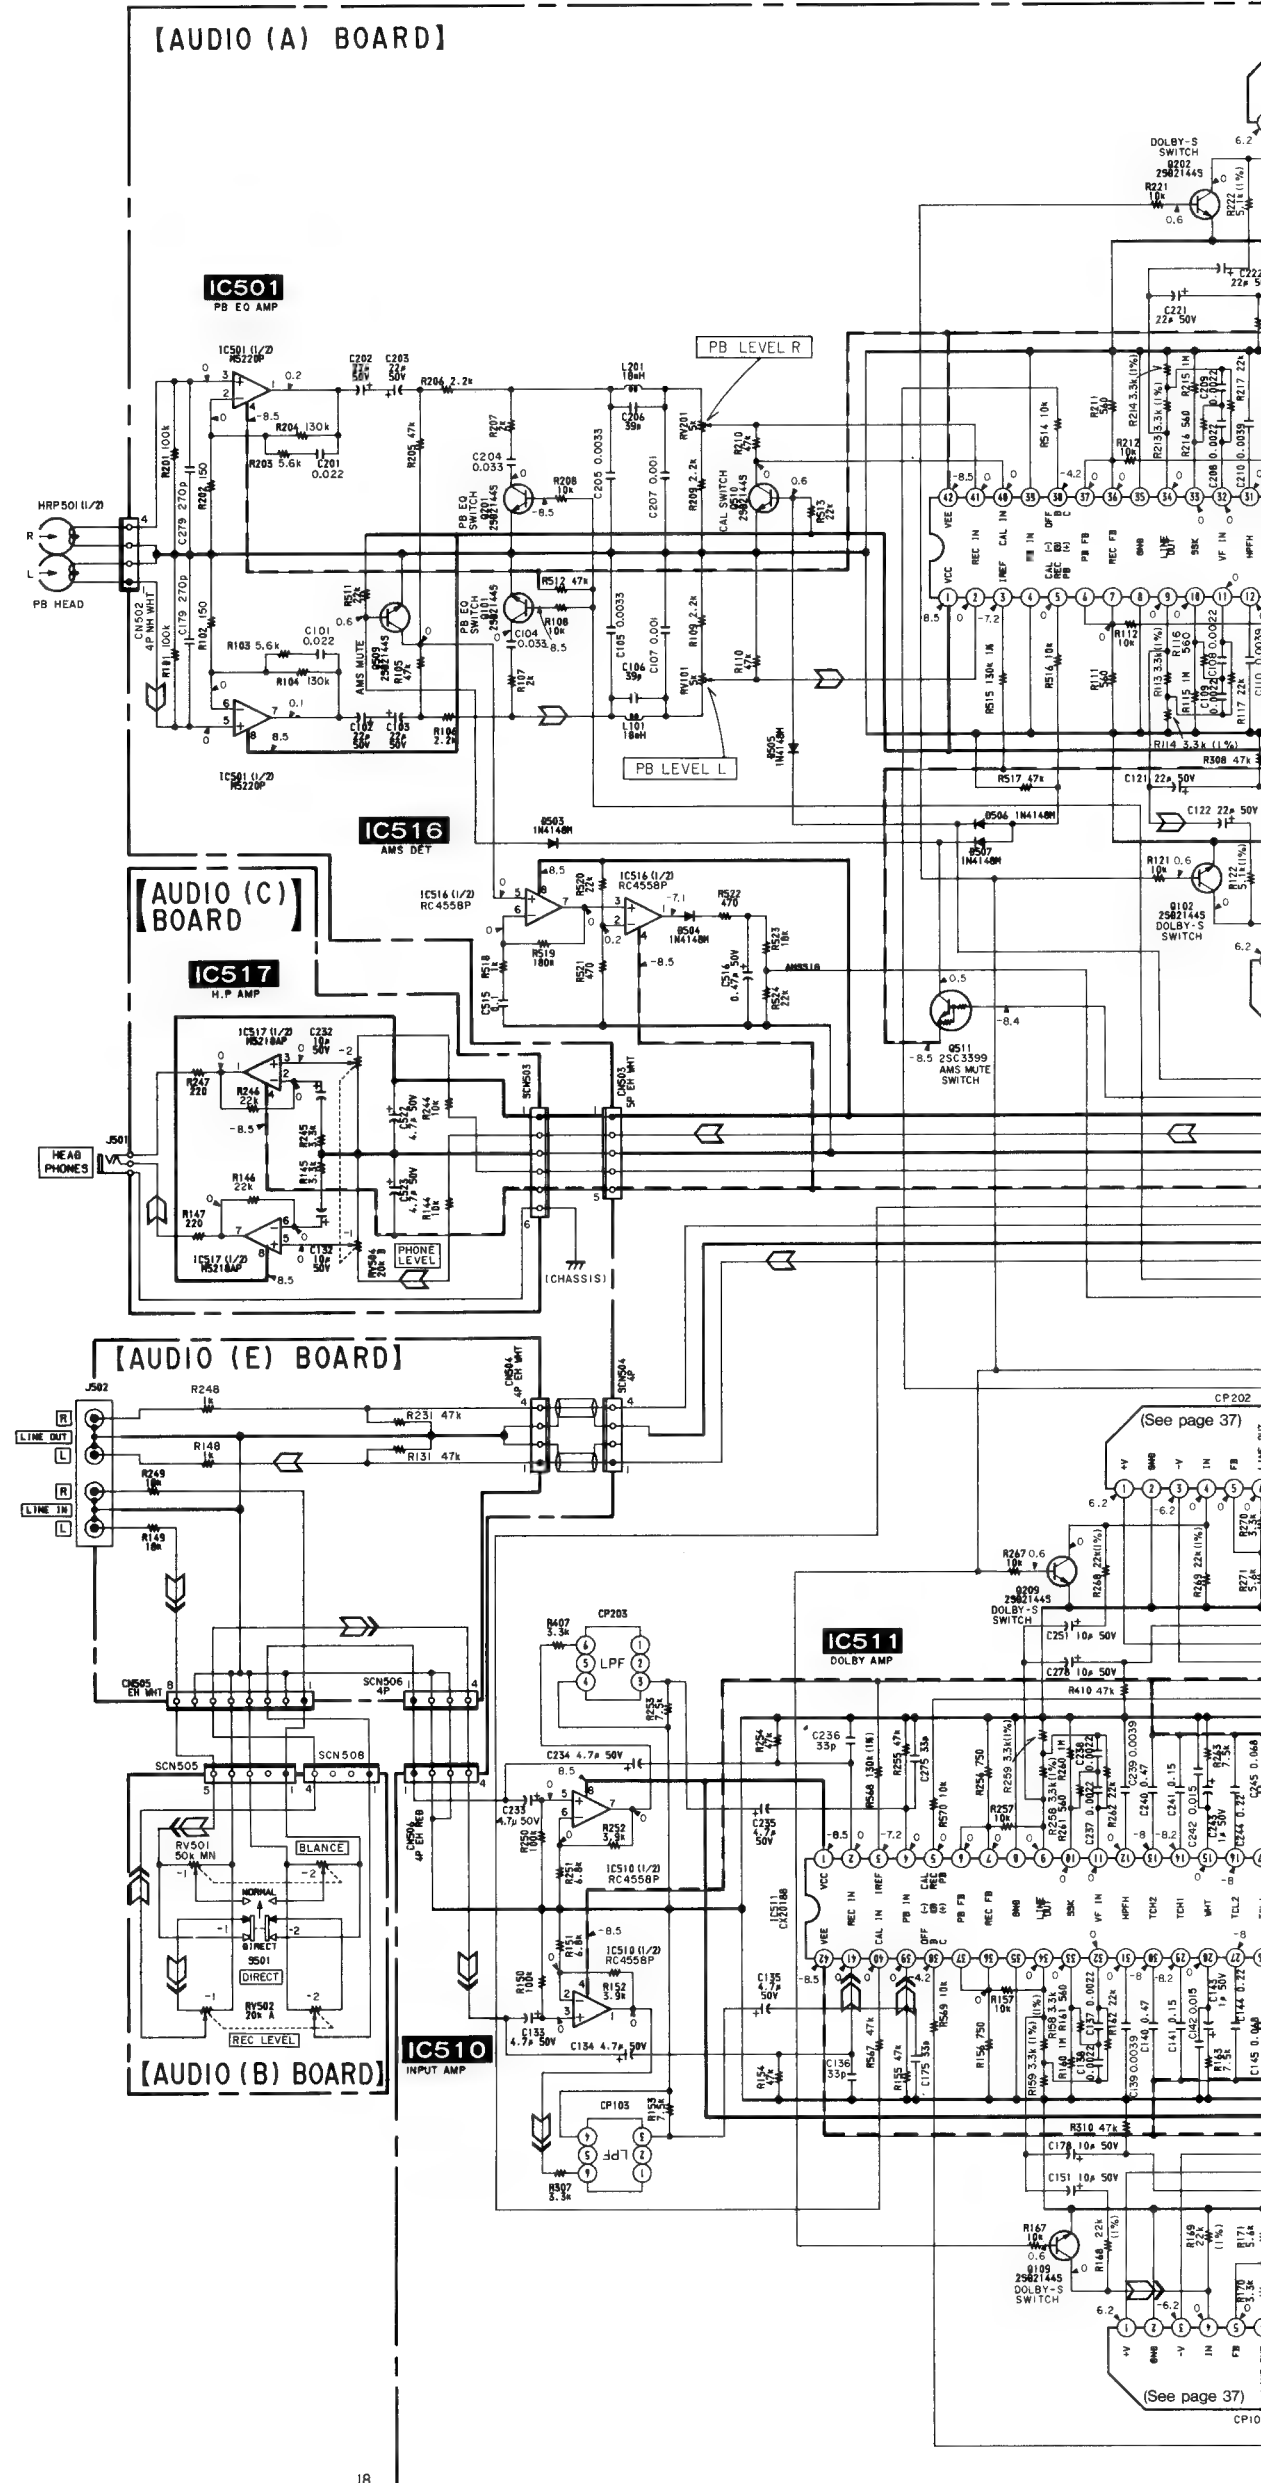




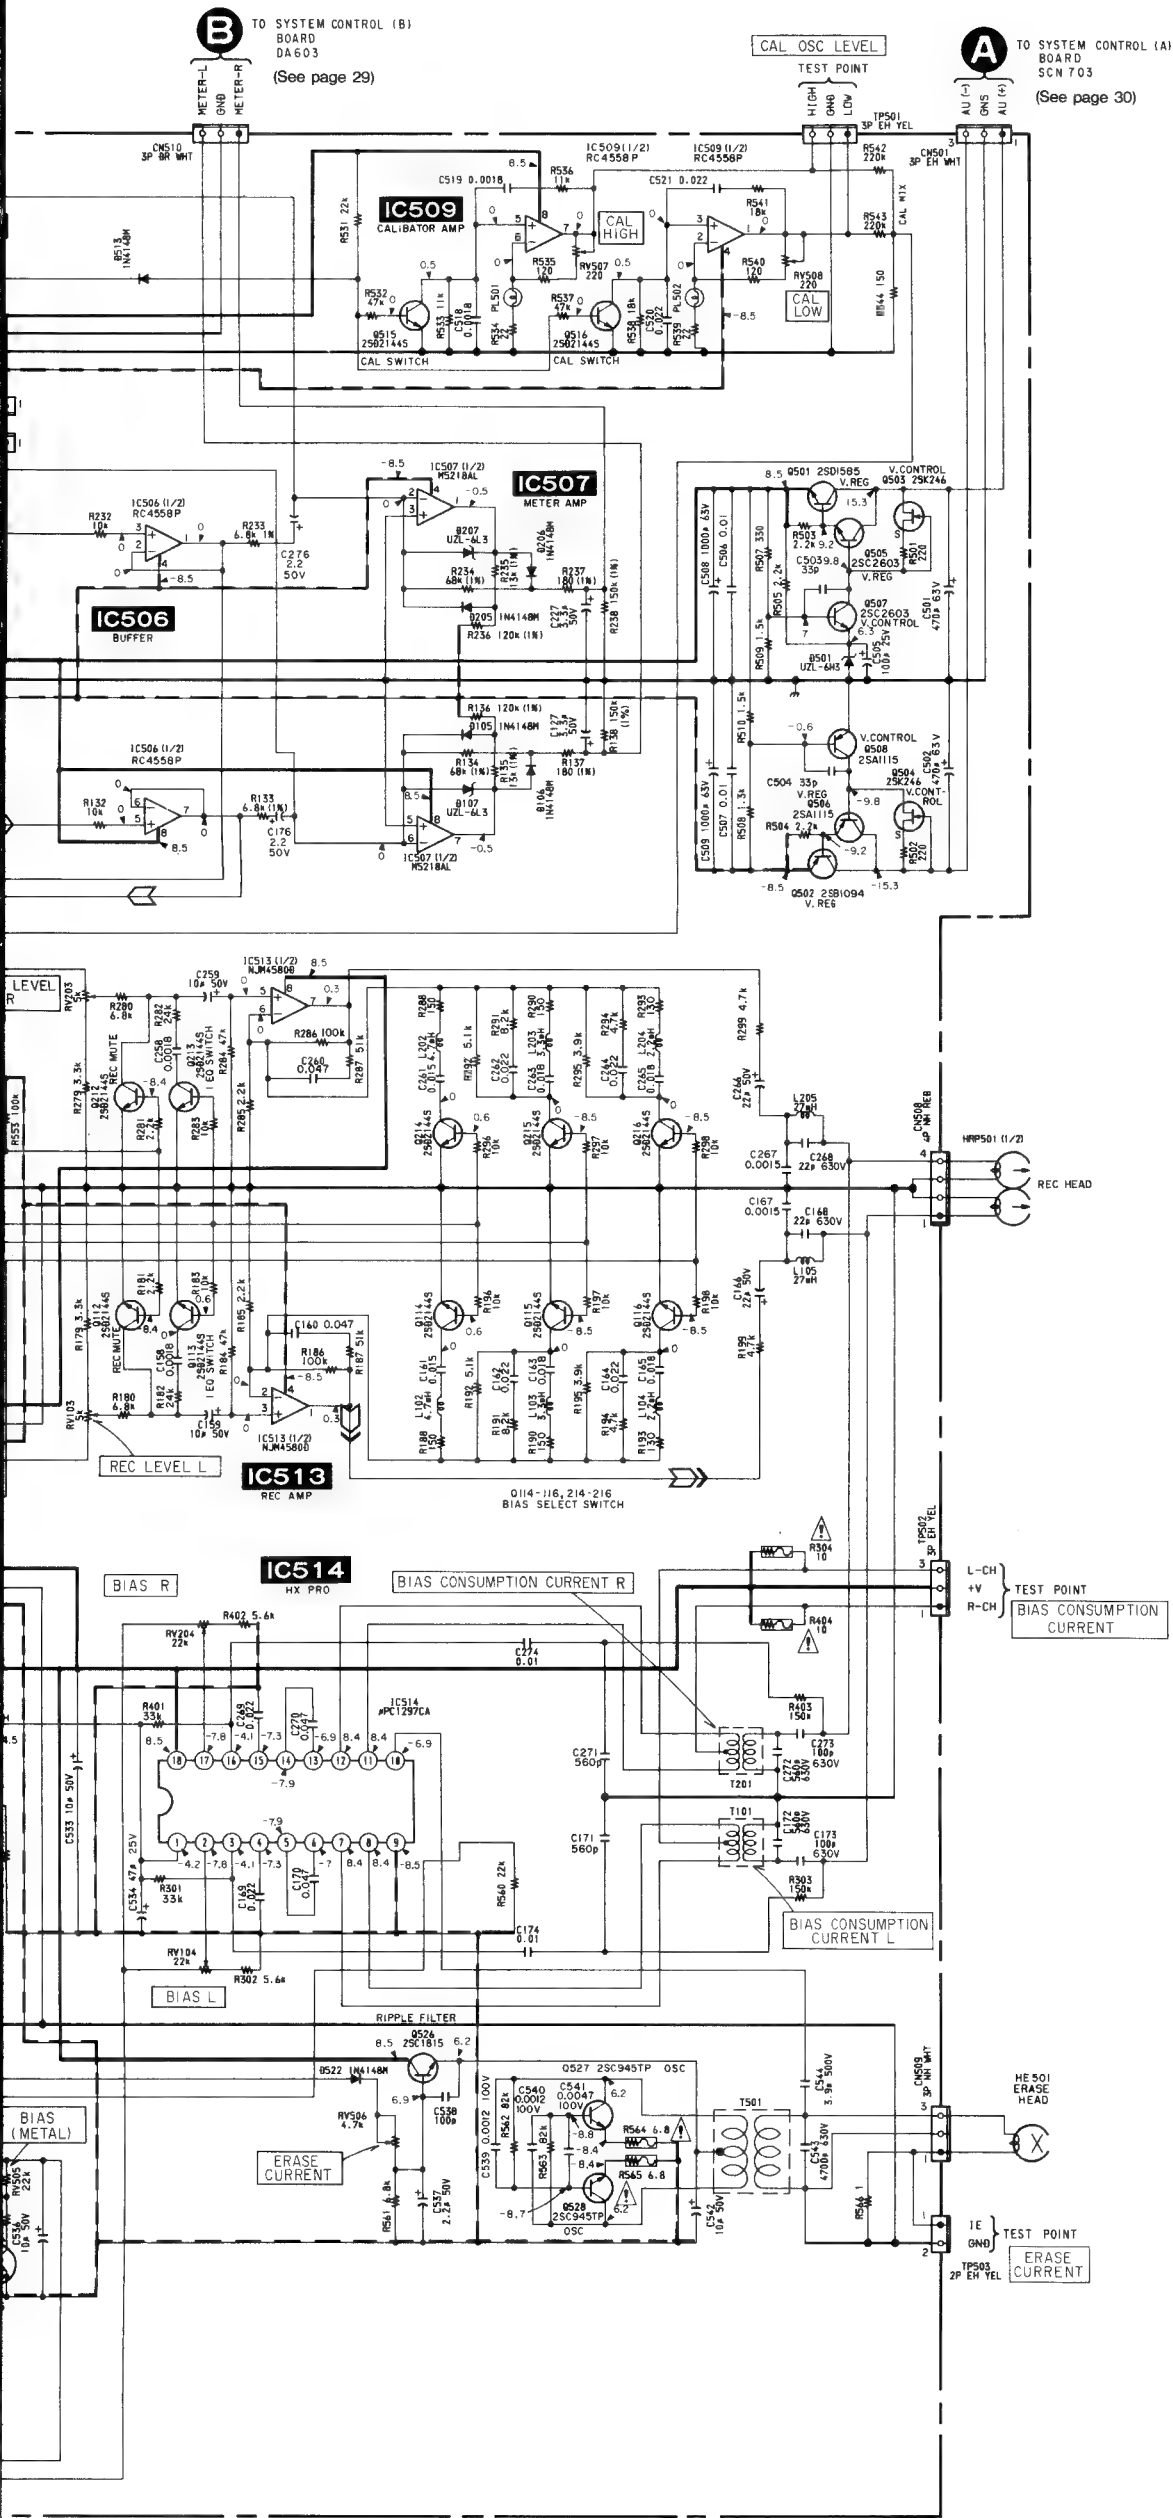


● IC Block Diagrams

IC514 μ PC1297CA

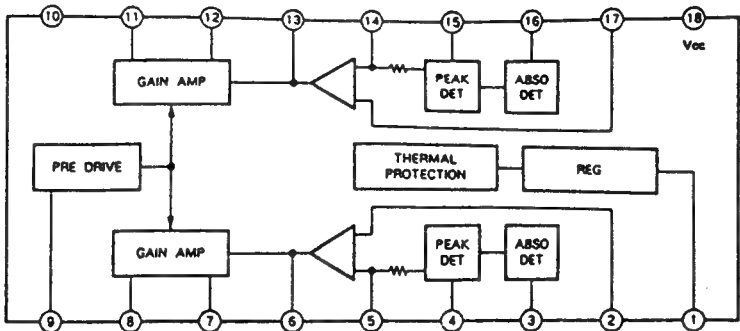



IC502, 511 CX20188

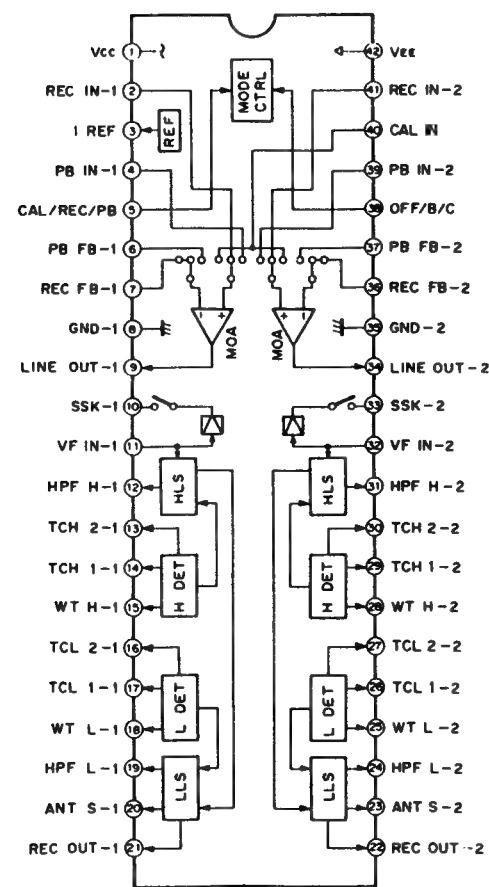


Pin. No.	Pin Name	Function
1	Vcc	Positive power supply
2, 41	REC IN	REC input
3	I REF	Reference current input
4, 39	PB IN	PLAYBACK input
5	CAL/REC/PB	CALIBRATION/REC/PLAYBACK switching
6, 37	PB FB	PLAYBACK feedback
7, 36	REC FB	REC feedback
8, 35	GND	GND in 2-power mode, Vcc/2 in 1-power mode
9, 34	LINE OUT	Line out (decode output)
10, 33	SSK	Spectral skewing switch
11, 32	VF IN	Encode circuit input
12, 31	HPF H	HLS high pass filter
13, 30	TCH 2	HLS detector time constant 2
14, 29	TCH 1	HLS detector time constant 1
15, 28	WT H	HLS weighting
16, 27	TCL 2	LLS detector time constant 2
17, 26	TCL 1	LLS detector time constant 1
18, 25	WT L	LLS weighting
19, 24	HPF L	LLS high pass filter
20, 23	ANT S	Anti-saturation
21, 22	RED OUT	REC output (encode output)
38	OFF/B/C	DOLBY NR OFF/B type/C type switching
40	CAL IN	CALIBRATION input
42	V _{EE}	Negative power supply in 2-power mode, GND in 1-power mode

5-6. SCHEMATIC DIAGRAM—SYSTEM CONTROL Section—

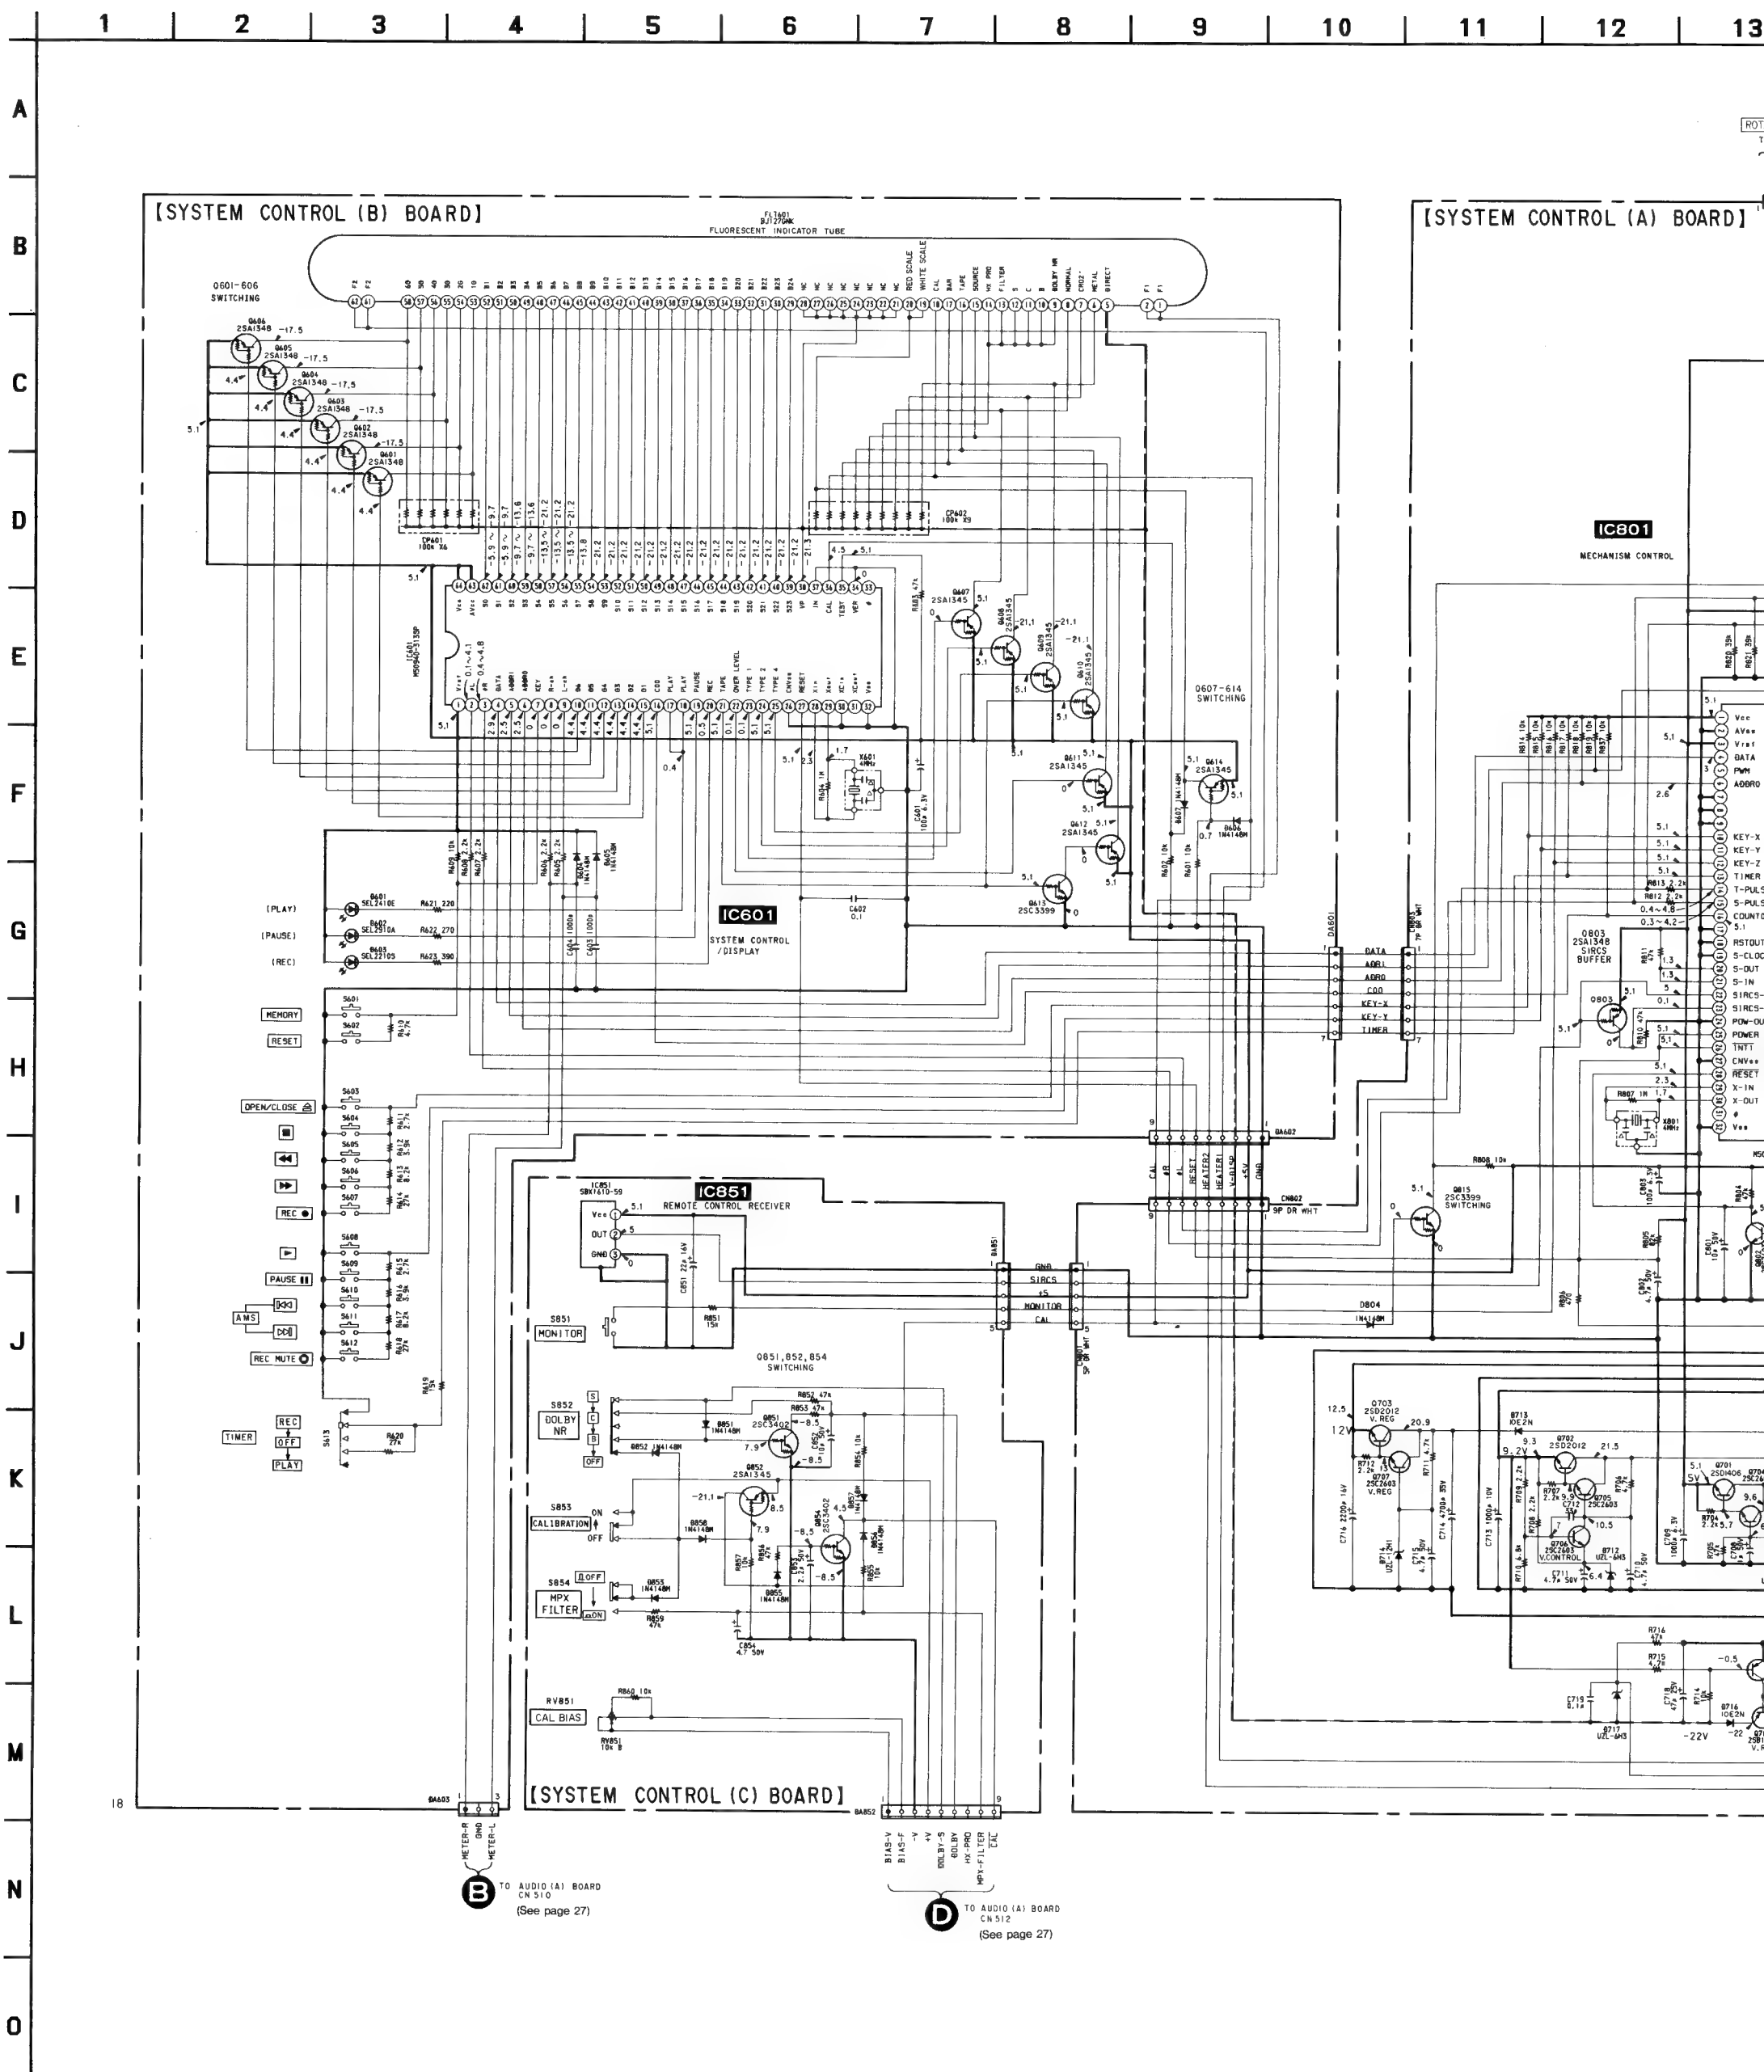


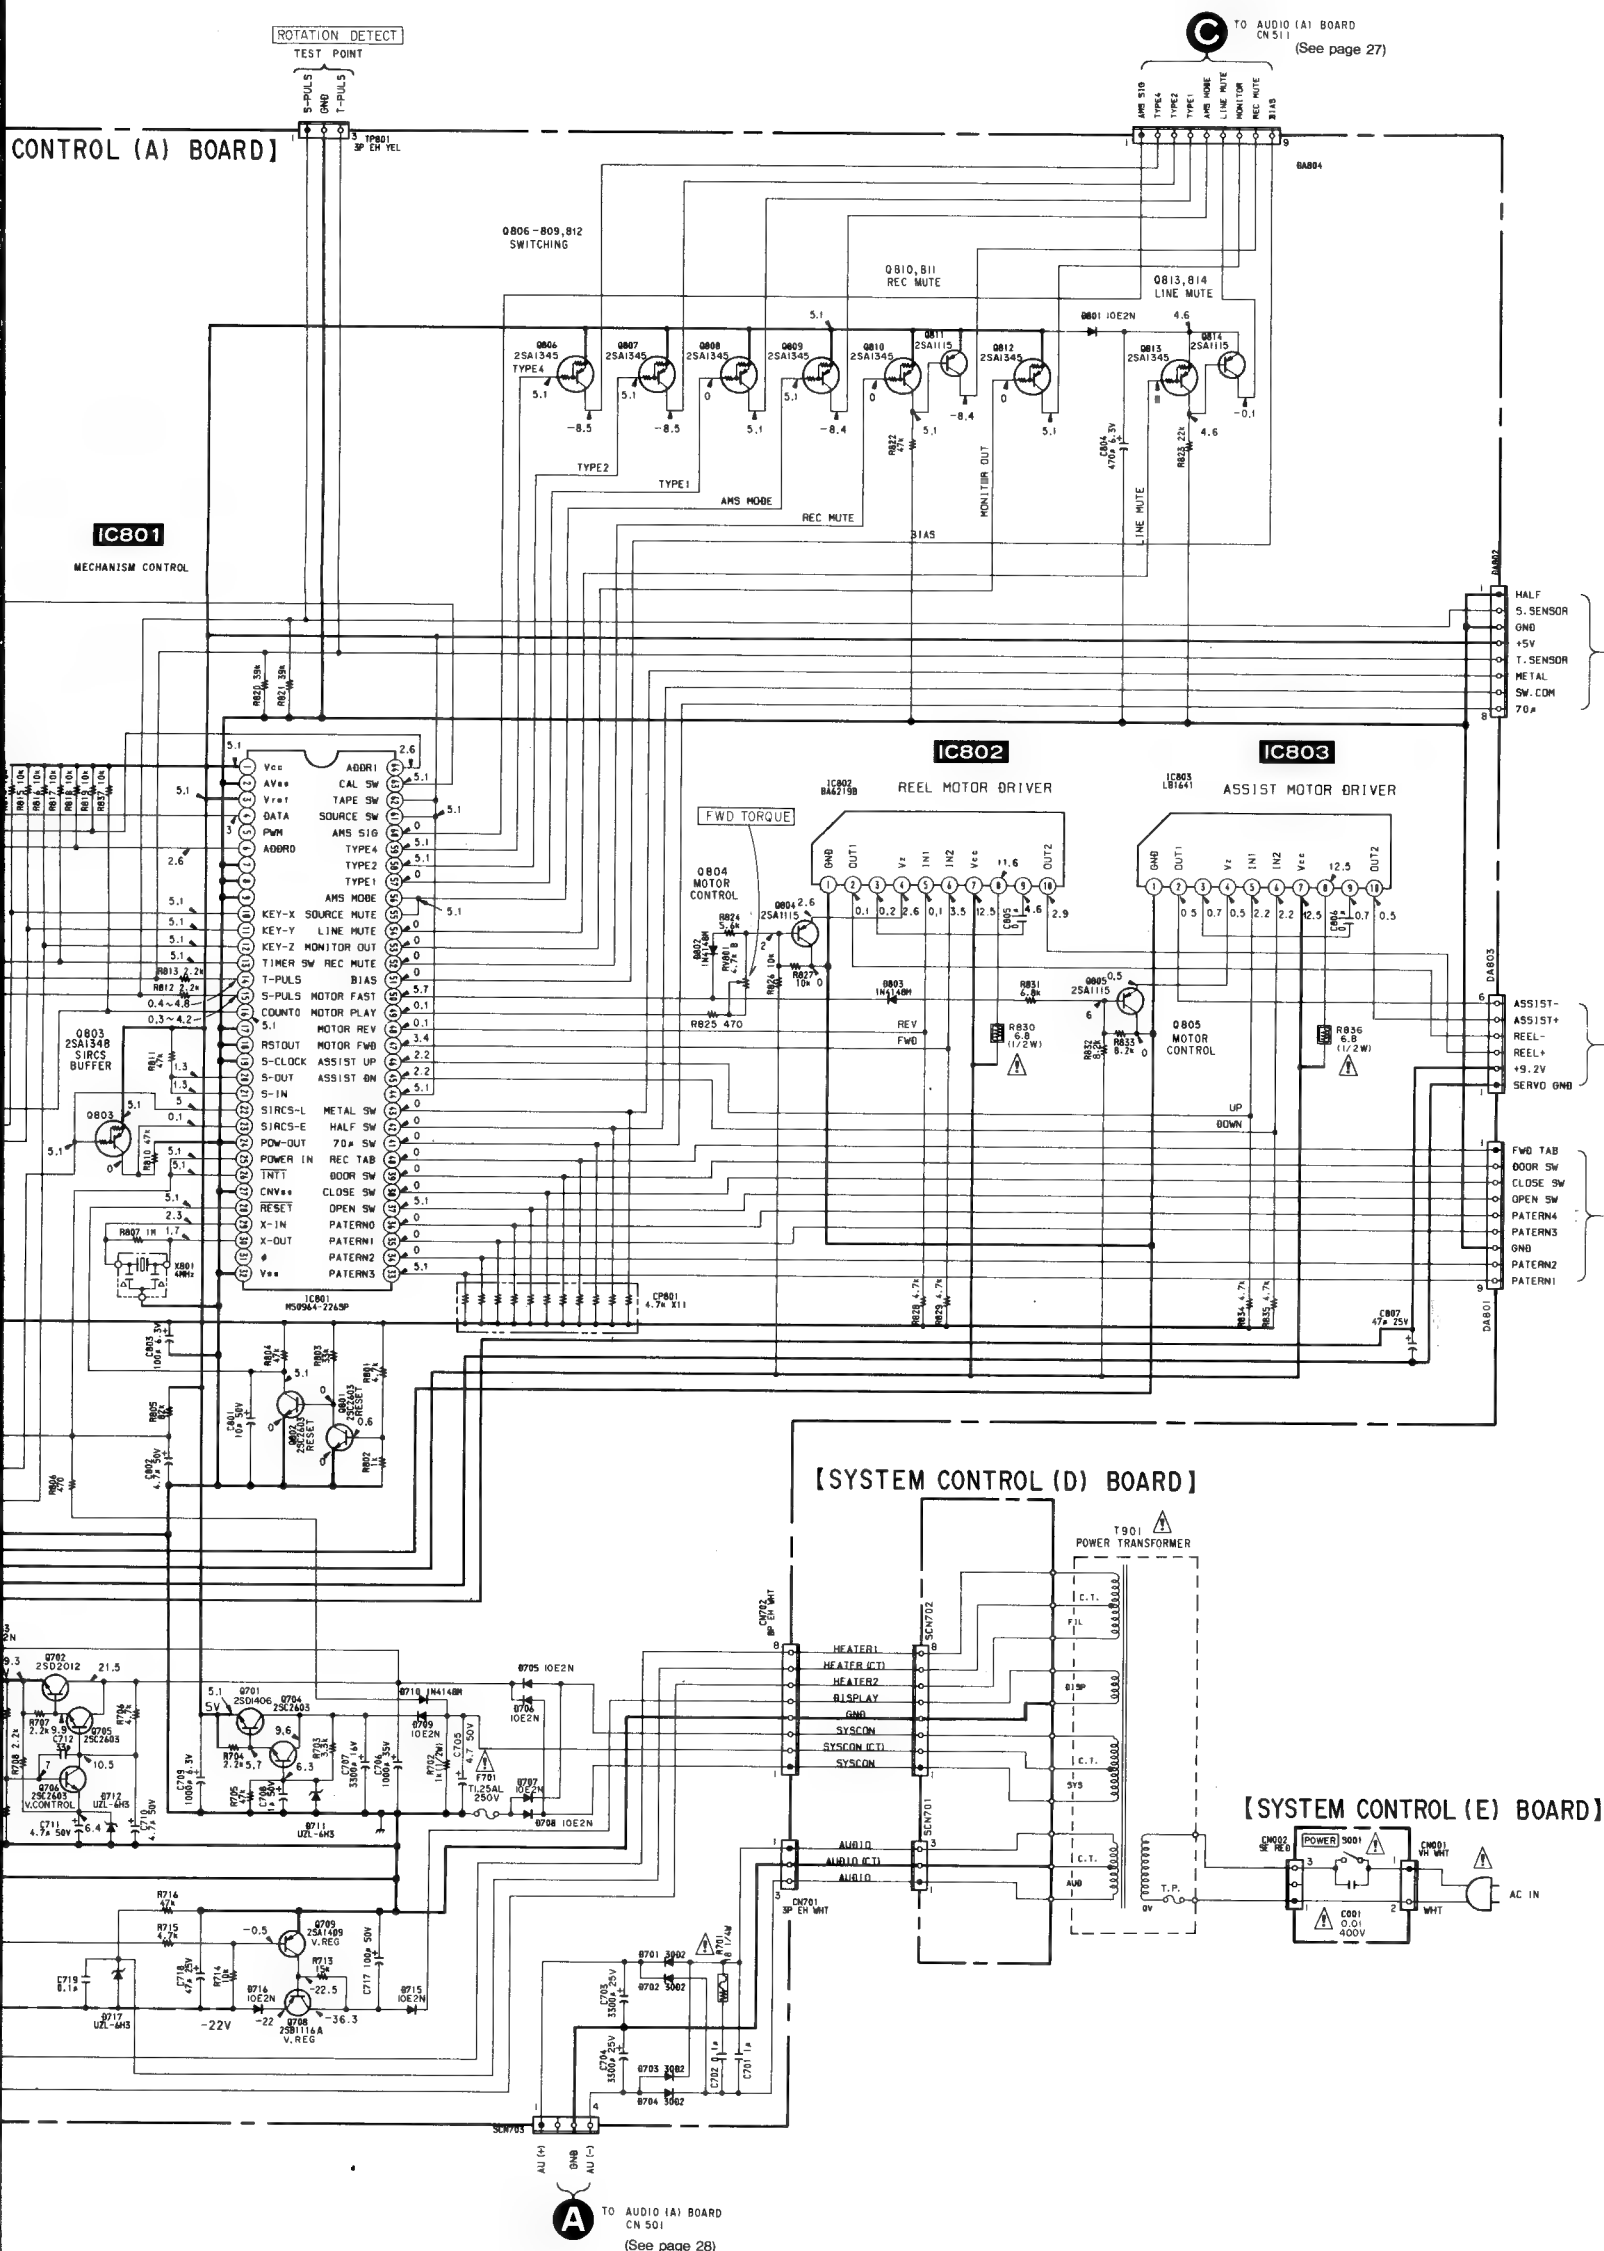


[CAPSTAN BOARD]

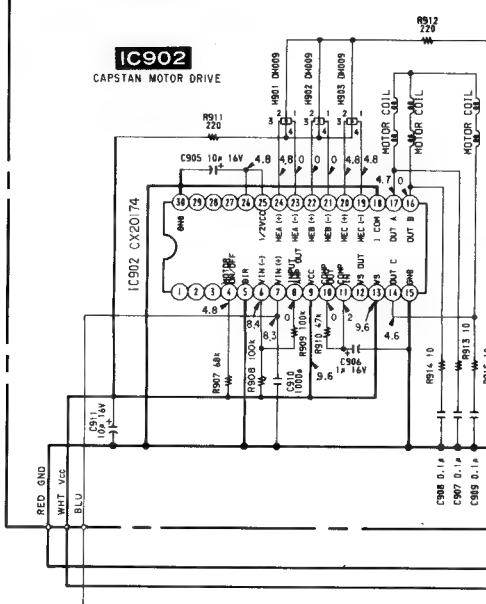


[REEL MOTOR BOARD]

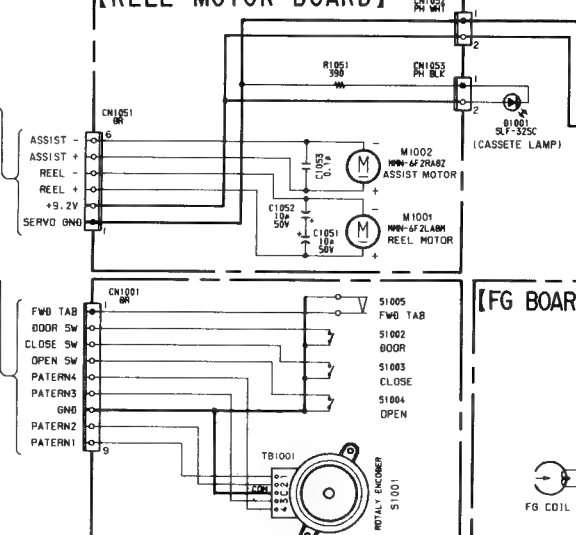


[SYSTEM CONTROL (D) BOARD]

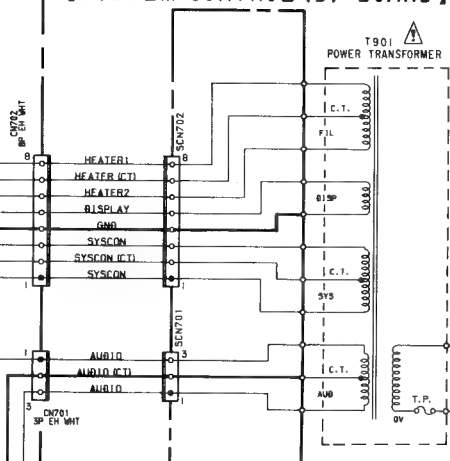

[SYSTEM CONTROL (E) BOARD]

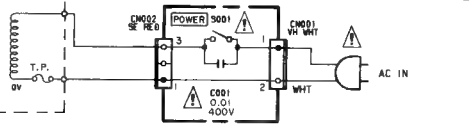


[MD BOARD]

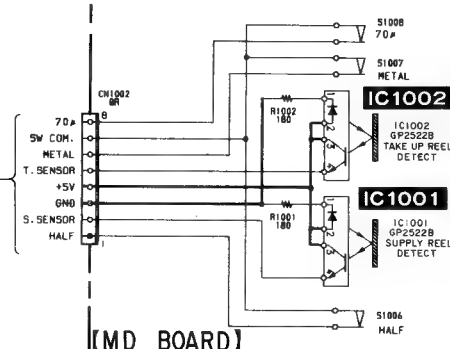


- Note:**
- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
 - % : indicates tolerance.
 - \triangle : internal component.
 - \square : nonflammable resistor.
 - \square : fusible resistor.

Note:
The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.


[CAPSTAN BOARD]

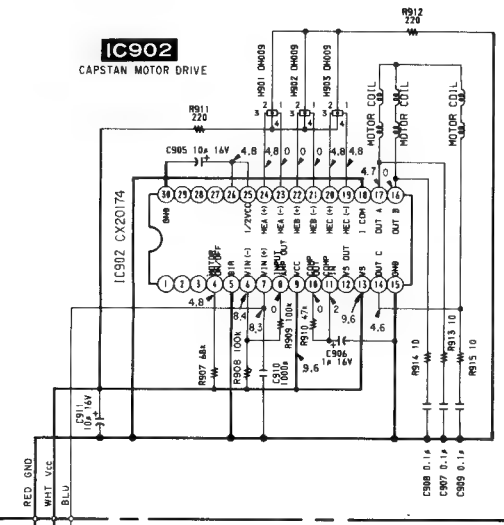



[REEL MOTOR BOARD]

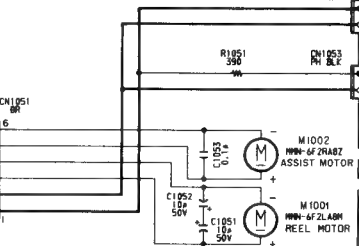

[COMPARATOR BOARD]

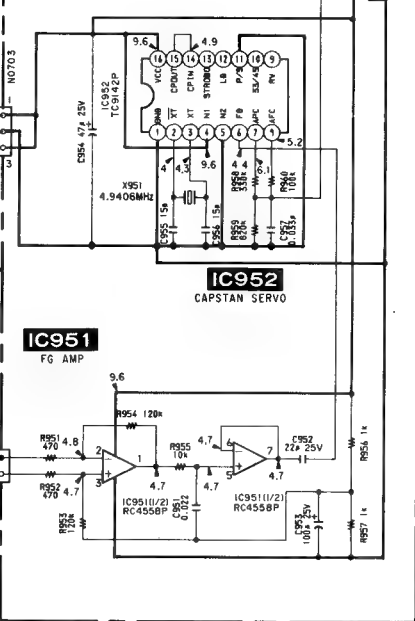


[FG BOARD]

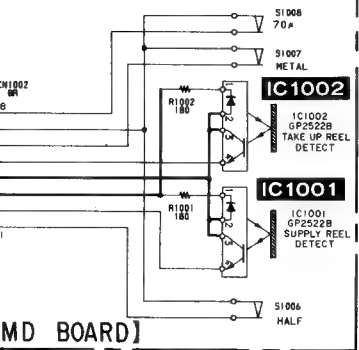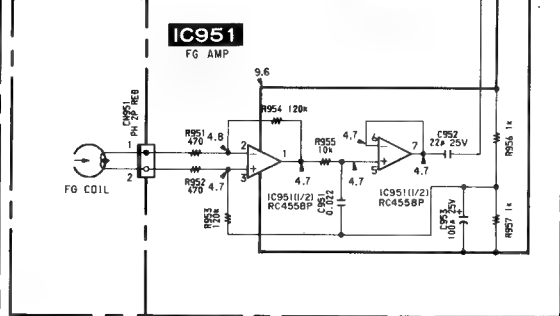


● IC Block Diagrams


IC902 CX20174

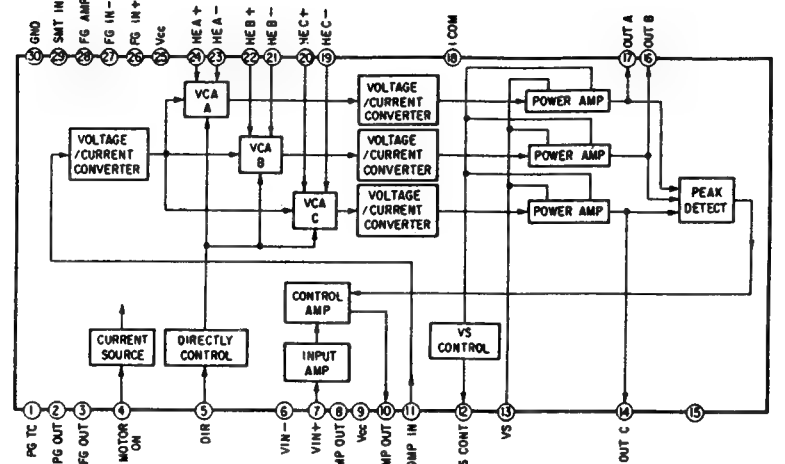

IC802 BA6219B IC803 LB1641

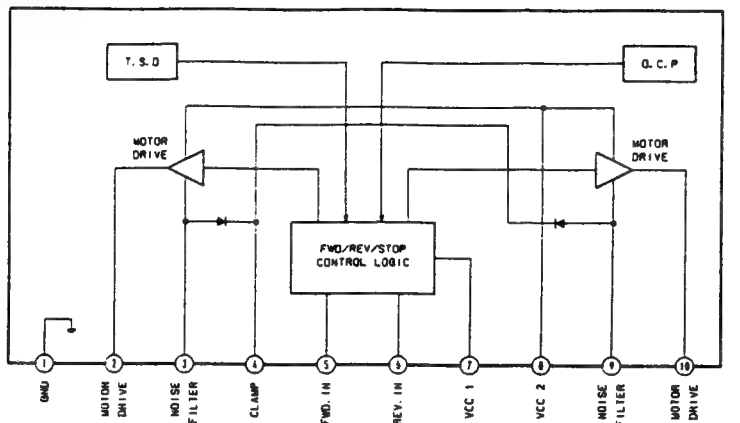

IC952 TC9142P

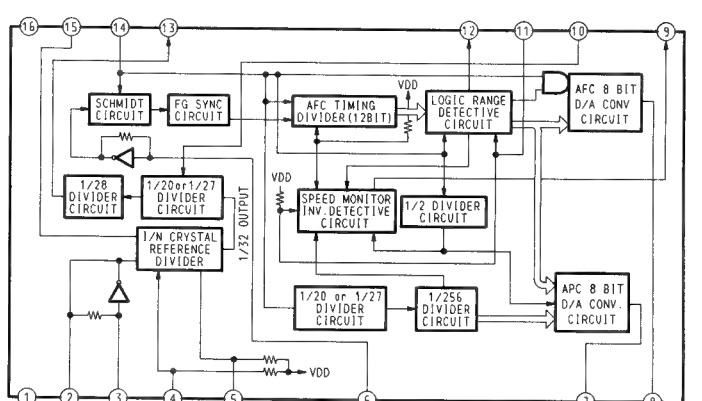

Note:
All capacitors are in μF unless otherwise noted. pF : μF
50WV or less are not indicated except for electrolytics
and tantalums.
All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise
specified.
% : indicates tolerance.
 Δ : internal component.
 \square : nonflammable resistor.
 \square : fusible resistor.

Note:
The components identi-
fied by mark Δ or dot-
ted line with mark Δ
are critical for safety.
Replace only with part
number specified.


- : B+ Line
- : B- Line
- : adjustment for repair.
- Voltage is dc with respect to ground
under no-signal conditions.
- Voltages are taken with a VOM (Input Impedance $10\text{M}\Omega$).
Voltage variations may be noted due to normal produc-
tion tolerances.

• Semiconductor Location


Ref. No.	Location	Ref. No.	Location
D601	I-16	IC1001	H-10
D602	J-16	IC1002	H-9
D603	J-14		
D604	H-18	Q601	G-18
D605	H-18	Q602	G-18
D606	H-14	Q603	G-18
D607	G-16	Q604	H-18
D701	B-7	Q605	H-18
D702	B-7	Q606	H-18
D703	B-8	Q607	G-14
D704	B-7	Q608	G-14
D705	C-7	Q609	H-14
D706	C-7	Q610	G-14
D707	B-6	Q611	G-15
D708	B-6	Q612	H-15
D709	C-7	Q613	H-15
D710	E-5	Q614	H-14
D711	C-9	Q701	C-9
D712	D-8	Q702	D-8
D713	E-7	Q703	E-8
D714	E-8	Q704	B-9
D715	D-6	Q705	D-9
D716	D-6	Q706	D-8
D717	D-6	Q707	E-9
D801	D-3	Q708	D-6
D802	D-3	Q709	D-6
D803	D-3	Q801	B-5
D804	E-3	Q802	B-5
D851	A-11	Q803	B-4
D852	B-11	Q804	D-4
D853	B-11	Q805	D-4
D855	C-11	Q806	D-2
D856	E-12	Q807	D-2
D857	E-12	Q808	D-2
D858	B-12	Q809	D-2
D1001	G-3	Q810	D-3
		Q811	D-3
IC601	G-17	Q812	D-3
IC801	C-3	Q813	D-3
IC802	D-4	Q814	D-2
IC803	D-4	Q815	C-1
IC851	D-11	Q851	D-11
IC902	J-6	Q852	B-12
IC951	J-3	Q854	D-12
IC952	J-2		

Note:

- : parts extracted from the component side.
- : parts mounted on the conductor side.
- : Pattern on the side which is seen.

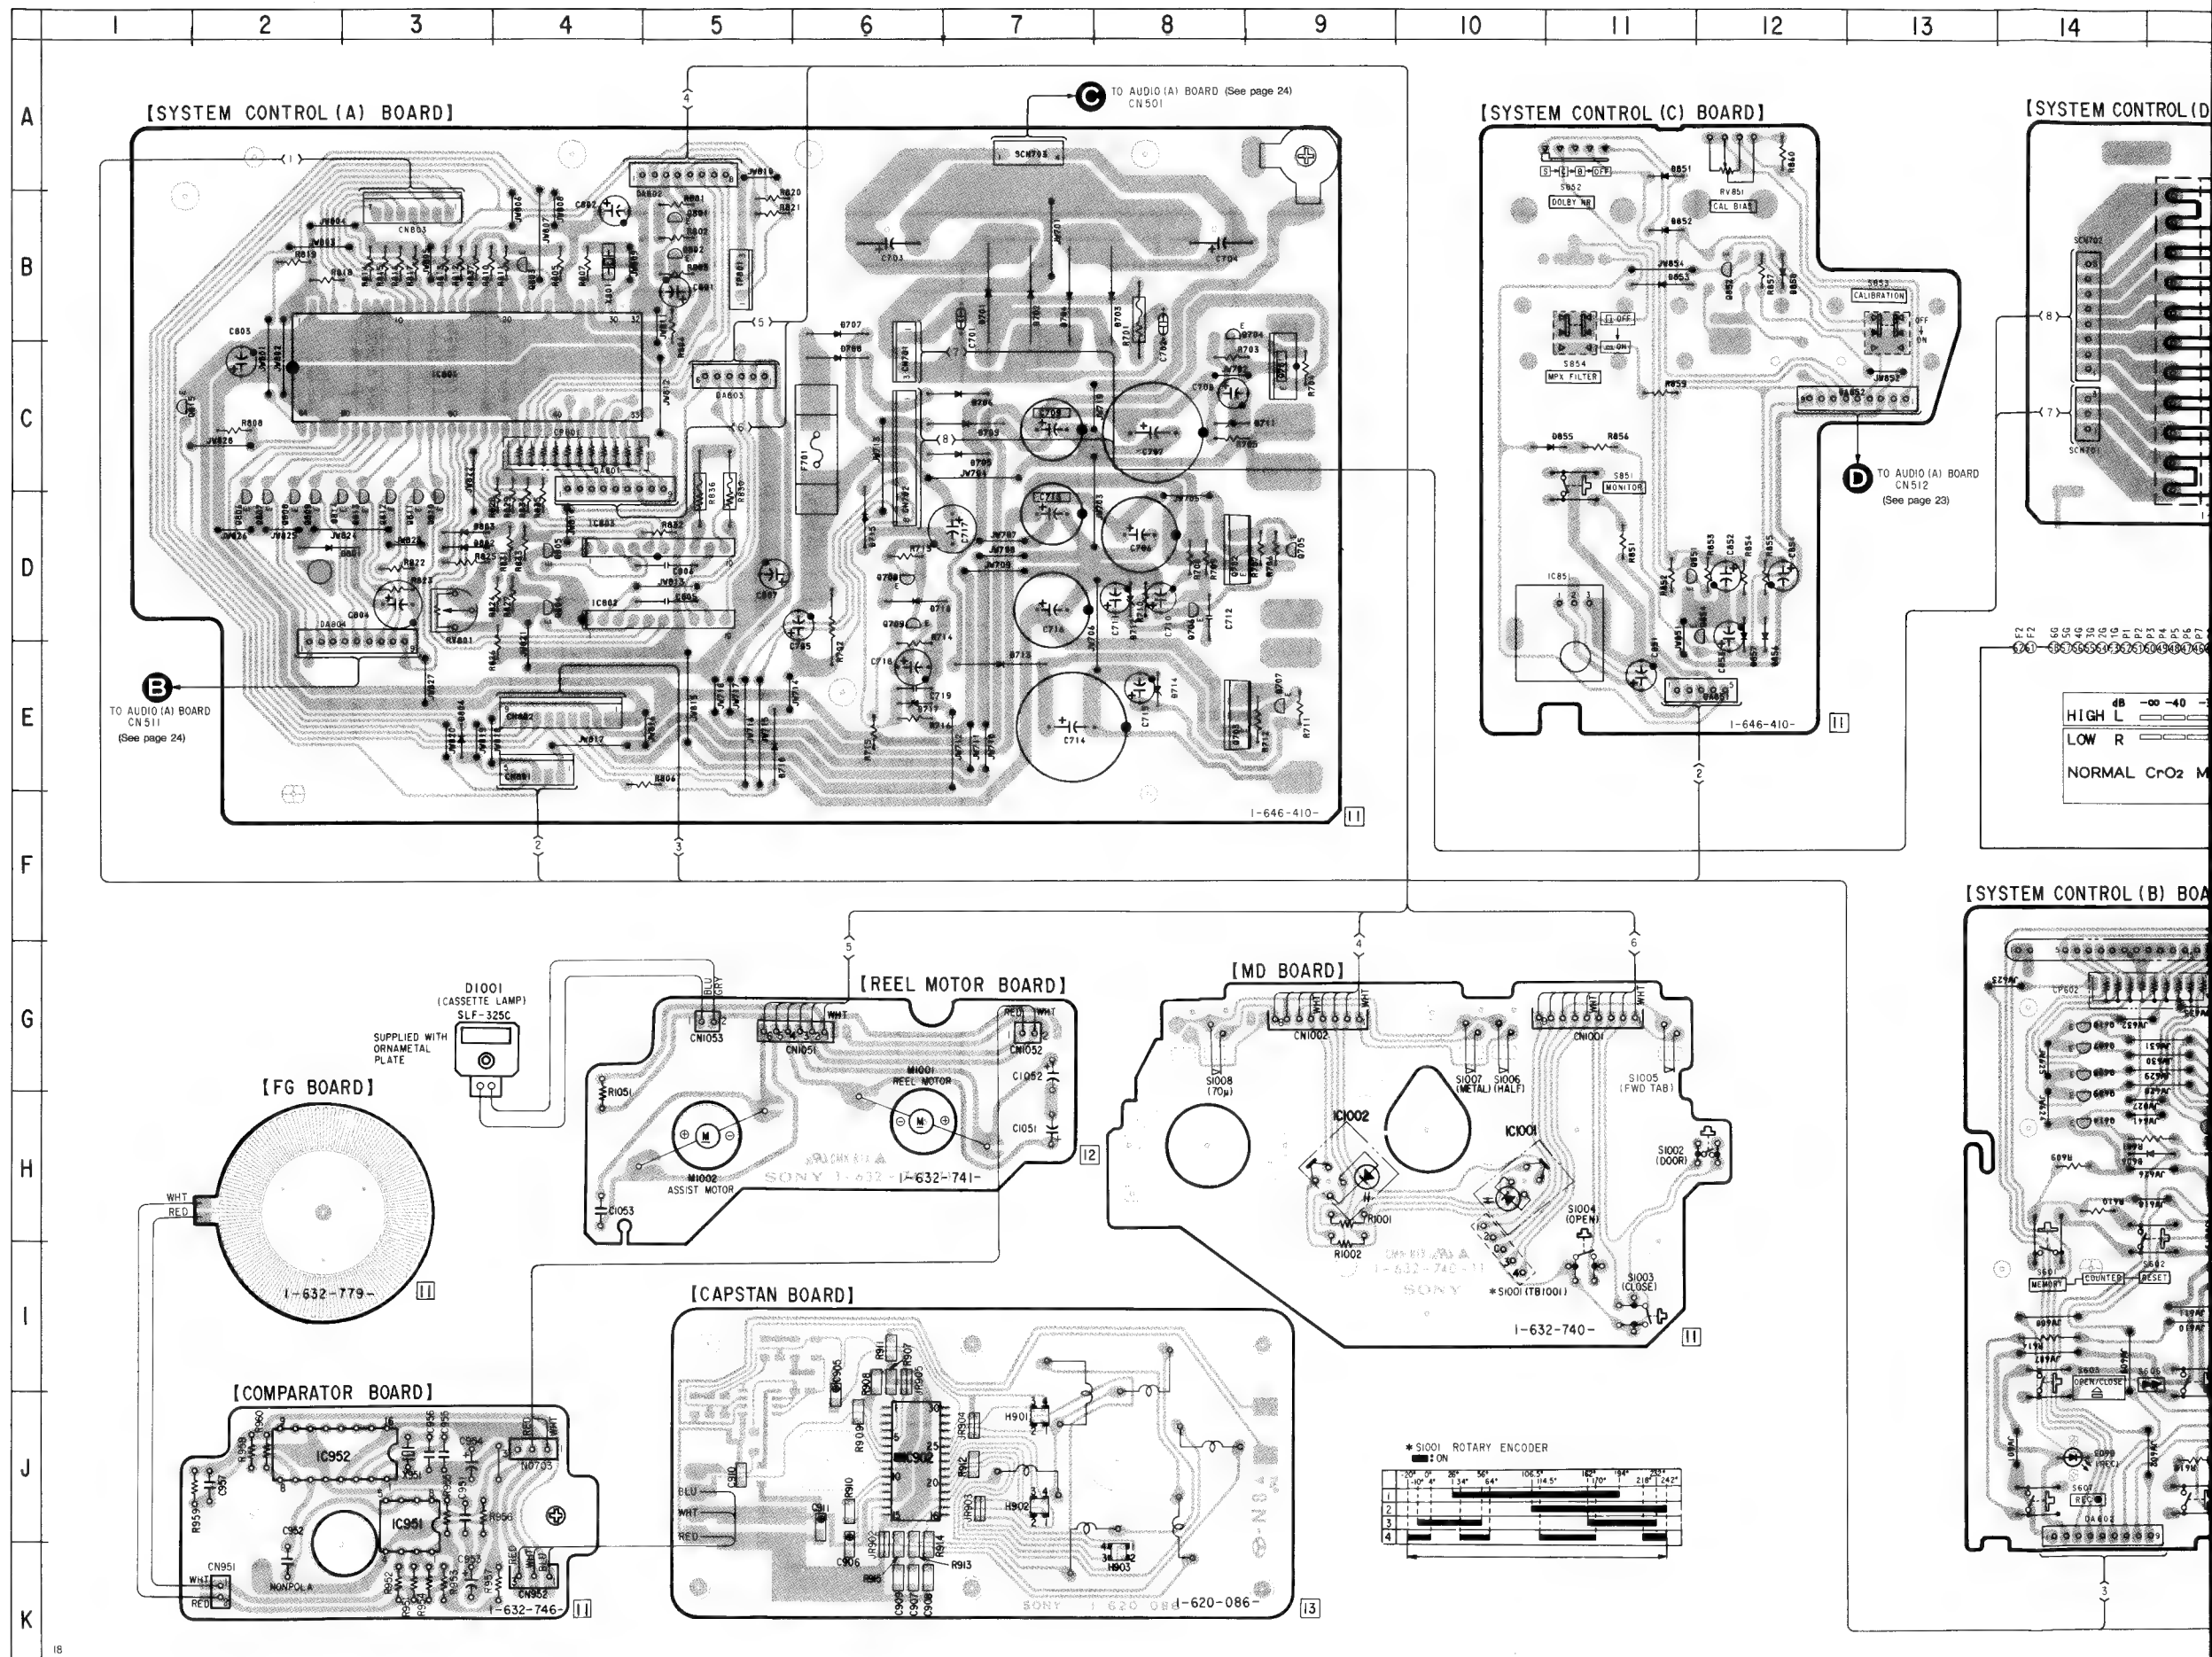


SYSTEM CONTROL Section— • See page 16 for Circuit Boards Location and Semiconductor Lead Layouts.

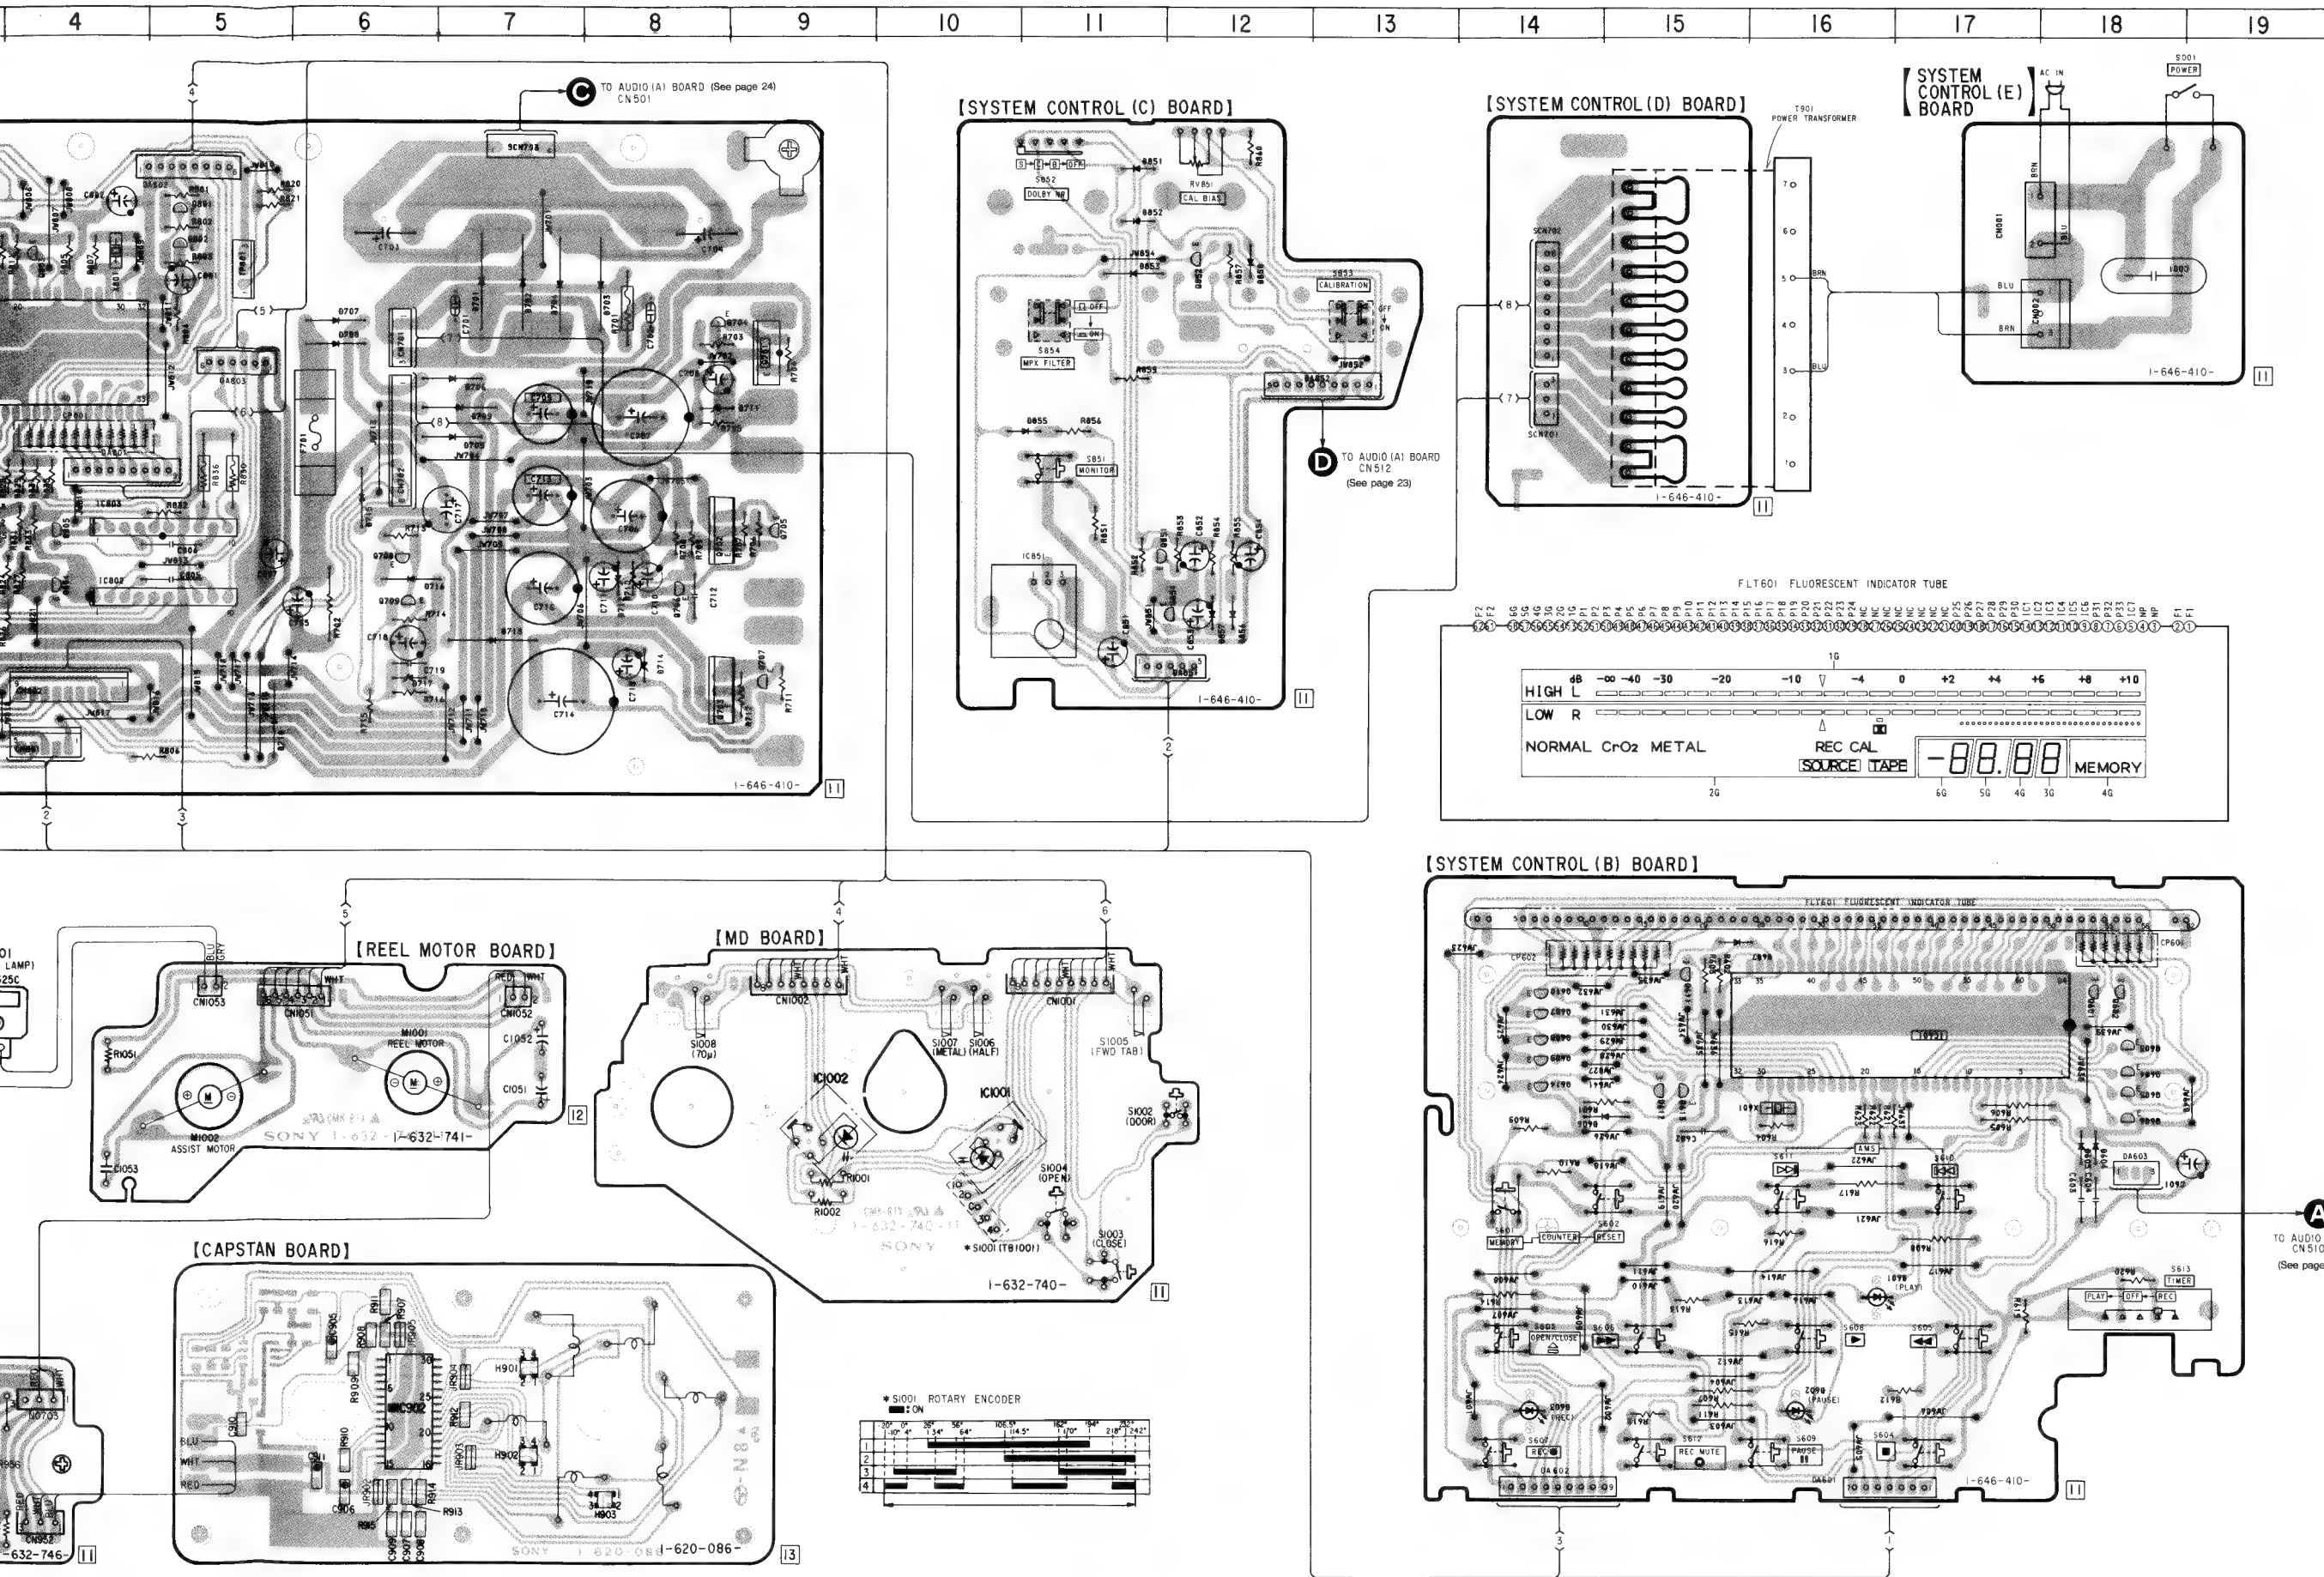

• IC Block Diagram


IC1 CXA1417Q

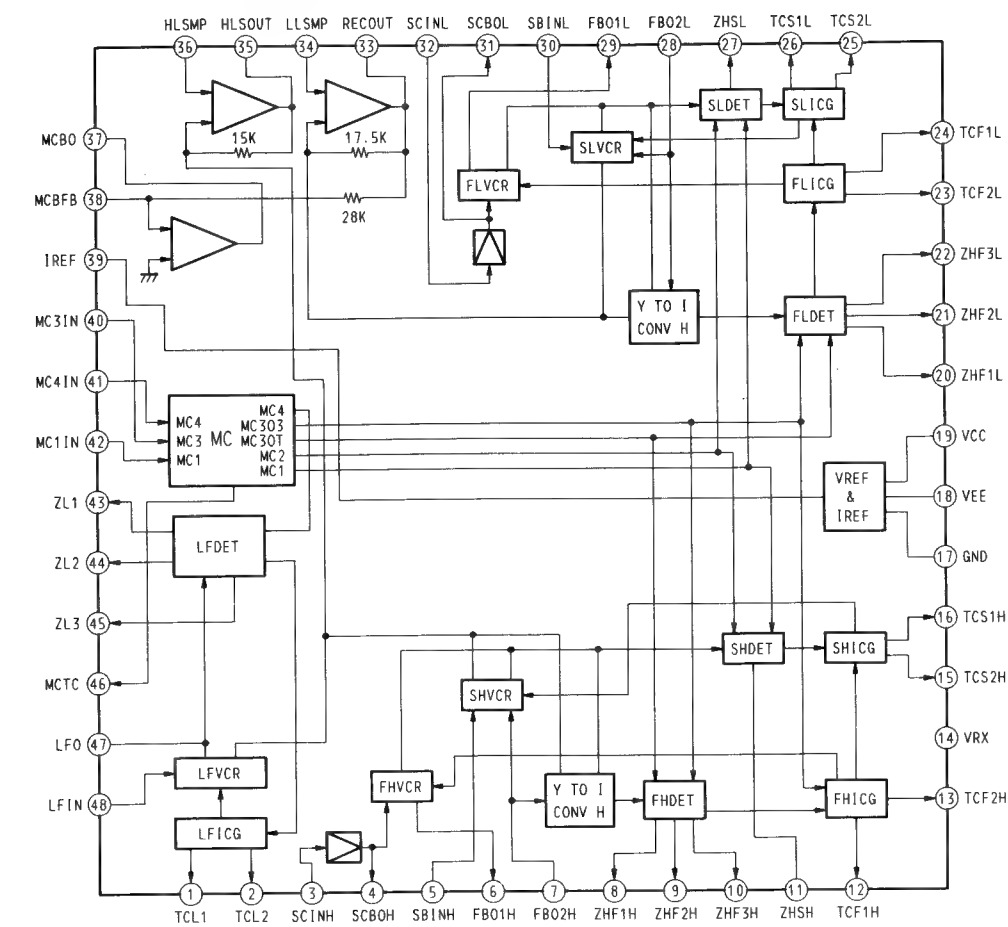

Note:


- All capacitors are in μF unless otherwise noted. pF : μF 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- % : indicates tolerance.
- — : B+ Line
- --- : B- Line
- Voltage is dc with respect to ground under no-signal conditions.
- Voltages are taken with a VOM (Input Impedance $10\text{M}\Omega$). Voltage variations may be noted due to normal production tolerances.
- Signal path.
 - ◁ : PB
 - ▷ : REC

5-8. SCHEMATIC DIAGRAM —DOLBY S Section—

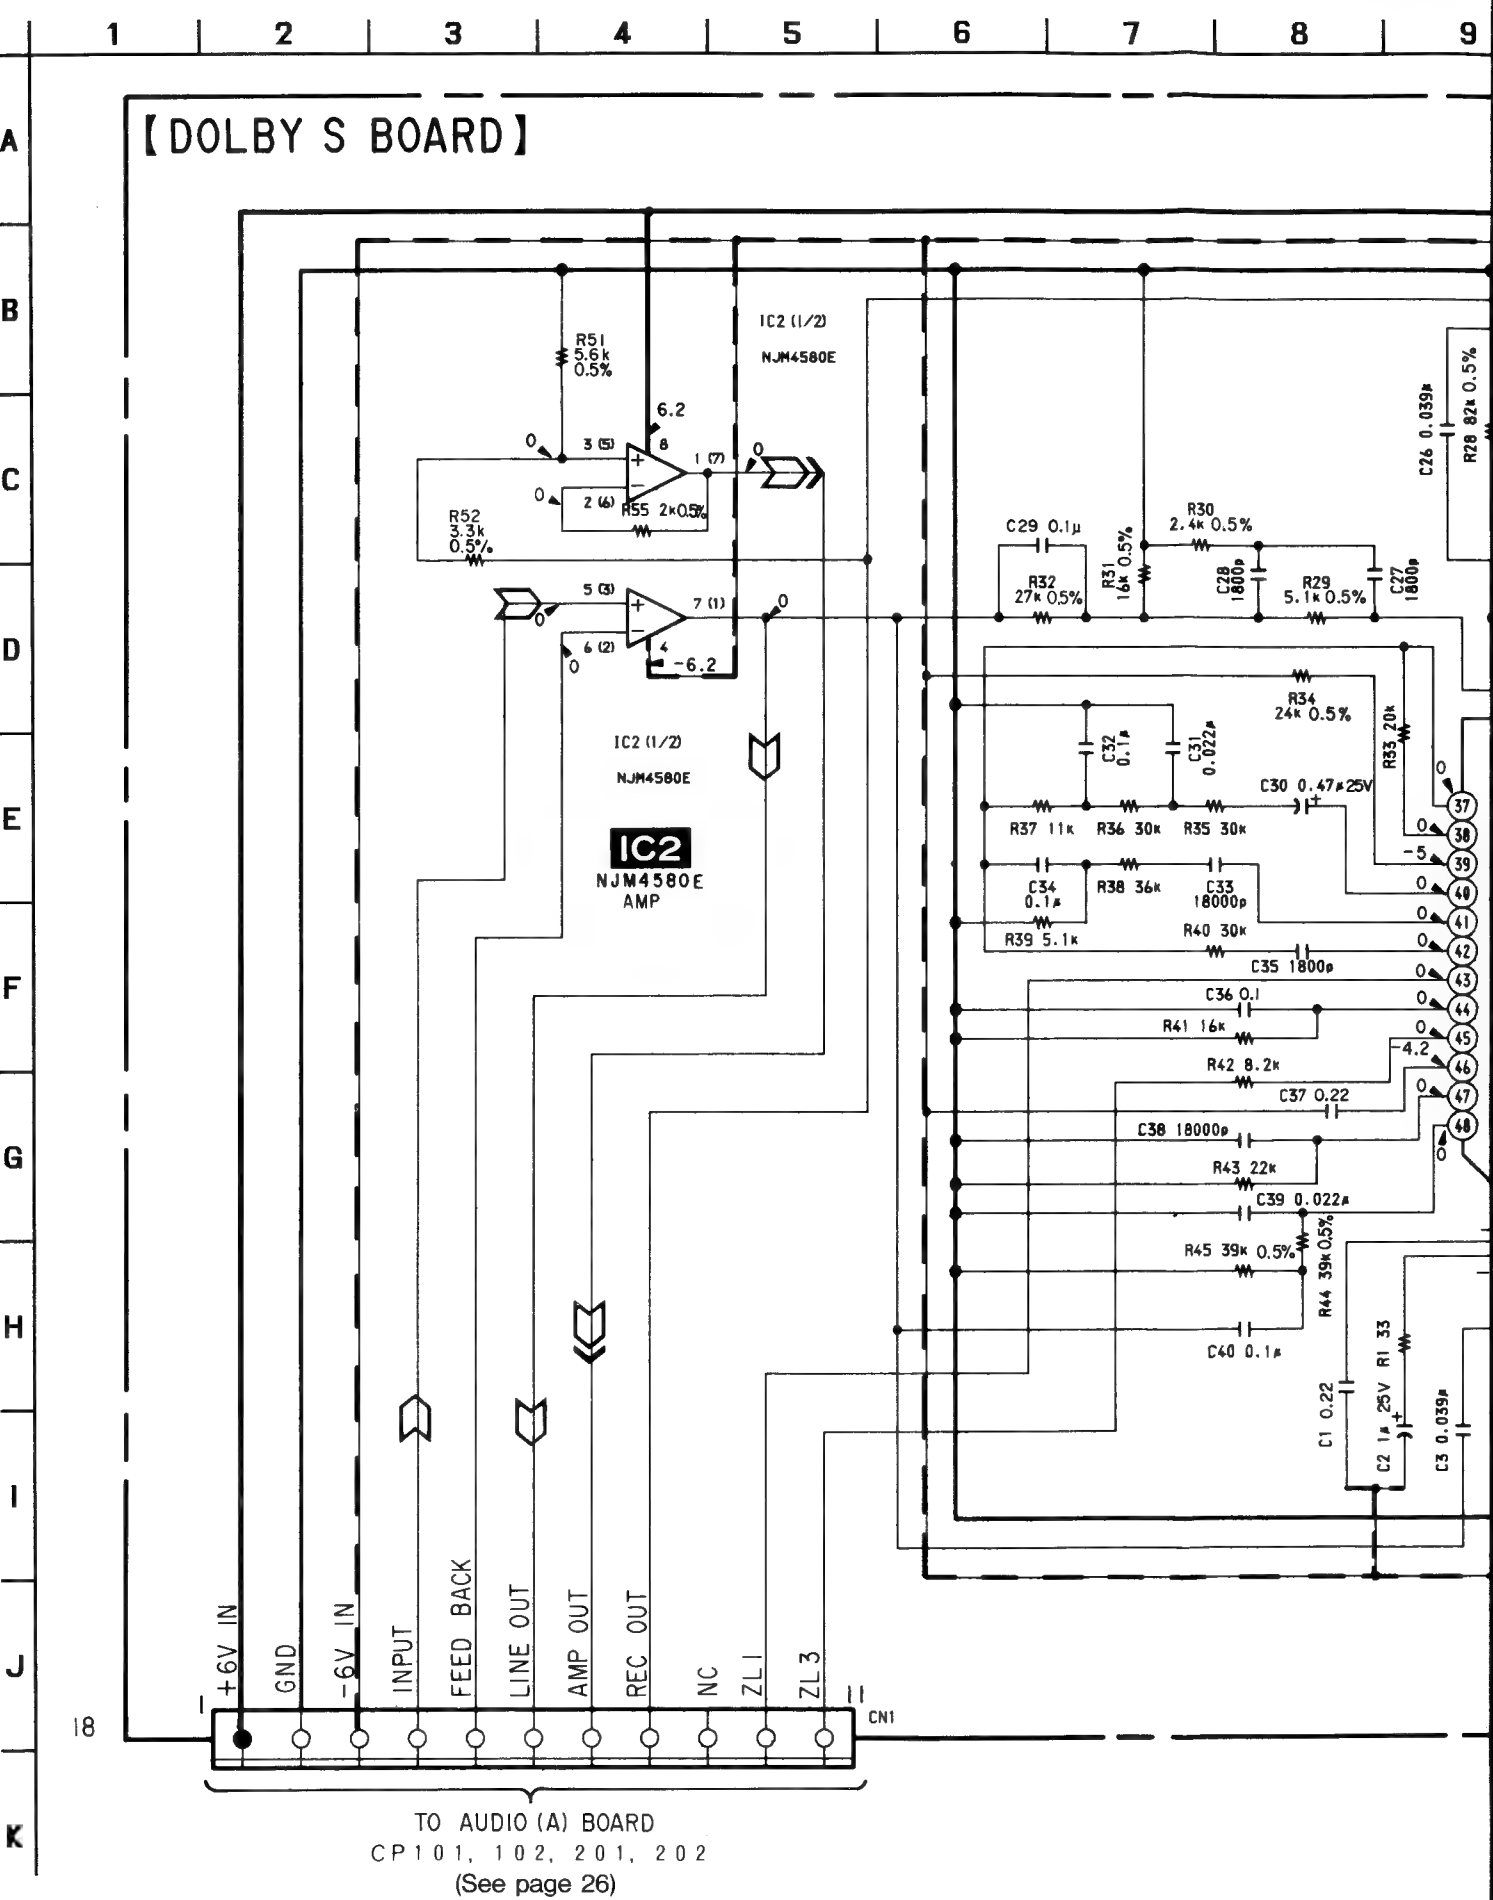

TO AUDIO (A) BOARD
CP101, 102, 201, 202
(See page 26)

5-8. SCHEMATIC DIAGRAM —DOLBY S Section—

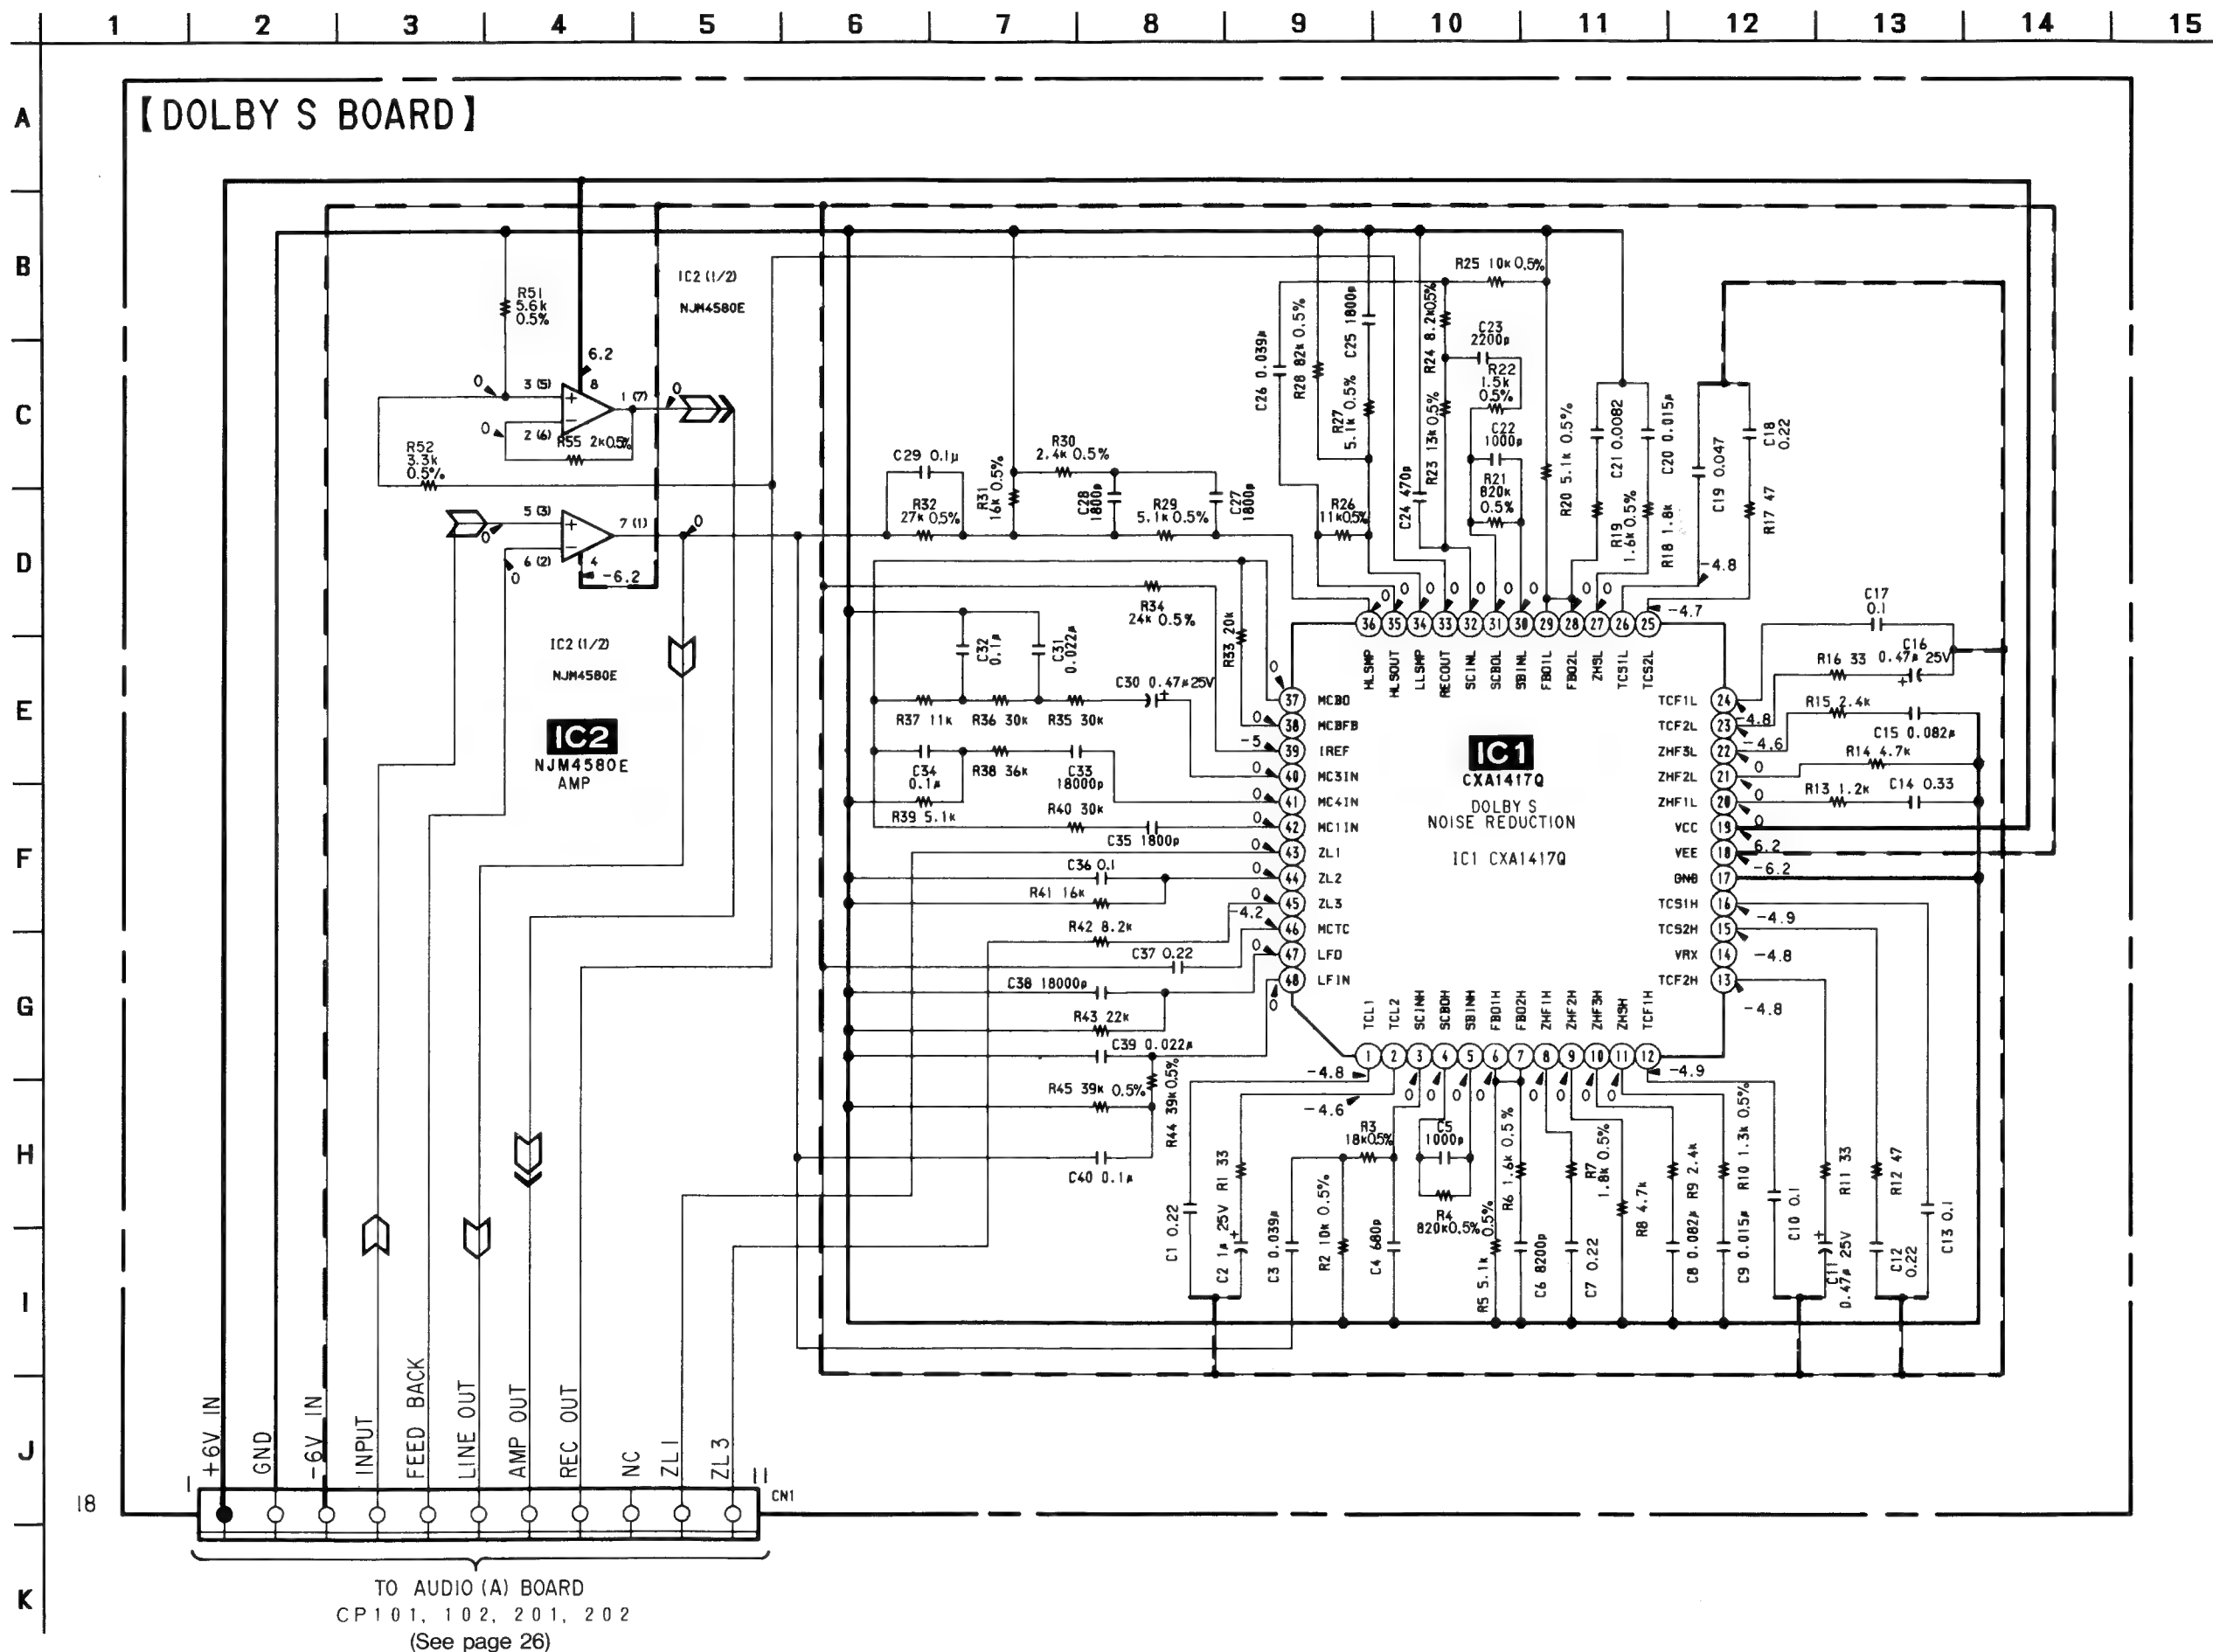

in μF unless otherwise noted. pF : μF
not indicated except for electrolytics
in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise
tolerance.

with respect to ground
conditions.
with a VOM (Input Impedance $10\text{M}\Omega$).
may be noted due to normal produc-

EXPLODED VIEWS

NOTE:

KNOB, BALANCE (WHITE)... (RED)

Parts color



Cabinet's color


6-1. PANEL SECTION

- B : SYSTEM CONTROL (B) board

- E : SYSTEM CONTROL (E) board

- Hardware (#mark) list is given in the last of this parts list.


The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

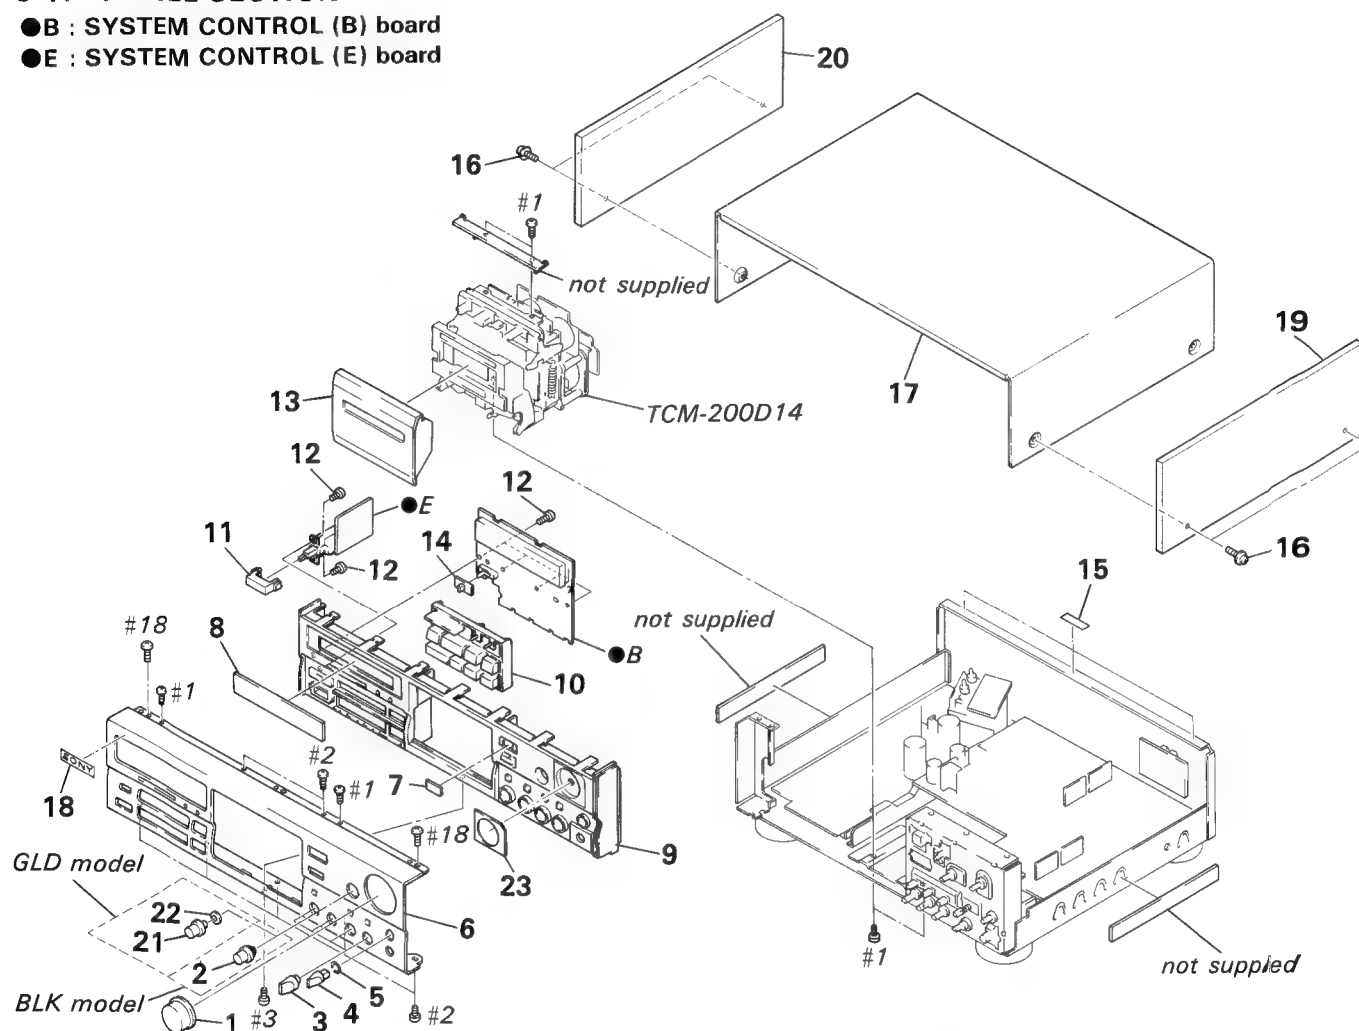

Ref. No.	Part No.	Description	Remark
1	X-3362-289-1	KNOB (VOL) ASSY (BLK)	
1	X-3365-344-1	KNOB (VOL) ASSY (GLD)	
2	X-3365-387-1	KNOB (BAL) ASSY (B) (BLK)	
3	X-3362-818-1	KNOB (DIA. 12) ASSY (B), FLAT (BLK)	
3	X-3363-490-1	KNOB (DIA. 12) ASSY (B), FLAT (GLD)	
4	3-354-931-01	KNOB (DIA. 10) (BLK)	
4	3-354-931-31	KNOB (DIA. 10) (GLD)	
5	3-354-981-01	SPRING (SUS), RING (BLK)	
5	3-356-935-01	SPRING (SUS), RING (GLD)	
6	3-385-609-41	PANEL, FRONT (BLK)	
6	3-385-609-51	PANEL, FRONT (GLD)	
7	3-385-600-01	WINDOW (R)	
8	3-385-605-01	WINDOW (METER)	
* 9	3-384-775-01	PANEL (BASE) (BLK)	
* 9	3-384-775-11	PANEL (BASE) (GLD)	
10	X-3366-040-1	BUTTON (BLOCK) ASSY (BLK)	
10	X-3366-750-1	BUTTON (BLOCK) ASSY (N) (GLD)	
11	3-354-932-01	BUTTON (POWER) (BLK)	
11	3-354-932-11	BUTTON (POWER) (GLD)	


Ref. No.	Part No.	Description	Remarks
12	4-951-620-01	SCREW (2. 6X8), +BVTP	
13	X-3366-873-1	LID ASSY (J), CASSETTE (GLD)	
13	X-3366-874-1	LID ASSY (I), CASSETTE (BLK)	
14	4-922-518-01	KNOB (TIMER) (BLK)	
14	4-922-518-62	KNOB (TIMER) (GLD)	
15	3-831-441-XX	CUSHION, SPEAKER	
16	4-933-446-01	SCREW (SIDE PANEL)	
* 17	4-925-039-61	CASE (BLK)	
* 17	4-925-039-92	CASE (GLD)	
18	4-908-848-01	EMBLEM, SONY (BLK)	
18	4-942-568-11	EMBLEM (NO. 5), SONY (GLD)	
19	X-3340-188-1	PANEL (R) ASSY, SIDE (BLK)	
19	X-3363-178-2	PANEL (R) ASSY, SIDE (GLD)	
20	X-3340-187-1	PANEL (L) ASSY, SIDE (BLK)	
20	X-3363-177-2	PANEL (L) ASSY, SIDE (GLD)	
21	3-364-173-21	KNOB (BAL) (GLD)	
22	3-356-957-01	SPRING (GLD)	
23	3-364-166-01	PLATE (VOL), ORNAMENTAL (BLK)	
23	3-364-166-11	PLATE (VOL), ORNAMENTAL (GLD)	

- C : SYSTEM CONTROL (C) board
- D : SYSTEM CONTROL (D) board
- B : AUDIO (B) board
- C : AUDIO (C) board
- D : AUDIO (D) board
- E : AUDIO (E) board

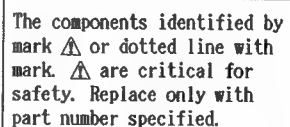

Ref. No.	Part No.	Description	Remark
* 58	3-387-981-01	PANEL, BACK (BLK)	
* 58	3-387-981-11	PANEL, BACK (GLD)	
59	X-3304-944-1	FOOT ASSY (BLK)	
59	X-3363-489-1	FOOT ASSY (GLD)	
* 60	4-949-235-01	HOOK	
△F701	1-532-285-00	FUSE, TIME-LAG (T1.25AL/250V)	
△T901	1-423-685-11	TRANSFORMER, POWER	


6-3. MECHANISM SECTION-1
(TCM-200D14)

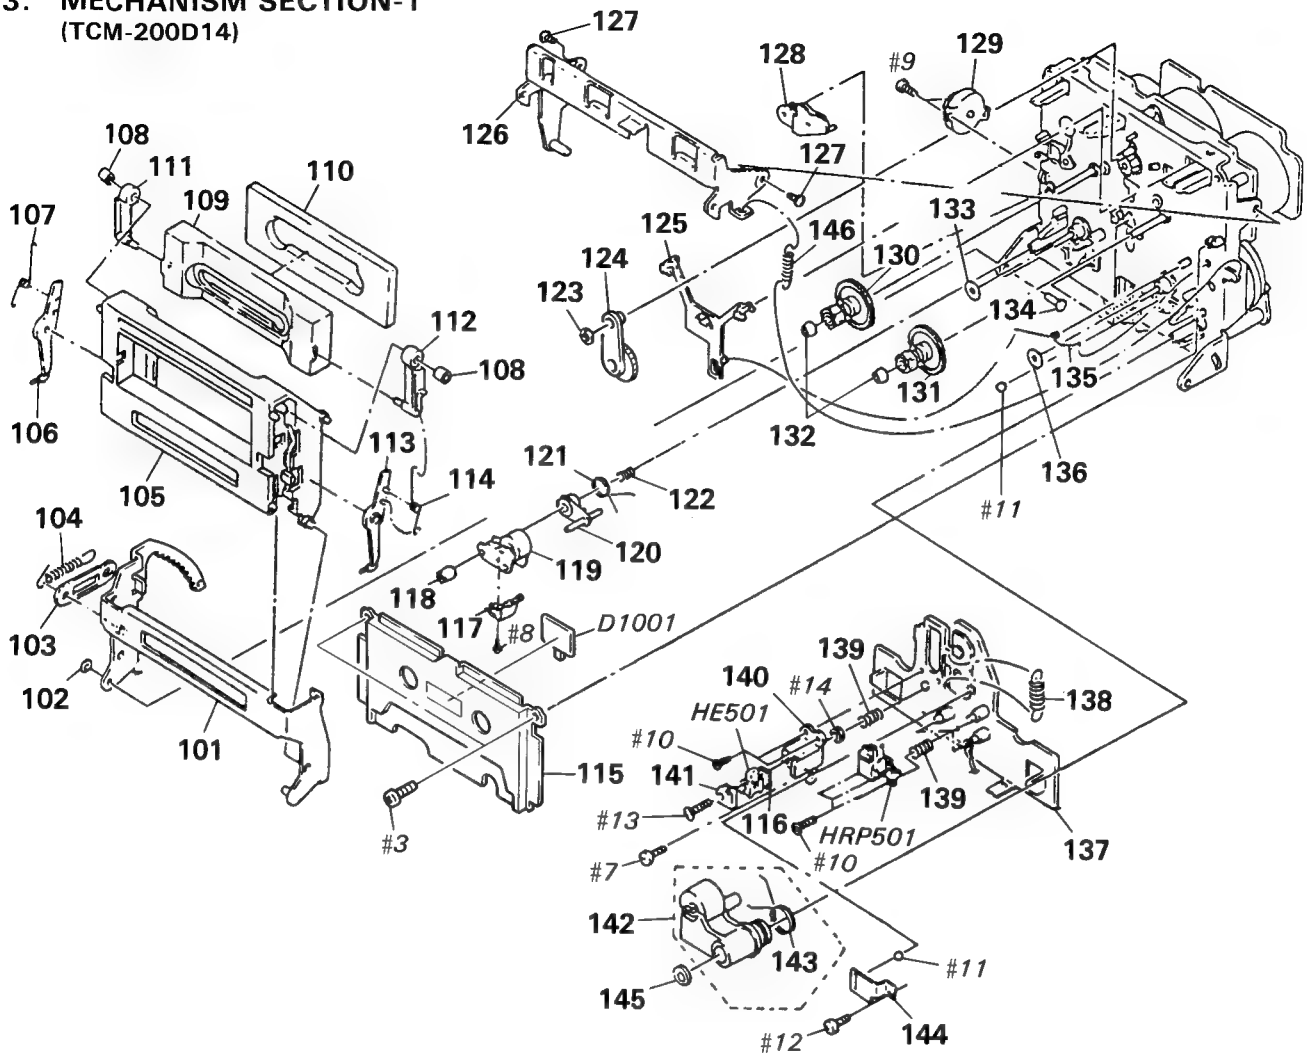

Ref. No.	Part No.	Description	Remark
	101	X-3362-671-1 HOLDER (BG) ASSY, CASSETTE	
	102	3-558-708-11 WASHER, STOPPER	
*	103	3-356-717-01 LEVER (JOINT)	
	104	3-356-626-01 SPRING, TENSION	
	105	X-3365-065-1 HOLDER (D9) ASSY, CASSETTE	
	106	3-356-932-01 LEVER (LA)	
	107	3-356-927-01 SPRING (LEFT), TORSION	
	108	3-356-946-01 BUSHING	
	109	3-356-928-11 PLATE (A), ORNAMENTAL	
*	110	3-356-929-01 ABSORBENT, VIBRATION	
	111	3-356-933-01 LEVER (LB)	
	112	3-356-931-01 LEVER (RB)	
	113	3-356-930-01 LEVER (RA)	
	114	3-356-926-01 SPRING (RIGHT), TORSION	
	115	X-3356-613-1 PLATE ASSY, ORNAMENTAL	
*	116	1-608-268-00 PC BOARD, ERASE HEAD	
	117	3-389-445-01 GUIDE (SL), TAPE	
	118	3-356-652-01 NUT (PINCH LEVER S)	
	119	X-3356-621-1 LEVER (PINCH LEVER S) ASSY	
	120	3-356-660-01 LEVER (PS)	
	121	3-356-661-01 SPRING (PINCH LEVER S), TORSION	
	122	3-356-657-01 SPRING (PS), COMPRESSION	
	123	3-669-465-11 WASHER (1.5), STOPPER	
	124	X-3356-641-1 LEVER (FR2) ASSY	
	125	3-356-614-01 SLIDER (BRAKE)	

Ref. No.	Part No.	Description	Remark
*	126	X-3356-608-1 LEVER (LIFTER) ASSY	
	127	3-356-601-11 SCREW, STEP	
	128	X-3356-623-1 LEVER (BT) ASSY	
	129	3-319-224-41 DAMPER, SMALL	
	130	X-3356-629-1 GEAR (S) ASSY	
	131	X-3356-627-1 GEAR (T) ASSY	
	132	3-362-308-01 CAP (REEL)	
	133	3-356-713-01 WASHER	
	134	3-356-710-01 SHAFT (LEFT) (CASSETTE HOLDER)	
	135	3-356-619-01 SPRING (B), TORSION	
	136	3-332-763-01 RING, OIL RESERVOIR	
*	137	X-3362-199-1 SLIDER (HEAD CHASSIS D) ASSY	
	138	3-356-658-01 SPRING (LIMITER H), TENSION	
	139	3-564-121-00 SPRING, COMPRESSION	
*	140	3-576-977-00 BRACKET, E. HEAD	
	141	3-318-433-01 SPRING	
	142	X-3356-620-1 LEVER (PINCH LEVER T) ASSY	
	143	3-356-672-01 SPRING (PINCH LEVER T), TORSION	
	144	3-356-656-01 SPRING (HEAD PC BOARD), LEAF	
	145	3-669-596-00 WASHER (2.3), STOPPER	
	146	3-376-854-01 SPRING, TENSION	
	D1001	8-719-980-85 DIODE SLF-325C	
	HE501	1-543-836-11 HEAD, MAGNETIC (ERASE)	
	HRP501	1-543-742-11 HEAD, MAGNETIC (REC/PB)	

6-4. MECHANISM SECTION-2
(TCM-200D14)

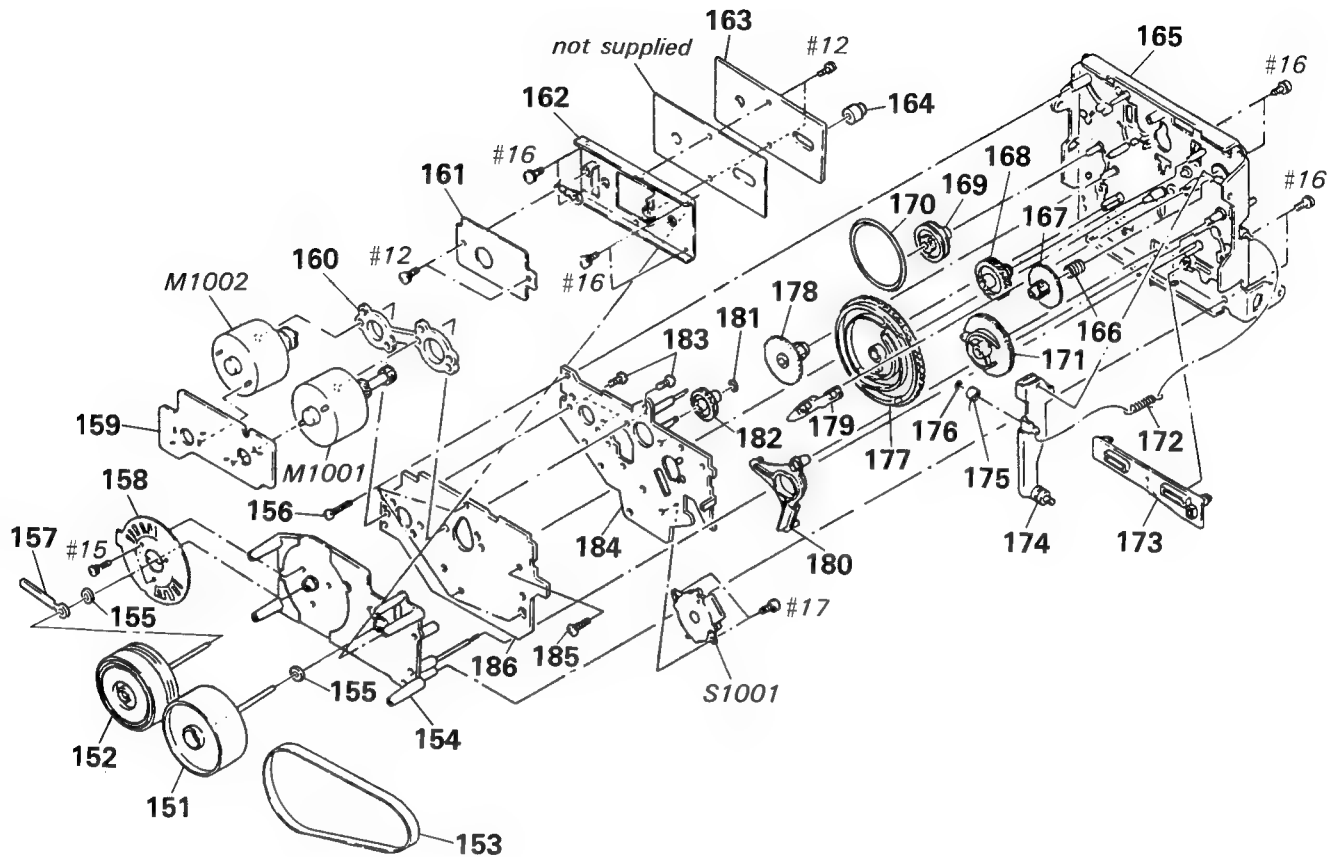

Ref. No.	Part No.	Description	Remark
151	X-3362-284-1	FLYWHEEL (S2.3) ASSY	
152	X-3356-619-1	FLYWHEEL (DT) ASSY	
153	3-364-600-01	BELT (CAPSTAN)	
154	X-3362-281-1	CHASSIS (D2.3) ASSY	
155	3-356-705-31	WASHER (CAPSTAN)	
156	3-381-811-01	SCREW (PTPWH) (2X18)	
157	3-703-150-11	STOPPER, WIRING	
158	1-632-779-11	PC BOARD, FG	
* 159	1-632-741-11	REEL MOTOR BOARD	
* 160	3-356-628-01	SPACER (MOTOR)	
* 161	1-632-746-11	COMPARATOR BOARD	
* 162	X-3362-282-1	BRACKET (THRUST RETAINER) ASSY	
163	A-2006-154-A	CAPSTAN C.O.C BOARD, COMPLETE	
164	3-364-135-01	RETAINER (S), THRUST	
165	X-3356-622-1	CHASSIS (C) ASSY, MECHANICAL	
166	3-356-605-01	SPRING, COMPRESSION	
167	3-356-609-01	GEAR (LOADING)	
168	3-356-703-01	GEAR (COMMUNICATION C)	
169	3-356-607-01	PULLEY (MODE)	
170	3-356-603-01	BELT (MODE)	

Ref. No.	Part No.	Description	Remark
171	3-356-616-01	GEAR (LOADING CAM)	
172	3-356-625-01	SPRING, TENSION	
173	3-356-653-01	SLIDER (PAUSE)	
* 174	X-3356-606-1	LEVER (LOADING) ASSY	
175	3-356-630-01	ROLLER (LOADING)	
176	3-558-708-21	WASHER, STOPPER	
177	3-356-654-01	GEAR (MODE CAM C)	
178	3-356-606-01	GEAR (MODE)	
179	3-356-617-01	LEVER (SELECTION)	
180	3-356-613-01	LEVER (MODE)	
181	3-669-465-00	WASHER (1.5), STOPPER	
182	3-356-702-01	GEAR (COMMUNICATION B)	
183	3-363-804-01	SCREW (+P 2.6X6.5)	
* 184	X-3356-616-1	BRACKET (MOTOR D) ASSY	
185	3-356-707-01	SCREW (+PTPWH 2X25)	
* 186	1-632-740-11	MD BOARD	
M1001	X-3356-638-1	MOTOR (REEL R) ASSY	
M1002	X-3356-604-1	MOTOR (ASSIST) ASSY	
S1001	1-466-238-11	ENCODER, ROTARY	

SECTION 7 ELECTRICAL PARTS LIST

AUDIO

DOLBY S

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

SEMICONDUCTORS

In each case, u: μ , for example:

uA...: μ A... uPA...: μ PA...

uPB...: μ PB... uPC...: μ PC... uPD...: μ PD...

CAPACITORS

uF: μ F

COILS

uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark	
*	A-2007-026-A	AUDIO BOARD, COMPLETE *****		
		DOLBY S BOARD *****		
	7-682-147-15	SCREW, TR		
*	4-886-555-00	HEAT SINK		
*	4-942-204-01	PLATE, GROUND		
		< CAPACITOR >		
C1	1-164-222-11	CERAMIC CHIP 0.22uF	25V	
C2	1-135-177-21	TANTALUM CHIP 1uF	20% 20V	
C3	1-137-301-11	FILM CHIP 0.039uF	5% 16V	
C4	1-163-007-11	CERAMIC CHIP 680PF	10% 50V	
C5	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	
C6	1-164-717-11	CERAMIC CHIP 0.0082uF	5% 50V	
C7	1-164-222-11	CERAMIC CHIP 0.22uF	25V	
C8	1-104-562-11	FILM CHIP 0.082uF	5% 16V	
C9	1-104-553-11	FILM CHIP 0.015uF	5% 16V	
C10	1-165-319-11	CERAMIC CHIP 0.1uF	50V	
C11	1-135-145-11	TANTALUM CHIP 0.47uF	10% 35V	
C12	1-164-222-11	CERAMIC CHIP 0.22uF	25V	
C13	1-165-319-11	CERAMIC CHIP 0.1uF	50V	
C14	1-162-568-11	CERAMIC CHIP 0.33uF	10% 16V	
C15	1-104-562-11	FILM CHIP 0.082uF	5% 16V	
C16	1-135-145-11	TANTALUM CHIP 0.47uF	10% 35V	
C17	1-165-319-11	CERAMIC CHIP 0.1uF	50V	
C18	1-164-222-11	CERAMIC CHIP 0.22uF	25V	
C19	1-163-035-00	CERAMIC CHIP 0.047uF	50V	
C20	1-104-553-11	FILM CHIP 0.015uF	5% 16V	
C21	1-164-717-11	CERAMIC CHIP 0.0082uF	5% 50V	
C22	1-163-009-11	CERAMIC CHIP 0.001uF	10% 50V	
C23	1-164-161-11	CERAMIC CHIP 0.0022uF	10% 100V	
C24	1-163-005-11	CERAMIC CHIP 470PF	10% 50V	
C25	1-163-012-00	CERAMIC CHIP 0.0018uF	10% 50V	
C26	1-137-301-11	FILM CHIP 0.039uF	5% 16V	
C27	1-163-012-00	CERAMIC CHIP 0.0018uF	10% 50V	
C28	1-163-012-00	CERAMIC CHIP 0.0018uF	10% 50V	
C29	1-137-306-11	FILM CHIP 0.1uF	5% 16V	
C30	1-135-145-11	TANTALUM CHIP 0.47uF	10% 35V	

Ref. No.	Part No.	Description	Remark	
C31	1-104-555-11	FILM CHIP 0.022uF	5% 16V	
C32	1-104-563-11	FILM CHIP 0.1uF	5% 16V	
C33	1-163-024-00	CERAMIC CHIP 0.018uF	10% 50V	
C34	1-137-306-11	FILM CHIP 0.1uF	5% 16V	
C35	1-163-012-00	CERAMIC CHIP 0.0018uF	10% 50V	
C36	1-165-319-11	CERAMIC CHIP 0.1uF	50V	
C37	1-164-222-11	CERAMIC CHIP 0.22uF	25V	
C38	1-163-024-00	CERAMIC CHIP 0.018uF	10% 50V	
C39	1-104-555-11	FILM CHIP 0.022uF	5% 16V	
C40	1-137-306-11	FILM CHIP 0.1uF	5% 16V	
C101	1-130-487-00	MYLAR 0.022uF	5% 50V	
C102	1-126-049-11	ELECT 22uF	20% 50V	
C103	1-126-049-11	ELECT 22uF	20% 50V	
C104	1-130-489-00	MYLAR 0.033uF	5% 50V	
C105	1-130-477-00	MYLAR 0.0033uF	5% 50V	
C106	1-102-965-00	CERAMIC 39PF	5% 50V	
C107	1-106-343-00	MYLAR 1000PF	5% 200V	
C108	1-130-475-00	MYLAR 0.0022uF	5% 50V	
C109	1-130-475-00	MYLAR 0.0022uF	5% 50V	
C110	1-130-478-00	MYLAR 0.0039uF	5% 50V	
C111	1-136-173-00	FILM 0.47uF	5% 50V	
C112	1-136-167-00	FILM 0.15uF	5% 50V	
C113	1-136-155-00	FILM 0.015uF	5% 50V	
C114	1-124-903-11	ELECT 1uF	20% 50V	
C115	1-136-169-00	FILM 0.22uF	5% 50V	
C116	1-136-163-00	FILM 0.068uF	5% 50V	
C117	1-136-162-00	FILM 0.056uF	5% 50V	
C118	1-124-903-11	ELECT 1uF	20% 50V	
C119	1-130-480-00	MYLAR 0.0056uF	5% 50V	
C120	1-136-153-00	FILM 0.01uF	5% 50V	
C121	1-126-049-11	ELECT 22uF	20% 50V	
C122	1-126-049-11	ELECT 22uF	20% 50V	
C123	1-126-049-11	ELECT 22uF	20% 50V	
C124	1-126-059-11	ELECT 10uF	20% 50V	
C125	1-126-049-11	ELECT 22uF	20% 50V	
C126	1-126-049-11	ELECT 22uF	20% 50V	
C127	1-123-382-00	ELECT 3.3uF	20% 100V	
C129	1-124-925-11	ELECT 2.2uF	20% 100V	
C130	1-130-475-00	MYLAR 0.0022uF	5% 50V	
C132	1-126-059-11	ELECT 10uF	20% 50V	

AUDIO

DOLBY S

Ref.No.	Part No.	Description	Remark		
C133	1-126-163-11	ELECT	4. 7uF	20%	50V
C134	1-126-163-11	ELECT	4. 7uF	20%	50V
C135	1-126-163-11	ELECT	4. 7uF	20%	50V
C136	1-102-518-11	CERAMIC	33PF	5%	50V
C137	1-130-475-00	MYLAR	0. 0022uF	5%	50V
C138	1-130-475-00	MYLAR	0. 0022uF	5%	50V
C139	1-130-478-00	MYLAR	0. 0039uF	5%	50V
C140	1-136-173-00	FILM	0. 47uF	5%	50V
C141	1-136-167-00	FILM	0. 15uF	5%	50V
C142	1-136-155-00	FILM	0. 015uF	5%	50V
C143	1-124-903-11	ELECT	1uF	20%	50V
C144	1-136-169-00	FILM	0. 22uF	5%	50V
C145	1-136-163-00	FILM	0. 068uF	5%	50V
C146	1-136-162-00	FILM	0. 056uF	5%	50V
C147	1-124-903-11	ELECT	1uF	20%	50V
C148	1-130-480-00	MYLAR	0. 0056uF	5%	50V
C149	1-136-153-00	FILM	0. 01uF	5%	50V
C150	1-126-059-11	ELECT	10uF	20%	50V
C151	1-126-059-11	ELECT	10uF	20%	50V
C152	1-126-049-11	ELECT	22uF	20%	50V
C153	1-126-059-11	ELECT	10uF	20%	50V
C154	1-126-049-11	ELECT	22uF	20%	50V
C155	1-126-049-11	ELECT	22uF	20%	50V
C156	1-106-347-00	MYLAR	1500PF	5%	200V
C157	1-106-343-00	MYLAR	1000PF	5%	200V
C158	1-130-474-00	MYLAR	0. 0018uF	5%	50V
C159	1-126-059-11	ELECT	10uF	20%	50V
C160	1-130-491-00	MYLAR	0. 047uF	5%	50V
C161	1-130-485-00	MYLAR	0. 015uF	5%	50V
C162	1-130-487-00	MYLAR	0. 022uF	5%	50V
C163	1-130-486-00	MYLAR	0. 018uF	10%	50V
C164	1-130-487-00	MYLAR	0. 022uF	5%	50V
C165	1-130-486-00	MYLAR	0. 018uF	10%	50V
C166	1-126-049-11	ELECT	22uF	20%	50V
C167	1-106-347-00	MYLAR	1500PF	5%	200V
C168	1-136-935-11	FILM	22PF	5%	630V
C169	1-136-157-00	FILM	0. 022uF	5%	50V
C170	1-136-161-00	FILM	0. 047uF	5%	50V
C171	1-130-468-00	MYLAR	560PF	5%	50V
C172	1-136-803-11	FILM	560PF	5%	630V
C173	1-136-433-11	FILM	100PF	5%	630V
C174	1-136-153-00	FILM	0. 01uF	5%	50V
C175	1-162-211-31	CERAMIC	33PF	5%	50V
C176	1-124-925-11	ELECT	2. 2uF	20%	100V
C178	1-126-059-11	ELECT	10uF	20%	50V
C179	1-110-340-11	MYLAR	270PF	5%	50V
C201	1-130-487-00	MYLAR	0. 022uF	5%	50V
C202	1-126-049-11	ELECT	22uF	20%	50V
C203	1-126-049-11	ELECT	22uF	20%	50V

Ref.No.	Part No.	Description	Remark		
C204	1-130-489-00	MYLAR	0. 033uF	5%	50V
C205	1-130-477-00	MYLAR	0. 0033uF	5%	50V
C206	1-102-965-00	CERAMIC	39PF	5%	50V
C207	1-106-343-00	MYLAR	1000PF	5%	200V
C208	1-130-475-00	MYLAR	0. 0022uF	5%	50V
C209	1-130-475-00	MYLAR	0. 0022uF	5%	50V
C210	1-130-478-00	MYLAR	0. 0039uF	5%	50V
C211	1-136-173-00	FILM	0. 47uF	5%	50V
C212	1-136-167-00	FILM	0. 15uF	5%	50V
C213	1-136-155-00	FILM	0. 015uF	5%	50V
C214	1-124-903-11	ELECT	1uF	20%	50V
C215	1-136-169-00	FILM	0. 22uF	5%	50V
C216	1-136-163-00	FILM	0. 068uF	5%	50V
C217	1-136-162-00	FILM	0. 056uF	5%	50V
C218	1-124-903-11	ELECT	1uF	20%	50V
C219	1-130-480-00	MYLAR	0. 0056uF	5%	50V
C220	1-136-153-00	FILM	0. 01uF	5%	50V
C221	1-126-049-11	ELECT	22uF	20%	50V
C222	1-126-049-11	ELECT	22uF	20%	50V
C223	1-126-049-11	ELECT	22uF	20%	50V
C224	1-126-059-11	ELECT	10uF	20%	50V
C225	1-126-049-11	ELECT	22uF	20%	50V
C226	1-126-049-11	ELECT	22uF	20%	50V
C227	1-123-382-00	ELECT	3. 3uF	20%	100V
C229	1-136-165-00	FILM	0. 1uF	5%	50V
C232	1-126-059-11	ELECT	10uF	20%	50V
C233	1-126-163-11	ELECT	4. 7uF	20%	50V
C234	1-126-163-11	ELECT	4. 7uF	20%	50V
C235	1-126-163-11	ELECT	4. 7uF	20%	50V
C236	1-102-518-11	CERAMIC	33PF	5%	50V
C237	1-130-475-00	MYLAR	0. 0022uF	5%	50V
C238	1-130-475-00	MYLAR	0. 0022uF	5%	50V
C239	1-130-478-00	MYLAR	0. 0039uF	5%	50V
C240	1-136-173-00	FILM	0. 47uF	5%	50V
C241	1-136-167-00	FILM	0. 15uF	5%	50V
C242	1-136-155-00	FILM	0. 015uF	5%	50V
C243	1-124-903-11	ELECT	1uF	20%	50V
C244	1-136-169-00	FILM	0. 22uF	5%	50V
C245	1-136-163-00	FILM	0. 068uF	5%	50V
C246	1-136-162-00	FILM	0. 056uF	5%	50V
C247	1-124-903-11	ELECT	1uF	20%	50V
C248	1-130-480-00	MYLAR	0. 0056uF	5%	50V
C249	1-136-153-00	FILM	0. 01uF	5%	50V
C250	1-126-059-11	ELECT	10uF	20%	50V
C251	1-126-059-11	ELECT	10uF	20%	50V
C252	1-126-049-11	ELECT	22uF	20%	50V
C253	1-126-059-11	ELECT	10uF	20%	50V
C254	1-126-049-11	ELECT	22uF	20%	50V
C255	1-126-049-11	ELECT	22uF	20%	50V

AUDIO

DOLBY S

Ref. No.	Part No.	Description	Remark		
C256	1-106-347-00	MYLAR	1500PF	5%	200V
C257	1-106-343-00	MYLAR	1000PF	5%	200V
C258	1-130-474-00	MYLAR	0.0018uF	5%	50V
C259	1-126-059-11	ELECT	10uF	20%	50V
C260	1-130-491-00	MYLAR	0.047uF	5%	50V
C261	1-130-485-00	MYLAR	0.015uF	5%	50V
C262	1-130-487-00	MYLAR	0.022uF	5%	50V
C263	1-130-486-00	MYLAR	0.018uF	10%	50V
C264	1-130-487-00	MYLAR	0.022uF	5%	50V
C265	1-130-486-00	MYLAR	0.018uF	10%	50V
C266	1-126-049-11	ELECT	22uF	20%	50V
C267	1-106-347-00	MYLAR	1500PF	5%	200V
C268	1-136-935-11	FILM	22PF	5%	630V
C269	1-136-157-00	FILM	0.022uF	5%	50V
C270	1-136-161-00	FILM	0.047uF	5%	50V
C271	1-130-468-00	MYLAR	560PF	5%	50V
C272	1-136-803-11	FILM	560PF	5%	630V
C273	1-136-433-11	FILM	100PF	5%	630V
C274	1-136-153-00	FILM	0.01uF	5%	50V
C275	1-162-211-31	CERAMIC	33PF	5%	50V
C276	1-124-925-11	ELECT	2.2uF	20%	100V
C278	1-126-059-11	ELECT	10uF	20%	50V
C279	1-110-340-11	MYLAR	270PF	5%	50V
C501	1-126-066-11	ELECT	470uF	20%	63V
C502	1-126-066-11	ELECT	470uF	20%	63V
C503	1-102-518-11	CERAMIC	33PF	5%	50V
C504	1-102-518-11	CERAMIC	33PF	5%	50V
C505	1-124-122-11	ELECT	100uF	20%	50V
C506	1-136-153-00	FILM	0.01uF	5%	50V
C507	1-136-153-00	FILM	0.01uF	5%	50V
C508	1-124-922-11	ELECT	1000uF	20%	63V
C509	1-124-922-11	ELECT	1000uF	20%	63V
C510	1-126-059-11	ELECT	10uF	20%	50V
C511	1-126-059-11	ELECT	10uF	20%	50V
C513	1-126-163-11	ELECT	4.7uF	20%	50V
C514	1-126-163-11	ELECT	4.7uF	20%	50V
C515	1-164-159-11	CERAMIC	0.1uF		50V
C516	1-124-902-00	ELECT	0.47uF	20%	50V
C517	1-124-477-11	ELECT	47uF	20%	25V
C518	1-130-474-00	MYLAR	0.0018uF	5%	50V
C519	1-130-474-00	MYLAR	0.0018uF	5%	50V
C520	1-136-157-00	FILM	0.022uF	5%	50V
C521	1-136-157-00	FILM	0.022uF	5%	50V
C522	1-126-163-11	ELECT	4.7uF	20%	50V
C523	1-126-163-11	ELECT	4.7uF	20%	50V
C526	1-126-059-11	ELECT	10uF	20%	50V
C527	1-126-059-11	ELECT	10uF	20%	50V
C528	1-126-059-11	ELECT	10uF	20%	50V
C529	1-126-059-11	ELECT	10uF	20%	50V

Ref. No.	Part No.	Description	Remark		
C530	1-126-163-11	ELECT	4.7uF	20%	50V
C531	1-126-163-11	ELECT	4.7uF	20%	50V
C532	1-124-925-11	ELECT	2.2uF	20%	100V
C533	1-126-059-11	ELECT	10uF	20%	50V
C534	1-124-477-11	ELECT	47uF	20%	25V
C536	1-124-907-11	ELECT	10uF	20%	50V
C537	1-124-925-11	ELECT	2.2uF	20%	100V
C538	1-162-282-31	CERAMIC	100PF	10%	50V
C539	1-136-228-11	FILM	0.0012uF	5%	100V
C540	1-136-228-11	FILM	0.0012uF	5%	100V
C541	1-136-233-11	FILM	0.0047uF	5%	100V
C542	1-124-907-11	ELECT	10uF	20%	50V
C543	1-136-559-11	FILM	0.0047uF	5%	630V
C544	1-107-045-00	MICA	3.9PF		500V

< CONNECTOR >

* CN1	1-537-473-11	TERMINAL (LEAD PIN)
* CN501	1-564-506-11	PLUG, CONNECTOR 3P
* CN502	1-560-062-00	PIN, CONNECTOR 4P
* CN503	1-564-508-11	PLUG, CONNECTOR 5P
* CN504	1-564-519-11	PLUG, CONNECTOR 4P
* CN505	1-564-523-11	PLUG, CONNECTOR 8P
* CN506	1-564-507-31	PLUG, CONNECTOR 4P
* CN507	1-564-509-11	PLUG, CONNECTOR 6P
* CN508	1-560-062-00	PIN, CONNECTOR 4P
* CN509	1-560-061-00	PIN, CONNECTOR 3P
* CN510	1-564-337-51	PIN, CONNECTOR 3P
* CN511	1-506-503-61	PIN, CONNECTOR 9P
* CN512	1-506-503-11	PIN, CONNECTOR 9P

< COMPOSITION CIRCUIT BLOCK >

CP103	1-236-087-11	FILTER, LOW PASS
CP203	1-236-087-11	FILTER, LOW PASS

< DIODE >

D101	8-719-987-63	DIODE 1N4148M
D102	8-719-987-63	DIODE 1N4148M
D103	8-719-987-63	DIODE 1N4148M
D104	8-719-987-63	DIODE 1N4148M
D105	8-719-987-63	DIODE 1N4148M
D106	8-719-987-63	DIODE 1N4148M
D107	8-719-000-54	DIODE UZL-6L3
D108	8-719-987-63	DIODE 1N4148M
D109	8-719-987-63	DIODE 1N4148M
D201	8-719-987-63	DIODE 1N4148M
D202	8-719-987-63	DIODE 1N4148M
D203	8-719-987-63	DIODE 1N4148M
D204	8-719-987-63	DIODE 1N4148M
D205	8-719-987-63	DIODE 1N4148M

AUDIO

DOLBY S

Ref. No.	Part No.	Description
D206	8-719-987-63	DIODE 1N4148M
D207	8-719-000-54	DIODE UZL-6L3
D208	8-719-987-63	DIODE 1N4148M
D209	8-719-987-63	DIODE 1N4148M
D501	8-719-933-41	DIODE HZS6C3L
D503	8-719-987-63	DIODE 1N4148M
D504	8-719-987-63	DIODE 1N4148M
D505	8-719-987-63	DIODE 1N4148M
D506	8-719-987-63	DIODE 1N4148M
D507	8-719-987-63	DIODE 1N4148M
D508	8-719-987-63	DIODE 1N4148M
D509	8-719-987-63	DIODE 1N4148M
D510	8-719-987-63	DIODE 1N4148M
D511	8-719-987-63	DIODE 1N4148M
D512	8-719-987-63	DIODE 1N4148M
D513	8-719-987-63	DIODE 1N4148M
D514	8-719-987-63	DIODE 1N4148M
D515	8-719-987-63	DIODE 1N4148M
D516	8-719-987-63	DIODE 1N4148M
D517	8-719-987-63	DIODE 1N4148M
D518	8-719-987-63	DIODE 1N4148M
D519	8-719-987-63	DIODE 1N4148M
D520	8-719-987-63	DIODE 1N4148M
D521	8-719-987-63	DIODE 1N4148M
D522	8-719-987-63	DIODE 1N4148M
D523	8-719-987-63	DIODE 1N4148M
D524	8-719-987-63	DIODE 1N4148M
D525	8-719-987-63	DIODE 1N4148M
D526	8-719-987-63	DIODE 1N4148M
< IC >		
IC1	8-752-056-51	IC CXA1417Q
IC2	8-759-711-85	IC NJM4580E-D
IC501	8-759-602-01	IC M5220P
IC502	8-752-018-80	IC CX20188
IC503	8-759-710-59	IC NJM4580D-D
IC506	8-759-145-58	IC uPC4558C
IC507	8-759-634-50	IC M5218AL
IC508	8-759-145-58	IC uPC4558C
IC509	8-759-145-58	IC uPC4558C
IC510	8-759-145-58	IC uPC4558C
IC511	8-752-018-80	IC CX20188
IC513	8-759-710-59	IC NJM4580D-D
IC514	8-759-106-56	IC uPC1297CA
IC516	8-759-145-58	IC uPC4558C
IC517	8-759-634-51	IC M5218AP

Remark

Ref. No. Part No. Description Remark

< JACK >

J501 1-507-796-71 JACK (HEADPHONES)
* J502 1-573-142-41 JACK, PIN 4P (LINE IN/OUT)

< COIL >

L101 1-408-927-11 INDUCTOR 18mH
L102 1-408-920-00 INDUCTOR 4.7mH
L103 1-408-918-11 INDUCTOR 3.3mH
L104 1-408-916-11 INDUCTOR 2.2mH
L105 1-408-929-00 INDUCTOR 27mH
L201 1-408-927-11 INDUCTOR 18mH
L202 1-408-920-00 INDUCTOR 4.7mH
L203 1-408-918-11 INDUCTOR 3.3mH
L204 1-408-916-11 INDUCTOR 2.2mH
L205 1-408-929-00 INDUCTOR 27mH

< PILOT LAMP >

PL501 1-518-471-31 LAMP, PILOT
PL502 1-518-471-31 LAMP, PILOT

< IC LINK >

△PS501 1-532-605-00 LINK, IC ICP-N10 (0.4A)
△PS502 1-532-605-00 LINK, IC ICP-N10 (0.4A)
△PS503 1-532-605-00 LINK, IC ICP-N10 (0.4A)
△PS504 1-532-605-00 LINK, IC ICP-N10 (0.4A)

< TRANSISTOR >

Q101 8-729-922-37 TRANSISTOR 2SD2144S-UVW
Q102 8-729-922-37 TRANSISTOR 2SD2144S-UVW
Q103 8-729-203-06 TRANSISTOR 2SK30A-GR2
Q104 8-729-203-06 TRANSISTOR 2SK30A-GR2
Q105 8-729-203-06 TRANSISTOR 2SK30A-GR2
Q106 8-729-203-06 TRANSISTOR 2SK30A-GR2
Q107 8-729-922-37 TRANSISTOR 2SD2144S-UVW
Q108 8-729-922-37 TRANSISTOR 2SD2144S-UVW
Q109 8-729-922-37 TRANSISTOR 2SD2144S-UVW
Q110 8-729-203-06 TRANSISTOR 2SK30A-GR2
Q111 8-729-203-06 TRANSISTOR 2SK30A-GR2
Q112 8-729-922-37 TRANSISTOR 2SD2144S-UVW
Q113 8-729-922-37 TRANSISTOR 2SD2144S-UVW
Q114 8-729-922-37 TRANSISTOR 2SD2144S-UVW
Q115 8-729-922-37 TRANSISTOR 2SD2144S-UVW
Q116 8-729-922-37 TRANSISTOR 2SD2144S-UVW
Q201 8-729-922-37 TRANSISTOR 2SD2144S-UVW
Q202 8-729-922-37 TRANSISTOR 2SD2144S-UVW
Q203 8-729-203-06 TRANSISTOR 2SK30A-GR2
Q204 8-729-203-06 TRANSISTOR 2SK30A-GR2
Q205 8-729-203-06 TRANSISTOR 2SK30A-GR2

The components identified by
mark △ or dotted line with mark.
△ are critical for safety.
Replace only with part number
specified.

AUDIO

DOLBY S

Ref. No.	Part No.	Description	Remark
Q206	8-729-203-06	TRANSISTOR 2SK30A-GR2	
Q207	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
Q208	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
Q209	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
Q210	8-729-203-06	TRANSISTOR 2SK30A-GR2	
Q211	8-729-203-06	TRANSISTOR 2SK30A-GR2	
Q212	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
Q213	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
Q214	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
Q215	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
Q216	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
Q501	8-729-141-89	TRANSISTOR 2SD1585-LK	
Q502	8-729-141-83	TRANSISTOR 2SB1094-LK	
Q503	8-729-224-62	TRANSISTOR 2SK246-GR	
Q504	8-729-224-62	TRANSISTOR 2SK246-GR	
Q505	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q506	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q507	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q508	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q509	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
Q510	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
Q511	8-729-900-89	TRANSISTOR DTC144ES	
Q514	8-729-900-89	TRANSISTOR DTC144ES	
Q515	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
Q516	8-729-922-37	TRANSISTOR 2SD2144S-UVW	
Q519	8-729-900-61	TRANSISTOR DTA114ES	
Q520	8-729-900-89	TRANSISTOR DTC144ES	
Q521	8-729-900-61	TRANSISTOR DTA114ES	
Q522	8-729-900-80	TRANSISTOR DTC114ES	
Q523	8-729-900-80	TRANSISTOR DTC114ES	
Q524	8-729-900-80	TRANSISTOR DTC114ES	
Q525	8-729-900-80	TRANSISTOR DTC114ES	
Q526	8-729-281-52	TRANSISTOR 2SC1815-Y	
Q527	8-729-194-57	TRANSISTOR 2SC945-P	
Q528	8-729-194-57	TRANSISTOR 2SC945-P	
< RESISTOR >			
R1	1-216-013-00	METAL CHIP 33 5% 1/10W	
R2	1-216-675-11	METAL CHIP 10K 0.5% 1/10W	
R3	1-216-681-11	METAL CHIP 18K 0.5% 1/10W	
R4	1-218-774-11	METAL CHIP 820K 0.5% 1/10W	
R5	1-216-668-11	METAL CHIP 5.1K 0.5% 1/10W	
R6	1-216-656-11	METAL CHIP 1.6K 0.5% 1/10W	
R7	1-216-657-11	METAL CHIP 1.8K 0.5% 1/10W	
R8	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R9	1-216-058-00	METAL GLAZE 2.4K 5% 1/10W	
R10	1-216-654-11	METAL CHIP 1.3K 0.5% 1/10W	
R11	1-216-013-00	METAL CHIP 33 5% 1/10W	
R12	1-216-017-00	METAL CHIP 47 5% 1/10W	

Ref. No.	Part No.	Description	Remark
R13	1-216-051-00	METAL CHIP 1.2K 5% 1/10W	
R14	1-216-065-00	METAL CHIP 4.7K 5% 1/10W	
R15	1-216-058-00	METAL GLAZE 2.4K 5% 1/10W	
R16	1-216-013-00	METAL CHIP 33 5% 1/10W	
R17	1-216-017-00	METAL CHIP 47 5% 1/10W	
R18	1-216-055-00	METAL CHIP 1.8K 5% 1/10W	
R19	1-216-656-11	METAL CHIP 1.6K 0.5% 1/10W	
R20	1-216-668-11	METAL CHIP 5.1K 0.5% 1/10W	
R21	1-218-774-11	METAL CHIP 820K 0.5% 1/10W	
R22	1-216-655-11	METAL CHIP 1.5K 0.5% 1/10W	
R23	1-216-678-11	METAL CHIP 13K 0.5% 1/10W	
R24	1-216-673-11	METAL CHIP 8.2K 0.5% 1/10W	
R25	1-216-675-11	METAL CHIP 10K 0.5% 1/10W	
R26	1-216-676-11	METAL CHIP 11K 0.5% 1/10W	
R27	1-216-668-11	METAL CHIP 5.1K 0.5% 1/10W	
R28	1-216-697-11	METAL CHIP 82K 0.5% 1/10W	
R29	1-216-668-11	METAL CHIP 5.1K 0.5% 1/10W	
R30	1-216-660-11	METAL CHIP 2.4K 0.5% 1/10W	
R31	1-216-680-11	METAL CHIP 16K 0.5% 1/10W	
R32	1-216-685-11	METAL CHIP 27K 0.5% 1/10W	
R33	1-216-080-00	METAL CHIP 20K 5% 1/10W	
R34	1-216-684-11	METAL CHIP 24K 0.5% 1/10W	
R35	1-216-084-00	METAL CHIP 30K 5% 1/10W	
R36	1-216-084-00	METAL CHIP 30K 5% 1/10W	
R37	1-216-074-00	METAL CHIP 11K 5% 1/10W	
R38	1-216-086-00	METAL GLAZE 36K 5% 1/10W	
R39	1-216-066-00	METAL CHIP 5.1K 5% 1/10W	
R40	1-216-084-00	METAL CHIP 30K 5% 1/10W	
R41	1-216-078-00	METAL GLAZE 16K 5% 1/10W	
R42	1-216-071-00	METAL CHIP 8.2K 5% 1/10W	
R43	1-216-081-00	METAL CHIP 22K 5% 1/10W	
R44	1-216-689-11	METAL CHIP 39K 0.5% 1/10W	
R45	1-216-689-11	METAL CHIP 39K 0.5% 1/10W	
R51	1-216-669-11	METAL CHIP 5.6K 0.5% 1/10W	
R52	1-216-663-11	METAL CHIP 3.3K 0.5% 1/10W	
R55	1-216-658-11	METAL CHIP 2K 0.5% 1/10W	
R101	1-259-476-11	CARBON 100K 5% 1/6W	
R102	1-247-702-11	CARBON 150 5% 1/4W	
R103	1-247-722-11	CARBON 5.6K 5% 1/4W	
R104	1-249-603-11	CARBON 130K 5% 1/4W	
R105	1-259-468-11	CARBON 47K 5% 1/6W	
R106	1-247-717-11	CARBON 2.2K 5% 1/4W	
R107	1-259-435-11	CARBON 2K 5% 1/6W	
R108	1-249-429-11	CARBON 10K 5% 1/4W	
R109	1-259-436-11	CARBON 2.2K 5% 1/6W	
R110	1-259-468-11	CARBON 47K 5% 1/6W	
R111	1-247-710-11	CARBON 560 5% 1/4W	
R112	1-247-725-11	CARBON 10K 5% 1/4W	
R113	1-247-719-11	CARBON 3.3K 5% 1/4W	

AUDIO**DOLBY S**

Ref. No.	Part No.	Description	Remark		
R114	1-247-719-11	CARBON	3. 3K	5%	1/4W
R115	1-259-500-11	CARBON	1M	5%	1/6W
R116	1-259-422-11	CARBON	560	5%	1/6W
R117	1-259-460-11	CARBON	22K	5%	1/6W
R118	1-259-449-11	CARBON	7. 5K	5%	1/6W
R119	1-259-424-11	CARBON	680	5%	1/6W
R120	1-259-451-11	CARBON	9. 1K	5%	1/6W
R121	1-249-429-11	CARBON	10K	5%	1/4W
R122	1-249-940-11	CARBON	5. 1K	1%	1/4W
R123	1-247-721-11	CARBON	4. 7K	5%	1/4W
R124	1-249-949-11	CARBON	12K	1%	1/4W
R125	1-247-715-11	CARBON	1. 5K	5%	1/4W
R126	1-247-715-11	CARBON	1. 5K	5%	1/4W
R127	1-249-913-11	CARBON	390	1%	1/4W
R128	1-259-468-11	CARBON	47K	5%	1/6W
R129	1-247-716-11	CARBON	1. 8K	5%	1/4W
R130	1-249-421-11	CARBON	2. 2K	5%	1/4W
R131	1-259-468-11	CARBON	47K	5%	1/6W
R132	1-259-452-11	CARBON	10K	5%	1/6W
R133	1-215-441-00	METAL	6. 8K	1%	1/6W
R134	1-215-465-00	METAL	68K	1%	1/6W
R135	1-215-448-00	METAL	13K	1%	1/6W
R136	1-215-471-00	METAL	120K	1%	1/6W
R137	1-215-403-00	METAL	180	1%	1/6W
R138	1-215-473-00	METAL	150K	1%	1/6W
R139	1-259-468-11	CARBON	47K	5%	1/6W
R140	1-249-433-11	CARBON	22K	5%	1/4W
R141	1-249-417-11	CARBON	1K	5%	1/4W
R142	1-249-437-11	CARBON	47K	5%	1/4W
R143	1-249-427-11	CARBON	6. 8K	5%	1/4W
R144	1-259-452-11	CARBON	10K	5%	1/6W
R145	1-259-440-11	CARBON	3. 3K	5%	1/6W
R146	1-259-460-11	CARBON	22K	5%	1/6W
R147	1-247-704-11	CARBON	220	5%	1/4W
R148	1-247-713-11	CARBON	1K	5%	1/4W
R149	1-249-461-11	CARBON	18K	5%	1/4W
R150	1-259-476-11	CARBON	100K	5%	1/6W
R151	1-259-448-11	CARBON	6. 8K	5%	1/6W
R152	1-259-442-11	CARBON	3. 9K	5%	1/6W
R153	1-259-449-11	CARBON	7. 5K	5%	1/6W
R154	1-259-468-11	CARBON	47K	5%	1/6W
R155	1-259-468-11	CARBON	47K	5%	1/6W
R156	1-247-128-00	CARBON	750	5%	1/4W
R157	1-247-725-11	CARBON	10K	5%	1/4W
R158	1-247-719-11	CARBON	3. 3K	5%	1/4W
R159	1-247-719-11	CARBON	3. 3K	5%	1/4W
R160	1-259-500-11	CARBON	1M	5%	1/6W
R161	1-259-422-11	CARBON	560	5%	1/6W
R162	1-259-460-11	CARBON	22K	5%	1/6W

Ref. No.	Part No.	Description	Remark		
R163	1-259-449-11	CARBON	7. 5K	5%	1/6W
R164	1-259-424-11	CARBON	680	5%	1/6W
R165	1-259-451-11	CARBON	9. 1K	5%	1/6W
R166	1-259-476-11	CARBON	100K	5%	1/6W
R167	1-249-429-11	CARBON	10K	5%	1/4W
R168	1-247-193-00	CARBON	22K	1%	1/4W
R169	1-247-193-00	CARBON	22K	1%	1/4W
R170	1-247-719-11	CARBON	3. 3K	5%	1/4W
R171	1-249-941-11	CARBON	5. 6K	1%	1/4W
R172	1-259-476-11	CARBON	100K	5%	1/6W
R173	1-259-444-11	CARBON	4. 7K	5%	1/6W
R174	1-259-450-11	CARBON	8. 2K	5%	1/6W
R175	1-247-725-11	CARBON	10K	5%	1/4W
R176	1-259-444-11	CARBON	4. 7K	5%	1/6W
R177	1-259-500-11	CARBON	1M	5%	1/6W
R178	1-259-460-11	CARBON	22K	5%	1/6W
R179	1-259-440-11	CARBON	3. 3K	5%	1/6W
R180	1-259-448-11	CARBON	6. 8K	5%	1/6W
R181	1-249-421-11	CARBON	2. 2K	5%	1/4W
R182	1-259-461-11	CARBON	24K	5%	1/6W
R183	1-249-429-11	CARBON	10K	5%	1/4W
R184	1-259-468-11	CARBON	47K	5%	1/6W
R185	1-259-436-11	CARBON	2. 2K	5%	1/6W
R186	1-259-476-11	CARBON	100K	5%	1/6W
R187	1-259-469-11	CARBON	51K	5%	1/6W
R188	1-249-782-11	CARBON	150	5%	1/6W
R190	1-249-782-11	CARBON	150	5%	1/6W
R191	1-259-450-11	CARBON	8. 2K	5%	1/6W
R192	1-259-445-11	CARBON	5. 1K	5%	1/6W
R193	1-259-407-91	CARBON	130	5%	1/6W
R194	1-259-444-11	CARBON	4. 7K	5%	1/6W
R195	1-259-442-11	CARBON	3. 9K	5%	1/6W
R196	1-249-429-11	CARBON	10K	5%	1/4W
R197	1-249-429-11	CARBON	10K	5%	1/4W
R198	1-249-429-11	CARBON	10K	5%	1/4W
R199	1-247-721-11	CARBON	4. 7K	5%	1/4W
R201	1-259-476-11	CARBON	100K	5%	1/6W
R202	1-247-702-11	CARBON	150	5%	1/4W
R203	1-247-722-11	CARBON	5. 6K	5%	1/4W
R204	1-249-603-11	CARBON	130K	5%	1/4W
R205	1-259-468-11	CARBON	47K	5%	1/6W
R206	1-247-717-11	CARBON	2. 2K	5%	1/4W
R207	1-259-435-11	CARBON	2K	5%	1/6W
R208	1-249-429-11	CARBON	10K	5%	1/4W
R209	1-259-436-11	CARBON	2. 2K	5%	1/6W
R210	1-259-468-11	CARBON	47K	5%	1/6W
R211	1-247-710-11	CARBON	560	5%	1/4W
R212	1-247-725-11	CARBON	10K	5%	1/4W
R213	1-247-719-11	CARBON	3. 3K	5%	1/4W

AUDIO

DOLBY S

Ref. No.	Part No.	Description	Remark		
R214	1-247-719-11	CARBON	3.3K	5%	1/4W
R215	1-259-500-11	CARBON	1M	5%	1/6W
R216	1-259-422-11	CARBON	560	5%	1/6W
R217	1-259-460-11	CARBON	22K	5%	1/6W
R218	1-259-449-11	CARBON	7.5K	5%	1/6W
R219	1-259-424-11	CARBON	680	5%	1/6W
R220	1-259-451-11	CARBON	9.1K	5%	1/6W
R221	1-249-429-11	CARBON	10K	5%	1/4W
R222	1-249-940-11	CARBON	5.1K	1%	1/4W
R223	1-247-721-11	CARBON	4.7K	5%	1/4W
R224	1-249-949-11	CARBON	12K	1%	1/4W
R225	1-247-715-11	CARBON	1.5K	5%	1/4W
R226	1-247-715-11	CARBON	1.5K	5%	1/4W
R227	1-249-913-11	CARBON	390	1%	1/4W
R228	1-259-468-11	CARBON	47K	5%	1/6W
R229	1-247-716-11	CARBON	1.8K	5%	1/4W
R230	1-249-421-11	CARBON	2.2K	5%	1/4W
R231	1-259-468-11	CARBON	47K	5%	1/6W
R232	1-259-452-11	CARBON	10K	5%	1/6W
R233	1-215-441-00	METAL	6.8K	1%	1/6W
R234	1-215-465-00	METAL	68K	1%	1/6W
R235	1-215-448-00	METAL	13K	1%	1/6W
R236	1-215-471-00	METAL	120K	1%	1/6W
R237	1-215-403-00	METAL	180	1%	1/6W
R238	1-215-473-00	METAL	150K	1%	1/6W
R239	1-259-468-11	CARBON	47K	5%	1/6W
R240	1-249-433-11	CARBON	22K	5%	1/4W
R241	1-249-417-11	CARBON	1K	5%	1/4W
R242	1-249-437-11	CARBON	47K	5%	1/4W
R243	1-249-427-11	CARBON	6.8K	5%	1/4W
R244	1-259-452-11	CARBON	10K	5%	1/6W
R245	1-259-440-11	CARBON	3.3K	5%	1/6W
R246	1-259-460-11	CARBON	22K	5%	1/6W
R247	1-247-704-11	CARBON	220	5%	1/4W
R248	1-247-713-11	CARBON	1K	5%	1/4W
R249	1-249-461-11	CARBON	18K	5%	1/4W
R250	1-259-476-11	CARBON	100K	5%	1/6W
R251	1-259-448-11	CARBON	6.8K	5%	1/6W
R252	1-259-442-11	CARBON	3.9K	5%	1/6W
R253	1-259-449-11	CARBON	7.5K	5%	1/6W
R254	1-259-468-11	CARBON	47K	5%	1/6W
R255	1-259-468-11	CARBON	47K	5%	1/6W
R256	1-247-128-00	CARBON	750	5%	1/4W
R257	1-247-725-11	CARBON	10K	5%	1/4W
R258	1-247-719-11	CARBON	3.3K	5%	1/4W
R259	1-247-719-11	CARBON	3.3K	5%	1/4W
R260	1-259-500-11	CARBON	1M	5%	1/6W
R261	1-259-422-11	CARBON	560	5%	1/6W
R262	1-259-460-11	CARBON	22K	5%	1/6W

Ref. No.	Part No.	Description	Remark		
R263	1-259-449-11	CARBON	7.5K	5%	1/6W
R264	1-259-424-11	CARBON	680	5%	1/6W
R265	1-259-451-11	CARBON	9.1K	5%	1/6W
R266	1-259-476-11	CARBON	100K	5%	1/6W
R267	1-249-429-11	CARBON	10K	5%	1/4W
R268	1-247-193-00	CARBON	22K	1%	1/4W
R269	1-247-193-00	CARBON	22K	1%	1/4W
R270	1-247-719-11	CARBON	3.3K	5%	1/4W
R271	1-249-941-11	CARBON	5.6K	1%	1/4W
R272	1-259-476-11	CARBON	100K	5%	1/6W
R273	1-259-444-11	CARBON	4.7K	5%	1/6W
R274	1-259-450-11	CARBON	8.2K	5%	1/6W
R275	1-247-725-11	CARBON	10K	5%	1/4W
R276	1-259-444-11	CARBON	4.7K	5%	1/6W
R277	1-259-500-11	CARBON	1M	5%	1/6W
R278	1-259-460-11	CARBON	22K	5%	1/6W
R279	1-259-440-11	CARBON	3.3K	5%	1/6W
R280	1-259-448-11	CARBON	6.8K	5%	1/6W
R281	1-249-421-11	CARBON	2.2K	5%	1/4W
R282	1-259-461-11	CARBON	24K	5%	1/6W
R283	1-249-429-11	CARBON	10K	5%	1/4W
R284	1-259-468-11	CARBON	47K	5%	1/6W
R285	1-259-436-11	CARBON	2.2K	5%	1/6W
R286	1-259-476-11	CARBON	100K	5%	1/6W
R287	1-259-469-11	CARBON	51K	5%	1/6W
R288	1-249-782-11	CARBON	150	5%	1/6W
R290	1-249-782-11	CARBON	150	5%	1/6W
R291	1-259-450-11	CARBON	8.2K	5%	1/6W
R292	1-259-445-11	CARBON	5.1K	5%	1/6W
R293	1-259-407-91	CARBON	130	5%	1/6W
R294	1-259-444-11	CARBON	4.7K	5%	1/6W
R295	1-259-442-11	CARBON	3.9K	5%	1/6W
R296	1-249-429-11	CARBON	10K	5%	1/4W
R297	1-249-429-11	CARBON	10K	5%	1/4W
R298	1-249-429-11	CARBON	10K	5%	1/4W
R299	1-247-721-11	CARBON	4.7K	5%	1/4W
R301	1-249-435-11	CARBON	33K	5%	1/4W
R302	1-249-426-11	CARBON	5.6K	5%	1/4W
R303	1-247-883-00	CARBON	150K	5%	1/4W
△R304	1-212-857-00	FUSIBLE	10	5%	1/4W F
R307	1-259-440-11	CARBON	3.3K	5%	1/6W
R308	1-259-468-11	CARBON	47K	5%	1/6W
R309	1-249-962-11	CARBON	43K	1%	1/4W
R310	1-259-468-11	CARBON	47K	5%	1/6W
R401	1-249-435-11	CARBON	33K	5%	1/4W
R402	1-249-426-11	CARBON	5.6K	5%	1/4W
R403	1-247-883-00	CARBON	150K	5%	1/4W
△R404	1-212-857-00	FUSIBLE	10	5%	1/4W F
R407	1-259-440-11	CARBON	3.3K	5%	1/6W

The components identified by
mark △ or dotted line with mark
△ are critical for safety.
Replace only with part number
specified.

AUDIO

DOLBY S

Ref.No.	Part No.	Description	Remark
R408	1-259-468-11	CARBON	47K 5% 1/6W
R409	1-249-962-11	CARBON	43K 1% 1/4W
R410	1-259-468-11	CARBON	47K 5% 1/6W
R501	1-247-704-11	CARBON	220 5% 1/4W
R502	1-247-704-11	CARBON	220 5% 1/4W
R503	1-247-717-11	CARBON	2.2K 5% 1/4W
R504	1-247-717-11	CARBON	2.2K 5% 1/4W
R505	1-247-717-11	CARBON	2.2K 5% 1/4W
R507	1-247-706-11	CARBON	330 5% 1/4W
R508	1-249-926-11	CARBON	1.3K 5% 1/4W
R509	1-249-556-11	CARBON	1.5K 5% 1/4W
R510	1-249-556-11	CARBON	1.5K 5% 1/4W
R511	1-249-433-11	CARBON	22K 5% 1/4W
R512	1-249-437-11	CARBON	47K 5% 1/4W
R513	1-249-433-11	CARBON	22K 5% 1/4W
R514	1-249-429-11	CARBON	10K 5% 1/4W
R515	1-215-472-00	METAL	130K 1% 1/6W
R516	1-249-429-11	CARBON	10K 5% 1/4W
R517	1-249-437-11	CARBON	47K 5% 1/4W
R518	1-249-417-11	CARBON	1K 5% 1/4W
R519	1-247-885-00	CARBON	180K 5% 1/4W
R520	1-249-433-11	CARBON	22K 5% 1/4W
R521	1-249-413-11	CARBON	470 5% 1/4W
R522	1-249-413-11	CARBON	470 5% 1/4W
R523	1-249-432-11	CARBON	18K 5% 1/4W
R524	1-249-433-11	CARBON	22K 5% 1/4W
R527	1-249-433-11	CARBON	22K 5% 1/4W
R528	1-249-421-11	CARBON	2.2K 5% 1/4W
R530	1-249-429-11	CARBON	10K 5% 1/4W
R531	1-249-433-11	CARBON	22K 5% 1/4W
R532	1-249-437-11	CARBON	47K 5% 1/4W
R533	1-247-856-00	CARBON	11K 5% 1/4W
R534	1-249-397-11	CARBON	22 5% 1/4W
R535	1-249-406-11	CARBON	120 5% 1/4W
R536	1-247-856-00	CARBON	11K 5% 1/4W
R537	1-249-437-11	CARBON	47K 5% 1/4W
R538	1-249-432-11	CARBON	18K 5% 1/4W
R539	1-249-397-11	CARBON	22 5% 1/4W
R540	1-249-406-11	CARBON	120 5% 1/4W
R541	1-249-432-11	CARBON	18K 5% 1/4W
R542	1-247-887-00	CARBON	220K 5% 1/4W
R543	1-247-887-00	CARBON	220K 5% 1/4W
R544	1-249-407-11	CARBON	150 5% 1/4W
R547	1-249-437-11	CARBON	47K 5% 1/4W
R548	1-249-429-11	CARBON	10K 5% 1/4W
R549	1-249-437-11	CARBON	47K 5% 1/4W
R550	1-249-437-11	CARBON	47K 5% 1/4W
R551	1-249-437-11	CARBON	47K 5% 1/4W
R552	1-249-421-11	CARBON	2.2K 5% 1/4W

Ref.No.	Part No.	Description	Remark
R553	1-249-441-11	CARBON	100K 5% 1/4W
R554	1-249-413-11	CARBON	470 5% 1/4W
R555	1-249-417-11	CARBON	1K 5% 1/4W
R556	1-249-421-11	CARBON	2.2K 5% 1/4W
R557	1-249-417-11	CARBON	1K 5% 1/4W
R558	1-249-421-11	CARBON	2.2K 5% 1/4W
R560	1-249-433-11	CARBON	22K 5% 1/4W
R561	1-249-427-11	CARBON	6.8K 5% 1/4W
R562	1-249-440-11	CARBON	82K 5% 1/4W
R563	1-249-440-11	CARBON	82K 5% 1/4W
△R564	1-212-853-00	FUSIBLE	6.8 5% 1/4W F
△R565	1-212-853-00	FUSIBLE	6.8 5% 1/4W F
R566	1-249-381-11	CARBON	1 5% 1/4W
R567	1-249-437-11	CARBON	47K 5% 1/4W
R568	1-215-472-00	METAL	130K 1% 1/6W
R569	1-249-429-11	CARBON	10K 5% 1/4W
R570	1-249-429-11	CARBON	10K 5% 1/4W
< VARIABLE RESISTOR >			
RV101	1-237-192-11	RES, ADJ, CARBON 5K	
RV102	1-241-631-11	RES, ADJ, CARBON 22K	
RV103	1-237-192-11	RES, ADJ, CARBON 5K	
RV104	1-241-631-11	RES, ADJ, CARBON 22K	
RV201	1-237-192-11	RES, ADJ, CARBON 5K	
RV202	1-241-631-11	RES, ADJ, CARBON 22K	
RV203	1-237-192-11	RES, ADJ, CARBON 5K	
RV204	1-241-631-11	RES, ADJ, CARBON 22K	
RV501	1-223-264-11	RES, VAR, CARBON 50K/50K (BALANCE)	
RV502	1-223-265-11	RES, VAR, CARBON 20K/20K (REC LEVEL)	
RV503	1-238-840-21	RES, VAR, CARBON 5K/5K (CAL REC LEVEL)	
RV504	1-241-336-11	RES, VAR, CARBON 20K/20K (PHONE LEVEL)	
RV505	1-241-631-11	RES, ADJ, CARBON 22K	
RV506	1-241-629-11	RES, ADJ, CARBON 4.7K	
RV507	1-238-009-11	RES, ADJ, CARBON 220	
RV508	1-238-009-11	RES, ADJ, CARBON 220	
< SWITCH >			
S501	1-692-375-11	SWITCH, PUSH (1 KEY) (DIRECT)	
S502	1-572-589-11	SWITCH, ROTARY (REC EQ CAL)	
< TRANSFORMER >			
T101	1-433-384-11	TRANSFORMER, BIAS OSCILLATOR	
T201	1-433-384-11	TRANSFORMER, BIAS OSCILLATOR	
T501	1-433-359-11	TRANSFORMER, BIAS OSCILLATION	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

AUDIO

DOLBY S

CAPSTAN

COMPARATOR

MD

Ref. No.	Part No.	Description	Remark			
< TEST PIN >						
* TP501	1-564-506-11	PLUG, CONNECTOR 3P				
* TP502	1-564-506-11	PLUG, CONNECTOR 3P				
* TP503	1-564-505-41	PLUG, CONNECTOR 2P				

A-2006-154-A CAPSTAN BOARD, COMPLETE						

< CAPACITOR >						
C905	1-124-779-00	ELECT CHIP	10uF	20%	16V	
C906	1-135-091-00	TANTALUM CHIP	1uF	20%	16V	
C907	1-163-077-00	CERAMIC CHIP	0. 1uF	10%	25V	
C908	1-163-077-00	CERAMIC CHIP	0. 1uF	10%	25V	
C909	1-163-077-00	CERAMIC CHIP	0. 1uF	10%	25V	
C910	1-163-205-00	CERAMIC CHIP	0. 001uF	5%	50V	
C911	1-124-779-00	ELECT CHIP	10uF	20%	16V	
< HOLE ELEMENT >						
H901	8-759-100-96	HOLE ELEMENT	uPC4558G2			
H902	8-759-100-96	HOLE ELEMENT	uPC4558G2			
H903	8-759-100-96	HOLE ELEMENT	uPC4558G2			
< IC >						
IC902	8-752-017-40	IC	CX20174			
< JUMPER RESISTOR >						
JR902	1-216-296-00	METAL CHIP	0	5%	1/8W	
JR903	1-216-296-00	METAL CHIP	0	5%	1/8W	
JR904	1-216-296-00	METAL CHIP	0	5%	1/8W	
JR905	1-216-296-00	METAL CHIP	0	5%	1/8W	
< RESISTOR >						
R907	1-216-242-00	METAL GLAZE	68K	5%	1/8W	
R908	1-216-246-00	METAL GLAZE	100K	5%	1/8W	
R909	1-216-246-00	METAL GLAZE	100K	5%	1/8W	
R910	1-216-238-00	METAL GLAZE	47K	5%	1/8W	
R911	1-216-182-00	METAL GLAZE	220	5%	1/8W	
R912	1-216-182-00	METAL GLAZE	220	5%	1/8W	
R913	1-216-150-00	METAL GLAZE	10	5%	1/8W	
R914	1-216-150-00	METAL GLAZE	10	5%	1/8W	
R915	1-216-150-00	METAL GLAZE	10	5%	1/8W	

*	1-632-746-11	COMPARATOR BOARD				

< CAPACITOR >						
C951	1-136-157-00	FILM	0. 022uF	5%	50V	

Ref. No.	Part No.	Description	Remark			
C952	1-124-282-00	ELECT	22uF	20%	25V	
C953	1-124-478-11	ELECT	100uF	20%	25V	
C954	1-124-477-11	ELECT	47uF	20%	25V	
C955	1-162-203-31	CERAMIC	15PF	5%	50V	
C956	1-162-203-31	CERAMIC	15PF	5%	50V	
C957	1-136-159-00	FILM	0.033uF	5%	50V	
< CONNECTOR >						
* CN951	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P				
* CN952	1-564-518-11	PLUG, CONNECTOR 3P				
< IC >						
IC951	8-759-145-58	IC uPC4558C				
IC952	8-759-201-58	IC TC9142P				
< RESISTOR >						
R951	1-249-413-11	CARBON	470	5%	1/4W	
R952	1-249-413-11	CARBON	470	5%	1/4W	
R953	1-247-881-00	CARBON	120K	5%	1/4W	
R954	1-247-881-00	CARBON	120K	5%	1/4W	
R955	1-249-429-11	CARBON	10K	5%	1/4W	
R956	1-249-417-11	CARBON	1K	5%	1/4W	
R957	1-249-417-11	CARBON	1K	5%	1/4W	
R958	1-247-891-00	CARBON	330K	5%	1/4W	
R959	1-247-901-11	CARBON	820K	5%	1/4W	
R960	1-249-441-11	CARBON	100K	5%	1/4W	
< VIBRATOR >						
X951	1-577-615-11	VIBRATOR, CRYSTAL (4.9406MHz)				

* 1-632-740-11 MD BOARD						

3-356-631-01 HOLDER (SENSOR)						
< CONNECTOR >						
CN1001	1-506-615-11	PIN, CONNECTOR 9P				
CN1002	1-564-501-11	PIN, CONNECTOR 8P				
< PHOTO INTERRUPTER >						
IC1001	8-749-920-97	PHOTO INTERRUPTER GP2S22B				
IC1002	8-749-920-97	PHOTO INTERRUPTER GP2S22B				
< RESISTOR >						
R1001	1-249-408-11	CARBON	180	5%	1/4W	
R1002	1-249-408-11	CARBON	180	5%	1/4W	

MD

REEL MOTOR

SYSTEM CONTROL

Ref. No.	Part No.	Description	Remark
< SWITCH >			
S1002	1-570-953-11	SWITCH, PUSH (1 KEY) (DOOR)	
S1003	1-571-958-11	SWITCH, PUSH (1 KEY) (CLOSE)	
S1004	1-572-126-11	SWITCH, PUSH (1 KEY) (OPEN)	
S1005	1-572-125-11	SWITCH, LEAF (FWD TAB)	
S1006	1-572-202-11	SWITCH, LEAF (HALF)	
S1007	1-572-125-11	SWITCH, LEAF (METAL)	
S1008	1-572-125-11	SWITCH, LEAF (70u)	
< TERMINAL >			
* TB1001	1-694-018-11	TERMINAL (5P)	

* 1-632-741-11	REEL MOTOR BOARD		

< CAPACITOR >			
C1051	1-124-907-11	ELECT 10uF	20% 50V
C1052	1-124-907-11	ELECT 10uF	20% 50V
C1053	1-164-159-11	CERAMIC 0.1uF	50V
< CONNECTOR >			
* CN1051	1-564-499-11	PIN, CONNECTOR 6P	
* CN1052	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P	
* CN1053	1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P	
< MOTOR >			
M1001	X-3356-638-1	MOTOR (REEL R) ASSY	
M1002	X-3356-604-1	MOTOR (ASSIST) ASSY	
< RESISTOR >			
R1051	1-249-412-11	CARBON 390 5% 1/4W	

* A-2007-027-A	SYSTEM CONTROL BOARD, COMPLETE		

* 1-533-213-11	HOLDER, FUSE		
* 1-533-213-31	HOLDER, FUSE		
* 3-309-144-31	HEAT SINK		
* 9-911-844-XX	CUSHION		
* 3-356-925-01	HEAT SINK		
* 3-362-478-11	HOLDER (T), LED		
* 3-385-607-01	HOLDER, FL TUBE		
* 4-880-403-21	HEAT SINK		
* 4-942-204-01	PLATE, GROUND		
* 7-685-871-01	SCREW +BVTT 3X6 (S)		

Ref. No.	Part No.	Description	Remark
< CAPACITOR >			
C001	1-161-744-00	CERAMIC 0.01uF	400V
C601	1-124-443-00	ELECT 100uF	20% 10V
C602	1-164-159-11	CERAMIC 0.1uF	50V
C603	1-162-294-31	CERAMIC 0.001uF	10% 50V
C604	1-162-294-31	CERAMIC 0.001uF	10% 50V
C701	1-136-177-00	FILM 1uF	5% 50V
C702	1-136-165-00	FILM 0.1uF	5% 50V
C703	1-124-636-00	ELECT 3300uF	20% 25V
C704	1-124-636-00	ELECT 3300uF	20% 25V
C705	1-124-927-11	ELECT 4.7uF	20% 100V
C706	1-126-105-11	ELECT 1000uF	20% 35V
C707	1-124-887-00	ELECT 3300uF	20% 16V
C708	1-124-903-11	ELECT 1uF	20% 50V
C709	1-124-471-00	ELECT 1000uF	20% 6.3V
C710	1-124-927-11	ELECT 4.7uF	20% 100V
C711	1-124-927-11	ELECT 4.7uF	20% 100V
C712	1-162-211-31	CERAMIC 33PF	5% 50V
C713	1-124-473-11	ELECT 1000uF	20% 10V
C714	1-126-955-11	ELECT 4700uF	20% 35V
C715	1-124-927-11	ELECT 4.7uF	20% 100V
C716	1-124-556-11	ELECT 2200uF	20% 16V
C717	1-124-122-11	ELECT 100uF	20% 50V
C718	1-124-477-11	ELECT 47uF	20% 25V
C719	1-164-159-11	CERAMIC 0.1uF	50V
C801	1-124-907-11	ELECT 10uF	20% 50V
C802	1-124-927-11	ELECT 4.7uF	20% 100V
C803	1-124-443-00	ELECT 100uF	20% 10V
C804	1-124-472-11	ELECT 470uF	20% 10V
C805	1-164-159-11	CERAMIC 0.1uF	50V
C806	1-164-159-11	CERAMIC 0.1uF	50V
C807	1-124-477-11	ELECT 47uF	20% 25V
C851	1-124-234-00	ELECT 22uF	20% 16V
C852	1-124-907-11	ELECT 10uF	20% 50V
C853	1-124-925-11	ELECT 2.2uF	20% 100V
C854	1-124-927-11	ELECT 4.7uF	20% 100V

< CONNECTOR >

* CN001	1-580-230-31	PIN, CONNECTOR (PC BOARD) 2P
CN002	1-568-226-11	PIN, CONNECTOR 2P
* CN701	1-564-506-11	PLUG, CONNECTOR 3P
* CN702	1-564-511-11	PLUG, CONNECTOR 8P
* CN801	1-564-339-51	PIN, CONNECTOR 5P
* CN802	1-506-503-11	PIN, CONNECTOR 9P
* CN803	1-564-341-51	PIN, CONNECTOR 7P

SYSTEM CONTROL

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

< COMPOSITION CIRCUIT BLOCK >

CP601	1-232-881-11	COMPOSITION CIRCUIT BLOCK 100k X 6	
CP602	1-236-985-11	COMPOSITION CIRCUIT BLOCK 100k X 9	
CP801	1-236-984-11	COMPOSITION CIRCUIT BLOCK 4.7k X 11	

< DIODE >

D601	8-719-301-44	LED SEL2410E-D (PLAY)	
D602	8-719-301-61	LED SEL2910A-D (PAUSE)	
D603	8-719-301-39	LED SEL2210S-D (REC)	
D604	8-719-987-63	DIODE 1N4148M	
D605	8-719-987-63	DIODE 1N4148M	

D606	8-719-987-63	DIODE 1N4148M	
D607	8-719-987-63	DIODE 1N4148M	
D701	8-719-230-02	DIODE 30DF2	
D702	8-719-230-02	DIODE 30DF2	
D703	8-719-230-02	DIODE 30DF2	

D704	8-719-230-02	DIODE 30DF2	
D705	8-719-200-77	DIODE 10E2N	
D706	8-719-200-77	DIODE 10E2N	
D707	8-719-200-77	DIODE 10E2N	
D708	8-719-200-77	DIODE 10E2N	

D709	8-719-200-77	DIODE 10E2N	
D710	8-719-987-63	DIODE 1N4148M	
D711	8-719-933-41	DIODE HZS6C3L	
D712	8-719-933-41	DIODE HZS6C3L	
D713	8-719-200-77	DIODE 10E2N	

D714	8-719-001-79	DIODE UZL-12H1	
D715	8-719-200-77	DIODE 10E2N	
D716	8-719-200-77	DIODE 10E2N	
D717	8-719-933-41	DIODE HZS6C3L	
D801	8-719-200-77	DIODE 10E2N	

D802	8-719-987-63	DIODE 1N4148M	
D803	8-719-987-63	DIODE 1N4148M	
D804	8-719-987-63	DIODE 1N4148M	
D851	8-719-987-63	DIODE 1N4148M	
D852	8-719-987-63	DIODE 1N4148M	

D853	8-719-987-63	DIODE 1N4148M	
D855	8-719-987-63	DIODE 1N4148M	
D856	8-719-987-63	DIODE 1N4148M	
D857	8-719-987-63	DIODE 1N4148M	
D858	8-719-987-63	DIODE 1N4148M	

< FUSE >

△F701	1-532-285-00	FUSE, TIME-LAG (T1.25AL/250V)	
-------	--------------	-------------------------------	--

< FLUORESCENT INDICATOR TUBE >

FLT601	1-517-139-11	INDICATOR TUBE, FLUORESCENT	
--------	--------------	-----------------------------	--

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

< IC >

IC601	8-759-635-68	IC M50940-313SP	
IC801	8-759-635-69	IC M50964-226SP	
IC802	8-759-973-95	IC BA6219B	
IC803	8-759-822-09	IC LB1641	
IC851	8-741-100-48	IC SBX1610-59	

< TRANSISTOR >

Q601	8-729-900-61	TRANSISTOR DTA114ES	
Q602	8-729-900-61	TRANSISTOR DTA114ES	
Q603	8-729-900-61	TRANSISTOR DTA114ES	
Q604	8-729-900-61	TRANSISTOR DTA114ES	
Q605	8-729-900-61	TRANSISTOR DTA114ES	
Q606	8-729-900-61	TRANSISTOR DTA114ES	
Q607	8-729-900-65	TRANSISTOR DTA144ES	
Q608	8-729-900-65	TRANSISTOR DTA144ES	
Q609	8-729-900-65	TRANSISTOR DTA144ES	
Q610	8-729-900-65	TRANSISTOR DTA144ES	
Q611	8-729-900-65	TRANSISTOR DTA144ES	
Q612	8-729-900-65	TRANSISTOR DTA144ES	
Q613	8-729-900-89	TRANSISTOR DTC144ES	
Q614	8-729-900-65	TRANSISTOR DTA144ES	
Q701	8-729-231-60	TRANSISTOR 2SD1406-YGR	

Q702	8-729-209-15	TRANSISTOR 2SD2012	
Q703	8-729-209-15	TRANSISTOR 2SD2012	
Q704	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q705	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q706	8-729-620-05	TRANSISTOR 2SC2603-EF	

Q707	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q708	8-729-140-04	TRANSISTOR 2SB1116A-L	
Q709	8-729-141-32	TRANSISTOR 2SA1409-LK	
Q801	8-729-620-05	TRANSISTOR 2SC2603-EF	
Q802	8-729-620-05	TRANSISTOR 2SC2603-EF	

Q803	8-729-900-61	TRANSISTOR DTA114ES	
Q804	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q805	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q806	8-729-900-65	TRANSISTOR DTA144ES	
Q807	8-729-900-65	TRANSISTOR DTA144ES	

Q808	8-729-900-65	TRANSISTOR DTA144ES	
Q809	8-729-900-65	TRANSISTOR DTA144ES	
Q810	8-729-900-65	TRANSISTOR DTA144ES	
Q811	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q812	8-729-900-65	TRANSISTOR DTA144ES	

Q813	8-729-900-65	TRANSISTOR DTA144ES	
Q814	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q815	8-729-900-89	TRANSISTOR DTC144ES	
Q851	8-729-900-80	TRANSISTOR DTC114ES	
Q852	8-729-900-65	TRANSISTOR DTA144ES	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

SYSTEM CONTROL

Ref. No.	Part No.	Description	Remark
Q854	8-729-900-80	TRANSISTOR DTC114ES	
< RESISTOR >			
R601	1-249-429-11	CARBON 10K 5% 1/4W	
R602	1-249-429-11	CARBON 10K 5% 1/4W	
R603	1-249-437-11	CARBON 47K 5% 1/4W	
R604	1-247-903-00	CARBON 1M 5% 1/4W	
R605	1-249-421-11	CARBON 2.2K 5% 1/4W	
R606	1-249-421-11	CARBON 2.2K 5% 1/4W	
R607	1-249-421-11	CARBON 2.2K 5% 1/4W	
R608	1-249-421-11	CARBON 2.2K 5% 1/4W	
R609	1-249-429-11	CARBON 10K 5% 1/4W	
R610	1-249-425-11	CARBON 4.7K 5% 1/4W	
R611	1-249-422-11	CARBON 2.7K 5% 1/4W	
R612	1-249-424-11	CARBON 3.9K 5% 1/4W	
R613	1-249-428-11	CARBON 8.2K 5% 1/4W	
R614	1-249-434-11	CARBON 27K 5% 1/4W	
R615	1-249-422-11	CARBON 2.7K 5% 1/4W	
R616	1-249-424-11	CARBON 3.9K 5% 1/4W	
R617	1-249-428-11	CARBON 8.2K 5% 1/4W	
R618	1-249-434-11	CARBON 27K 5% 1/4W	
R619	1-249-431-11	CARBON 15K 5% 1/4W	
R620	1-249-434-11	CARBON 27K 5% 1/4W	
R621	1-249-409-11	CARBON 220 5% 1/4W	
R622	1-249-410-11	CARBON 270 5% 1/4W	
R623	1-249-412-11	CARBON 390 5% 1/4W	
△R701	1-212-863-00	FUSIBLE 18 5% 1/4W F	
R702	1-247-752-11	CARBON 1K 5% 1/2W	
R703	1-249-423-11	CARBON 3.3K 5% 1/4W	
R704	1-249-421-11	CARBON 2.2K 5% 1/4W	
R705	1-249-437-11	CARBON 47K 5% 1/4W	
R706	1-249-425-11	CARBON 4.7K 5% 1/4W	
R707	1-249-421-11	CARBON 2.2K 5% 1/4W	
R708	1-249-421-11	CARBON 2.2K 5% 1/4W	
R709	1-249-421-11	CARBON 2.2K 5% 1/4W	
R710	1-249-427-11	CARBON 6.8K 5% 1/4W	
R711	1-249-425-11	CARBON 4.7K 5% 1/4W	
R712	1-249-421-11	CARBON 2.2K 5% 1/4W	
R713	1-249-431-11	CARBON 15K 5% 1/4W	
R714	1-249-429-11	CARBON 10K 5% 1/4W	
R715	1-249-425-11	CARBON 4.7K 5% 1/4W	
R716	1-249-437-11	CARBON 47K 5% 1/4W	
R801	1-249-425-11	CARBON 4.7K 5% 1/4W	
R802	1-249-417-11	CARBON 1K 5% 1/4W	
R803	1-249-435-11	CARBON 33K 5% 1/4W	
R804	1-249-437-11	CARBON 47K 5% 1/4W	
R805	1-249-440-11	CARBON 82K 5% 1/4W	
R806	1-249-413-11	CARBON 470 5% 1/4W	

Ref. No.	Part No.	Description	Remark
R807	1-247-903-00	CARBON 1M 5% 1/4W	
R808	1-249-429-11	CARBON 10K 5% 1/4W	
R810	1-249-437-11	CARBON 47K 5% 1/4W	
R811	1-249-437-11	CARBON 47K 5% 1/4W	
R812	1-249-421-11	CARBON 2.2K 5% 1/4W	
R813	1-249-421-11	CARBON 2.2K 5% 1/4W	
R814	1-249-429-11	CARBON 10K 5% 1/4W	
R815	1-249-429-11	CARBON 10K 5% 1/4W	
R816	1-249-429-11	CARBON 10K 5% 1/4W	
R817	1-249-429-11	CARBON 10K 5% 1/4W	
R818	1-249-429-11	CARBON 10K 5% 1/4W	
R819	1-249-429-11	CARBON 10K 5% 1/4W	
R820	1-249-436-11	CARBON 39K 5% 1/4W	
R821	1-249-436-11	CARBON 39K 5% 1/4W	
R822	1-249-437-11	CARBON 47K 5% 1/4W	
R823	1-249-433-11	CARBON 22K 5% 1/4W	
R824	1-249-426-11	CARBON 5.6K 5% 1/4W	
R825	1-249-413-11	CARBON 470 5% 1/4W	
R826	1-249-429-11	CARBON 10K 5% 1/4W	
R827	1-249-429-11	CARBON 10K 5% 1/4W	
R828	1-249-425-11	CARBON 4.7K 5% 1/4W	
R829	1-249-425-11	CARBON 4.7K 5% 1/4W	
△R830	1-212-954-11	FUSIBLE 6.8 5% 1/2W F	
R831	1-249-427-11	CARBON 6.8K 5% 1/4W	
R832	1-249-428-11	CARBON 8.2K 5% 1/4W	
R833	1-249-428-11	CARBON 8.2K 5% 1/4W	
R834	1-249-425-11	CARBON 4.7K 5% 1/4W	
R835	1-249-425-11	CARBON 4.7K 5% 1/4W	
△R836	1-212-954-11	FUSIBLE 6.8 5% 1/2W F	
R837	1-249-429-11	CARBON 10K 5% 1/4W	
R851	1-249-431-11	CARBON 15K 5% 1/4W	
R852	1-249-437-11	CARBON 47K 5% 1/4W	
R853	1-249-437-11	CARBON 47K 5% 1/4W	
R854	1-249-429-11	CARBON 10K 5% 1/4W	
R855	1-249-429-11	CARBON 10K 5% 1/4W	
R856	1-249-437-11	CARBON 47K 5% 1/4W	
R857	1-249-429-11	CARBON 10K 5% 1/4W	
R859	1-249-437-11	CARBON 47K 5% 1/4W	
R860	1-249-429-11	CARBON 10K 5% 1/4W	

< VARIABLE RESISTOR >

RV801	1-241-629-11	RES. ADJ. CARBON 4.7K
RV851	1-223-266-11	RES. VAR. CARBON 10K (CAL BIAS)

< SWITCH >

S001	1-572-267-51	SWITCH, PUSH (AC POWER) (1 KEY) (POWER)
S601	1-554-303-21	SWITCH, TACTILE (COUNTER MEMORY)
S602	1-554-303-21	SWITCH, TACTILE (COUNTER RESET)
S603	1-554-303-21	SWITCH, TACTILE (OPEN/CLOSE △)

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

SYSTEM CONTROL

Ref. No.	Part No.	Description	Remark
S604	1-554-303-21	SWITCH, TACTILE (■)	
S605	1-554-303-21	SWITCH, TACTILE (◀◀)	
S606	1-554-303-21	SWITCH, TACTILE (▶▶)	
S607	1-554-303-21	SWITCH, TACTILE (REC ●)	
S608	1-554-303-21	SWITCH, TACTILE (▶)	
S609	1-554-303-21	SWITCH, TACTILE (PAUSE ■■)	
S610	1-554-303-21	SWITCH, TACTILE (AMS ■■)	
S611	1-554-303-21	SWITCH, TACTILE (AMS ▶▶)	
S612	1-554-303-21	SWITCH, TACTILE (REC MUTE ○)	
S613	1-571-520-11	SWITCH, SLIDE (TIMER)	
S851	1-554-303-21	SWITCH, TACTILE (MONITOR)	
S852	1-692-368-11	SWITCH, ROTARY (DOLBY NR)	
S853	1-692-376-11	SWITCH, PUSH (1 KEY) (CALIBRATION)	
S854	1-692-376-11	SWITCH, PUSH (1 KEY) (MPX FILTER)	

< TRANSFORMER >

△T901 1-423-685-11 TRANSFORMER, POWER

< TEST PIN >

* TP801 1-564-506-11 PLUG, CONNECTOR 3P

< VIBRATOR >

X601 1-577-358-21 VIBRATOR, CERAMIC (4MHz)

X801 1-577-358-21 VIBRATOR, CERAMIC (4MHz)

MISCELLANEOUS

* 53 1-590-321-61 LEAD (WITH CONNECTOR)

△57 1-575-651-21 CORD, POWER

* 147 1-608-268-00 PC BOARD, ERASE HEAD

158 1-632-779-11 PC BOARD, FG

D1001 8-719-980-85 DIODE SLF-325C

△F701 1-532-285-00 FUSE, TIME-LAG (T1.25AL/250V)

HE501 1-543-836-11 HEAD, MAGNETIC (ERASE)

HRP501 1-543-742-11 HEAD, MAGNETIC (REC/PB)

M1001 X-3356-638-1 MOTOR (REEL R) ASSY

M1002 X-3356-604-1 MOTOR (ASSIST) ASSY

S1001 1-466-238-11 ENCODER, ROTARY

△T901 1-423-685-11 TRANSFORMER, POWER

Ref. No.	Part No.	Description	Remark
		ACCESSORIES & PACKING MATERIALS	

	1-558-271-11	CORD, CONNECTION	
*	3-354-919-81	INDIVIDUAL CARTON	
*	3-366-547-01	CUSHION	
	3-704-366-01	SCREW (CASE) (M3X8)	
	3-756-186-11	MANUAL, INSTRUCTION	
		(ENGLISH, FRENCH, SPANISH, PORTUGUESE) (AEP)	
	3-756-186-41	MANUAL, INSTRUCTION	
		(GERMAN, DUTCH, SWEDISH, ITALIAN) (AEP)	
	3-756-186-51	MANUAL, INSTRUCTION (GERMAN) (German)	

HARDWARE LIST

#1	7-685-871-01	SCREW +BVTT 3X6 (S)
#2	7-682-547-09	SCREW +BV 3X6, S TIGHT
#3	7-685-133-19	SCREW +BTP 2.6X6 TYPE2 N-S
#4	7-682-147-15	SCREW, TR
#5	7-682-548-09	SCREW +BVTT 3X8 (S)
#6	7-621-849-00	SCREW (BV/RING)
#7	7-621-775-20	SCREW +B 2.6X5
#8	7-628-253-00	SCREW +PS 2X4
#9	7-621-255-20	SCREW +BVTT 2X4 (S)
#10	7-621-772-20	SCREW +B 2X5
#11	7-671-154-01	STENLESS BALL
#12	7-685-870-01	SCREW +BVTT 3X5 (S)
#13	7-621-772-70	SCREW +B 2X14
#14	7-622-205-05	NUT M2 TYPE2
#15	7-628-254-10	SCREW +PS 2.6X6
#16	7-682-648-09	SCREW +PS 3X8
#17	7-621-255-35	SCREW +BVTT 2X5 (S)
#18	7-682-548-04	SCREW +BVTT 3X8 (S)
#19	7-682-547-04	SCREW +B 3X6

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

TC-K808ES

9-957-746-11

Sony Corporation
Audio Group

— 56 —

English
93E18Y0949-1
Printed in Germany
©1993.5
Published Audio Sector Quality Assurance Dept.